



N° Réf. N° Pièce Désignation

1	11111-22D01	Head, Cylinder
2	11141-22D00	Gasket, Cylinder Head
3	04211-11129	Pin
4	08313-21087	Nut
5	08316-10087	Nut
6	11213-22D00	Stud Bolt (l:51)
7	09108-08235	Stud Bolt (l:45)
8	09168-08021	Gasket
9	09482-00472	Spark Plug (ngk,br9ecm)
9	09482-00473	Spark Plug (nd,w27emr-c)
9	09482-00470	Spark Plug (ngk,br8ecm)
9	09482-00474	Spark Plug (ngk,br10ecm)
9	09482-00471	Spark Plug (nd,w24emr-c)
9	09482-00475	Spark Plug (nd,w31emr-c)
10	11200-22812	Cylinder
11	16910-35400	• Valve, Oil Check
12	04211-11169	Pin
13	09108-08142	Stud Bolt (l:30)
14	09108-08143	Stud Bolt (l:35)
15	09108-08144	Stud Bolt (l:40)
16	08316-10087	Nut
17	11241-22D20	Gasket, Cylinder
18	11248-12C01	Cover, Cylinder
19	11238-01B30-H17	Gasket, Cylinder Cover
20	01107-05167	Bolt
21	01517-06128	Bolt, Water Drain
22	09168-06018	Gasket
23	17872-36A01	Connector, Water Hose
24	09280-20006	O Ring
25	02112-06167	Screw
26	11401-22833	Gasket Set

N° Réf. N° Pièce Désignation


1	33970-22X50	Actuator Assy, Exhaust Valve
2	01550-06303	Bolt
3	08316-10063	Nut
4	01547-06163	Bolt
5	11286-12C01	Bracket, Cable
6	11269-12C02	Pulley, Controller
11	07120-05168	Bolt
12	11250-19810	Valve Set, Exhaust Rh
12	11250-19830	Valve Set, Exhaust Rh
13	11250-19820	Valve Set, Exhaust Lh
13	11250-19840	Valve Set, Exhaust Lh
14	02142-15127	Screw
15	11263-12C01	Spacer, Exhaust Valve
16	11253-01B31	Pin, Exhaust Valve
17	09440-03010	Spring
18	11274-22D01	Retainer, Ex Valve Spring
19	11258-12C02	Shaft, Ex Valve
20	11264-00B23	Arm, Ex Valve Shaft
21	09134-06013	Screw
22	09300-08016	Bush
23	11283-12C00	Spacer, Ex Valve Shaft
24	11265-12C00	Bush, Ex Valve No.2
25	09282-08001	Oil Seal (8x16x5)
26	11259-22D01	Retainer, Oil Seal
27	02122-06127	Screw
28	09126-06011	Screw (6x12)
29	11267-12C02	Lever, Exhaust Valve
30	09125-06058	Screw
31	08211-06222	Washer
32	11285-22D00	Spring, Ex Valve Lever
33	11268-22D03	Spacer, Ex Valve Pulley
34	11266-22D01	Pulley, Ex Valve
35	01137-05128	Bolt
36	09160-05005	Washer
37	11276-12C02	Cable, Ex Valve Front Rh
38	11278-12C00	Cable, Ex Valve Front Lh
39	11277-22D01	Cable, Ex Valve Rear Rh
40	11279-22D01	Cable, Ex Valve Rear Lh
41	11284-12C00	Stopper, Cable
42	11275-22D01	Guide, Ex Valve Cable
43	09404-06403	Clamp, Actuator Lead Wire

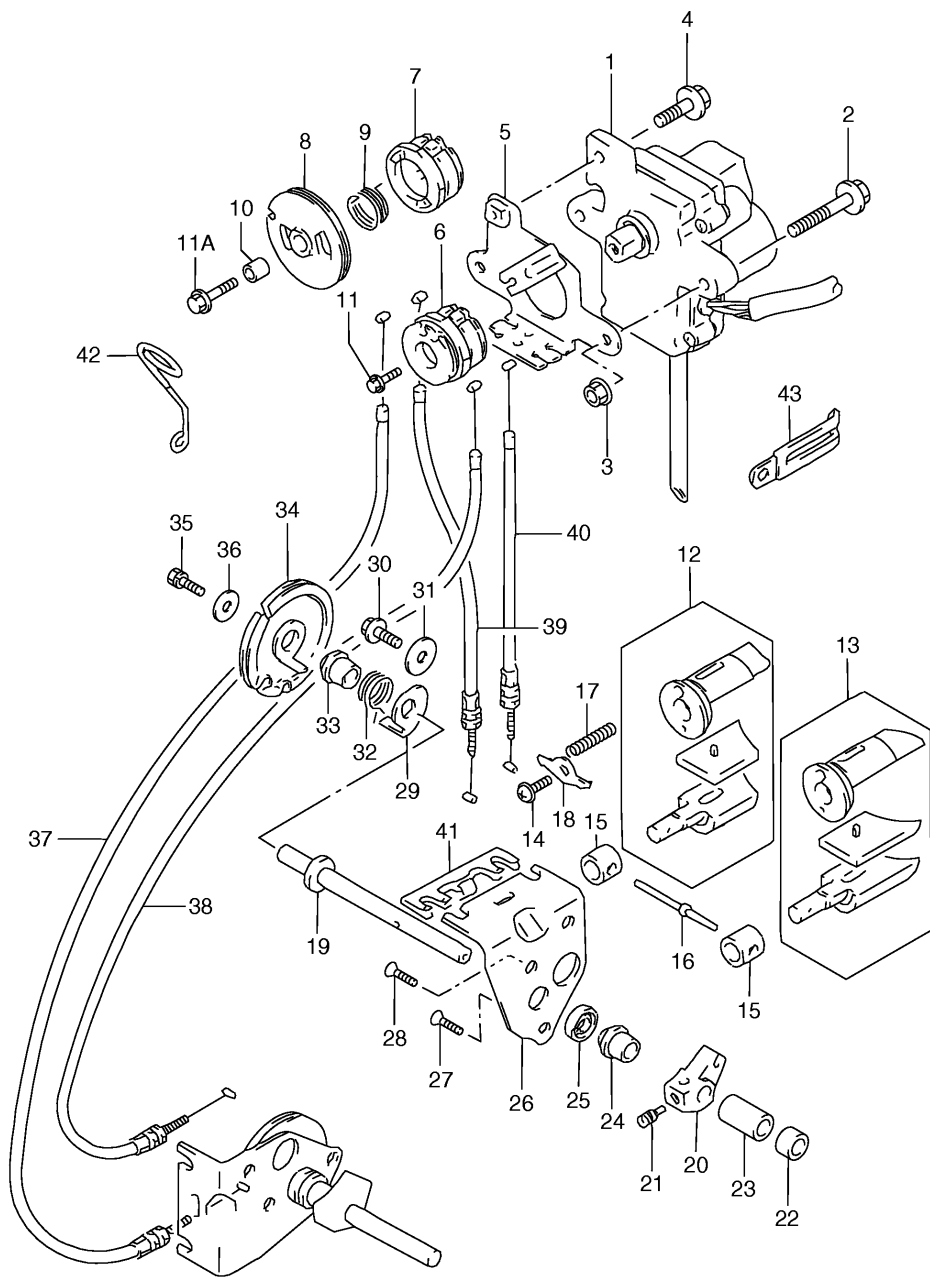


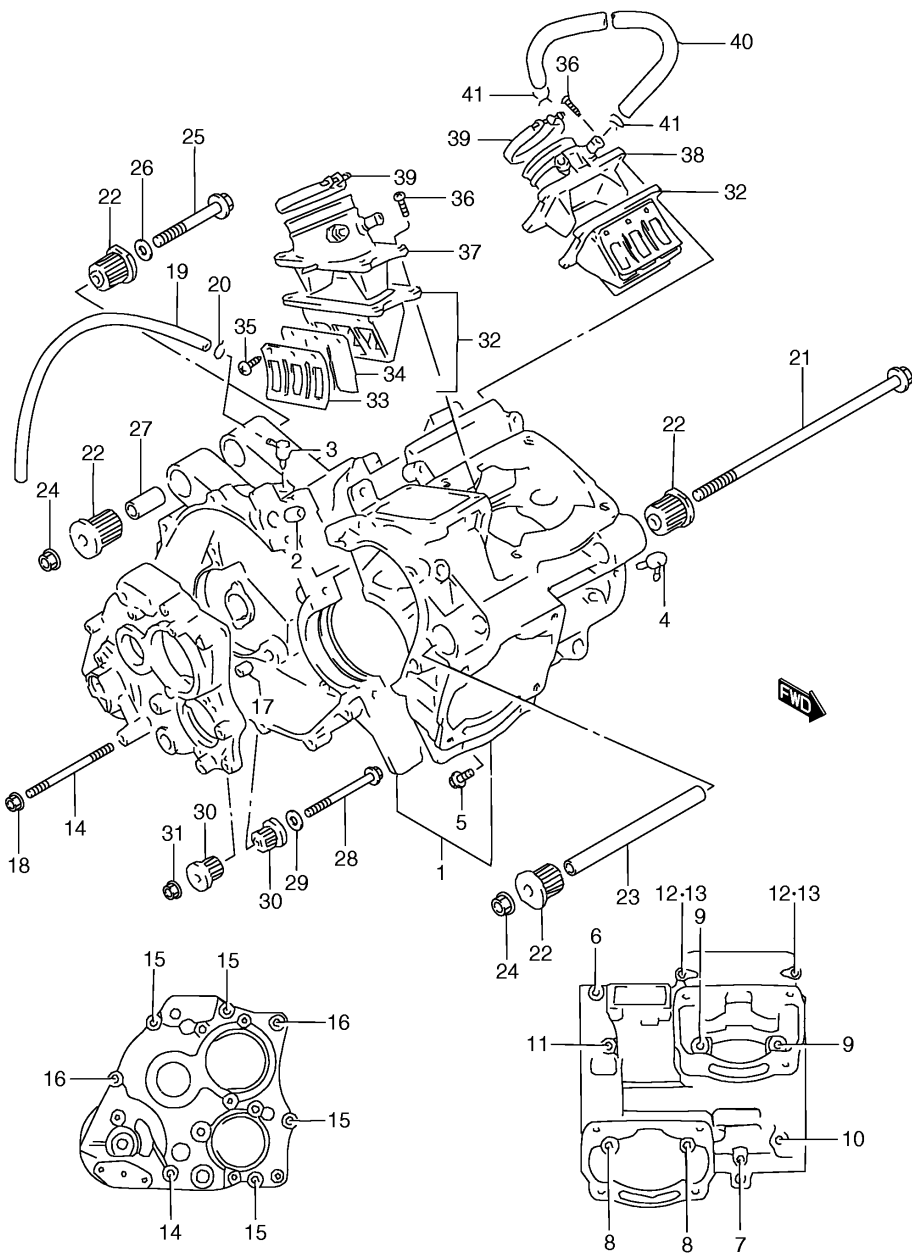


N° Réf.	N° Pièce	Désignation
1	11301-22830	Crankcase Set
2	09206-13004	. Pin
3	16910-09401	. Union, Breather Hose
4	16910-35400	. Check Valve, Oil Hose
5	01517-06257	. Bolt
6	01517-06408	. Bolt
7	01517-06508	. Bolt
8	07110-08358	. Bolt
9	07110-08407	. Bolt
10	07110-08608	. Bolt
11	09106-08084	. Bolt (8x110)
12	09108-06013	. Stud Bolt (l:27)
13	09159-06017	. Nut
14	09108-06108	. Stud Bolt (l:90)
15	01421-06307	. Stud Bolt
16	01421-06408	. Stud Bolt
17	09206-11012	. Pin
18	08319-31067	. Nut
19	09354-45853-600	Hose (4.5x8.5x600)
20	09401-08301	Clip
21	09103-10205	Bolt (10x225)
22	09319-10063	Bush
23	09180-10123	Spacer
24	09159-10058	Nut
25	09100-10280	Bolt (10x130)
26	08322-11107	Washer
27	09180-10126	Spacer
28	09100-08276	Bolt (8x70)
29	08322-11088	Washer
30	09319-08037	Bush
31	08319-31087	Nut
32	13150-22D01	Valve Assy, Reed
32	13150-12C11	Valve Assy, Reed
33	13152-22D01	. Stopper, Reed Valve
33	13152-12C11	. Stopper, Read Valve
34	13153-12C10	. Valve, Reed
35	02122-03066	. Screw
36	02112-06207	Screw
37	13110-12C00	Pipe, Intake Rh
38	13120-12C00	Pipe, Intake Lh
39	09402-54306	Clamp
40	09354-90143-20B	Hose (9x14x2200)
41	09401-13301	Clip

N° Réf.	N° Pièce	Désignation
1	11341-12C01	Cover, Clutch
2	11482-22D00	Gasket, Clutch Cover
3	09206-09009	Pin
4	07110-06307	Bolt
5	07110-06357	Bolt
6	07110-06408	Bolt
7	11971-12C51	Plug, Oil Filler
8	09280-17003	O Ring
9	09128-06043	Screw (6x10)
10	09168-06004	Gasket
11	09247-14035	Plug, Oil Drain
12	09168-14002	Gasket
13	11351-22D00	Cover, Magneto
14	01517-06458	Bolt
15	04211-09129	Pin
16	11391-12B00	Cushion, Magneto Cover

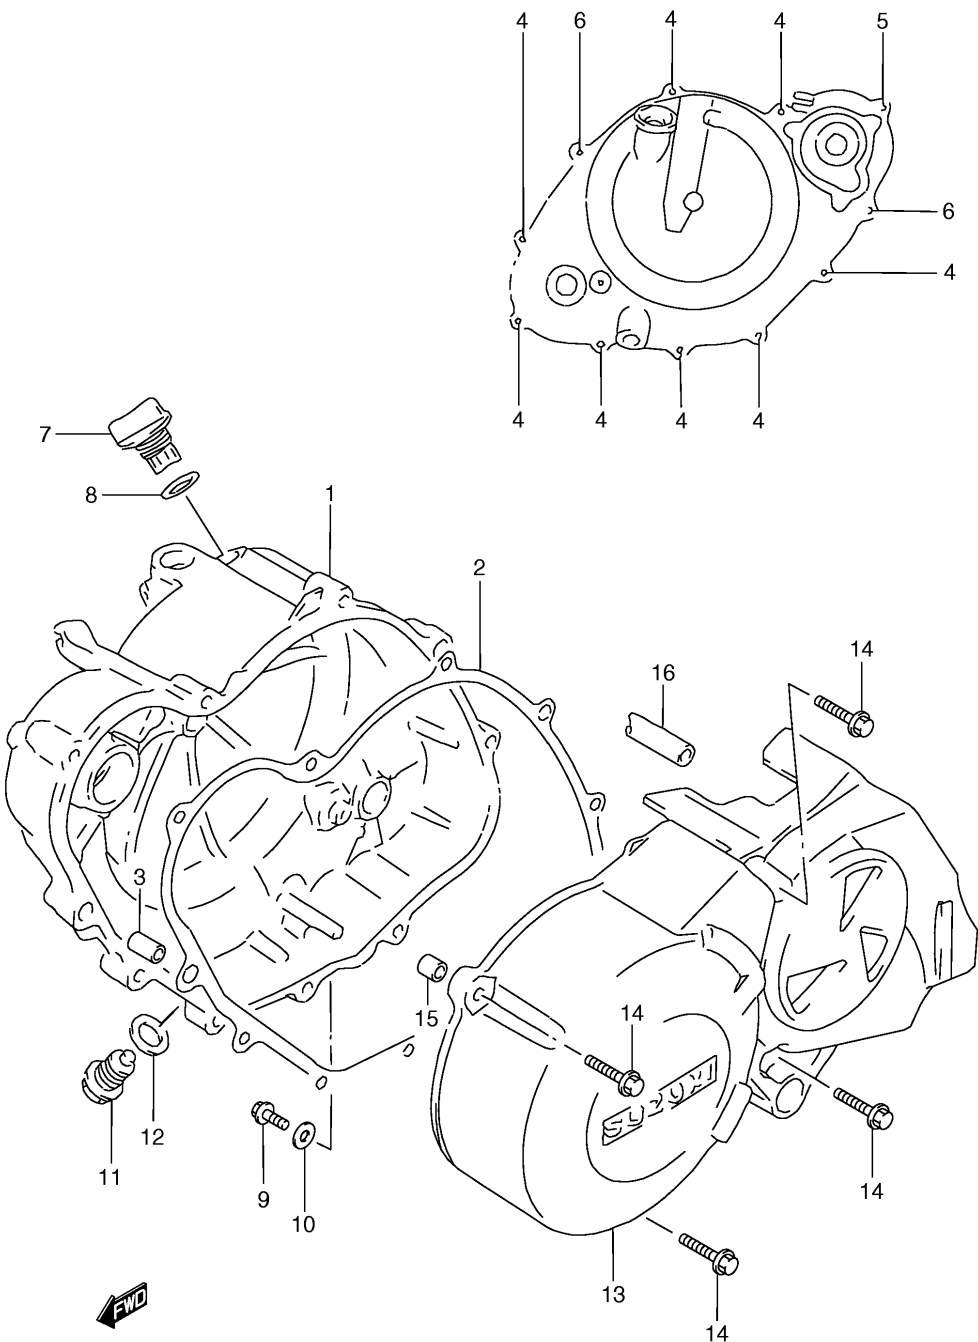


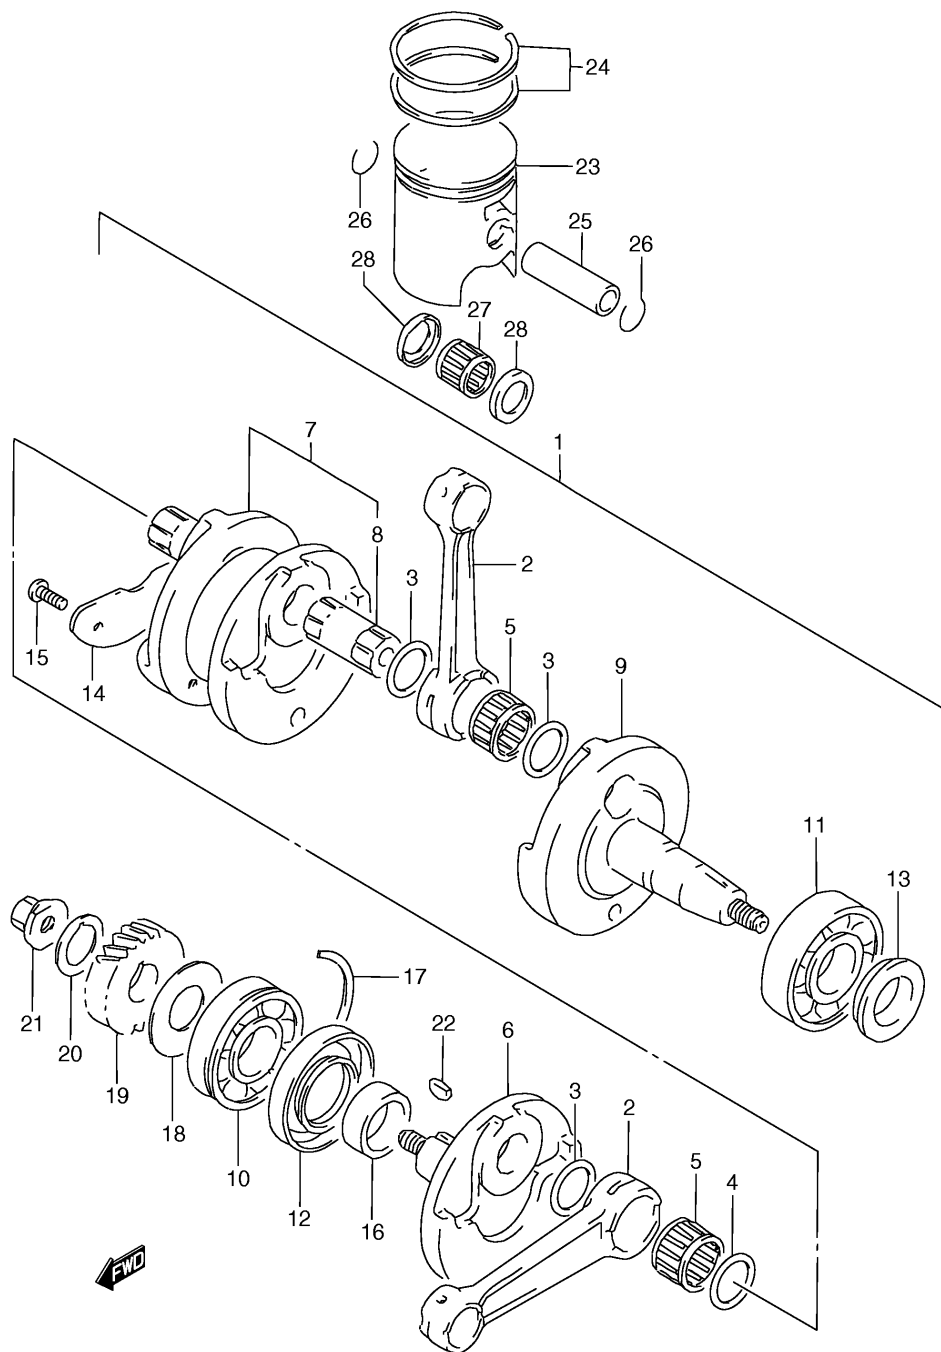

N° Réf.	N° Pièce	Désignation
1	12200-22D11	Crankshaft Assy
2	12161-12C06-0D0	. . Rod, Connecting
3	09160-22070	. . Washer (22x27.5x1.5)
4	09160-22071	. . Washer (22x27.5x2)
5	09263-22047-0C0	. . Bearing
6	12221-22D01	. . Crankshaft, Rh
7	12240-22D01	. . Crankshaft, Mdl
8	12211-12C02-0A0	•• . . Pin, Crank
9	12261-22D10	. . Crankshaft, Lh
10	09262-25097	. . Bearing, Rh (25x62x17)
11	09262-25098	. . Bearing, Lh (25x62x17)
12	09289-32005	. . Oil Seal, Rh (32x62x6x1.5)
13	09283-25091	. . Oil Seal, Lh (25x36x6)
14	12271-12C04	. . Balancer, Crankshaft
15	02122-06167	. . Screw
16	09180-25089	. . Spacer
17	09390-62009	C Ring
18	09181-20059	Washer
19	21111-12C02	Gear, Primary Drive
20	09166-12002	Washer
21	09159-12103	Nut
22	09420-05008	Key
23	12110-22D01-0F0	Piston
24	12140-22D30	Ring Set, Piston
25	12151-22D00	Pin, Piston
26	09381-16001	Circlip
27	09263-16028	Bearing, Piston Pin
28	09169-16007	Washer

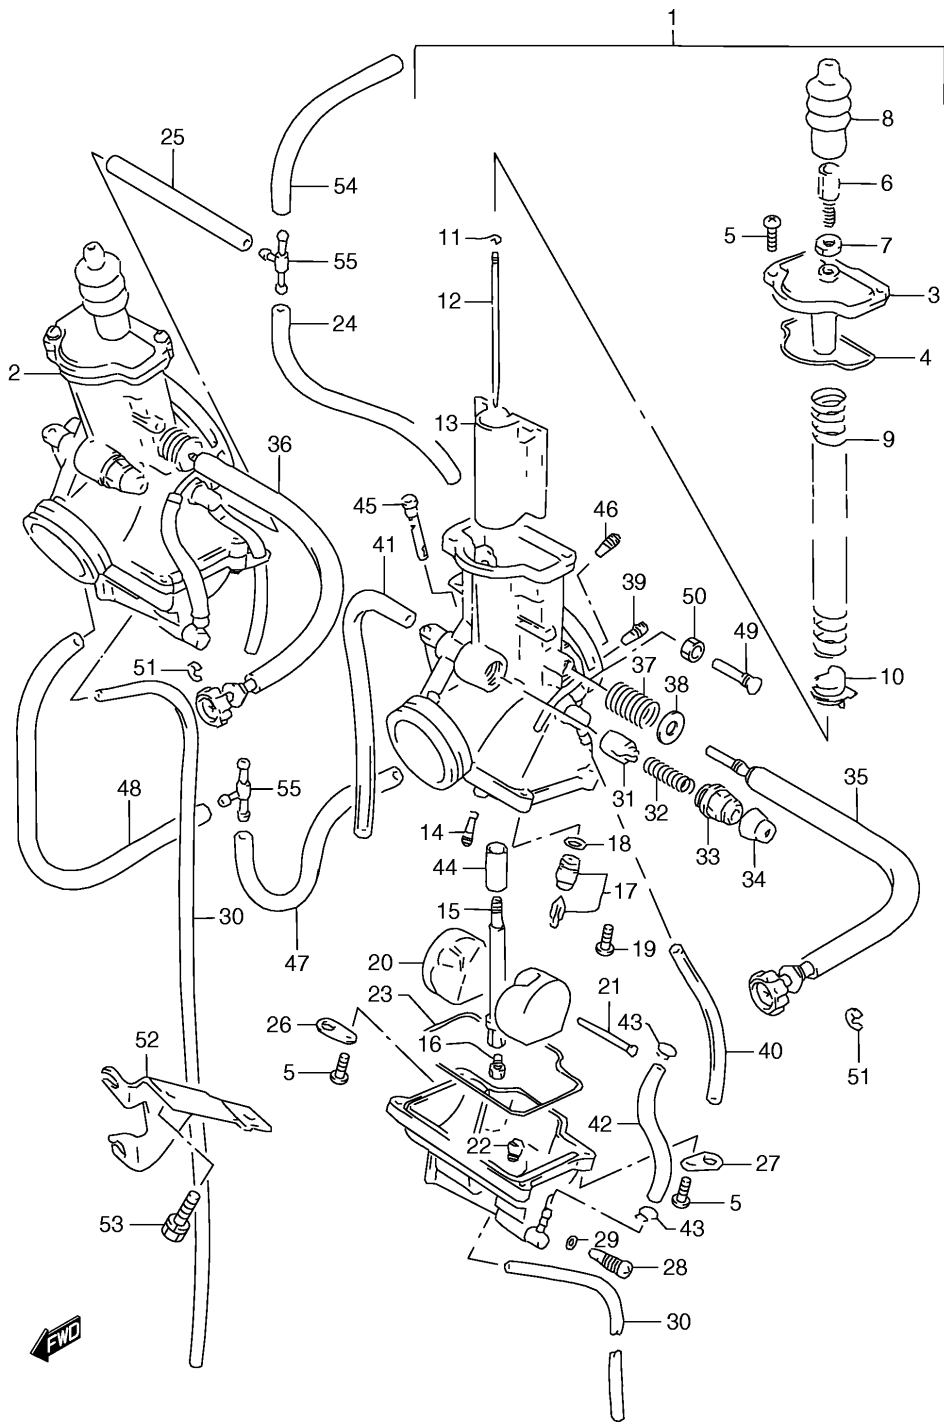


N° Réf.	N° Pièce	Désignation
1	13201-22D40	Carburetor Assy, Lh
1	13201-22D20	Carburetor Assy, Lh
1	13201-22D30	Carburetor Assy, Lh
2	13202-22D40	Carburetor Assy, Rh
2	13202-22D20	Carburetor Assy, Rh
2	13202-22D30	Carburetor Assy, Rh
3	13261-12C60	. Cap, Top
4	13251-26C00	. O Ring
5	02112-04123	. Screw
6	13577-41612	. Adjuster, Cable
7	13661-16600	. Nut, Cable Adjuster Lock
8	13681-41510	. Boot
9	13573-12C20	. Spring
9	13573-22D00	. Spring
10	13424-26C00	. Ring
11	13394-31210	. Clip, Needle
12	13383-22D00	. Needle, Jet Lh (6fi85-55-3)
12	13383-22D10	. Needle, Jet Rh (6fid86-56-3)
12	13383-22D20	. Needle, Jet (6gh8-55-3)
13	13551-12C00	. Valve, Piston (ca:1.5)
14	09492-27003	. Jet, Pilot (27.5)
14	09492-20008	. Jet, Pilot (20)
15	09494-00614	. Jet, Needle (o-8)
15	09494-00615	. Jet, Needle Lh (o-9)
15	09494-00668	. Jet, Needle Rh (p-0)
16	09491-54002	. Jet, Main (270)
16	09491-54002	. Jet, Main Lh (270)
16	09491-56003	. Jet, Main Rh (280)
17	13370-22D00	. Valve Assy, Needle
18	13374-44080	. O Ring
19	13602-43410	. Screw
20	13250-12C00	. Float
21	13254-92311	. Pin, Float
22	09491-55004	. Jet, Power Lh (55)
22	09491-55007	. Jet, Power Lh (55)
22	09491-45002	. Jet, Power Rh (45)
22	09491-35012	. Jet, Power Rh (35)
23	13672-12C00	. Gasket, Float Chamber
24	09352-35653-600	. Hose (3.5x6.5x600)
25	09352-35653-600	. Hose (3.5x6.5x600)
26	13693-36500	. Plate
27	13693-30010	. Plate
28	13247-02340	. Screw, Drain, Lh
28	13247-13A00	. Screw, Drain, Rh
29	13278-02340	. O Ring, Lh
30	13684-40A00	. Hose (3x5x650)
31	13411-01010	. Plunger, Starter
32	13417-37200	. Spring
33	13418-43410	. Holder, Guide
34	13681-04010	. Cap, Carburetor
35	13267-12C00	. Adjuster, Throttle Stop Lh
36	13267-12C10	. Adjuster, Throttle Stop Rh
37	13268-12C00	. Spring

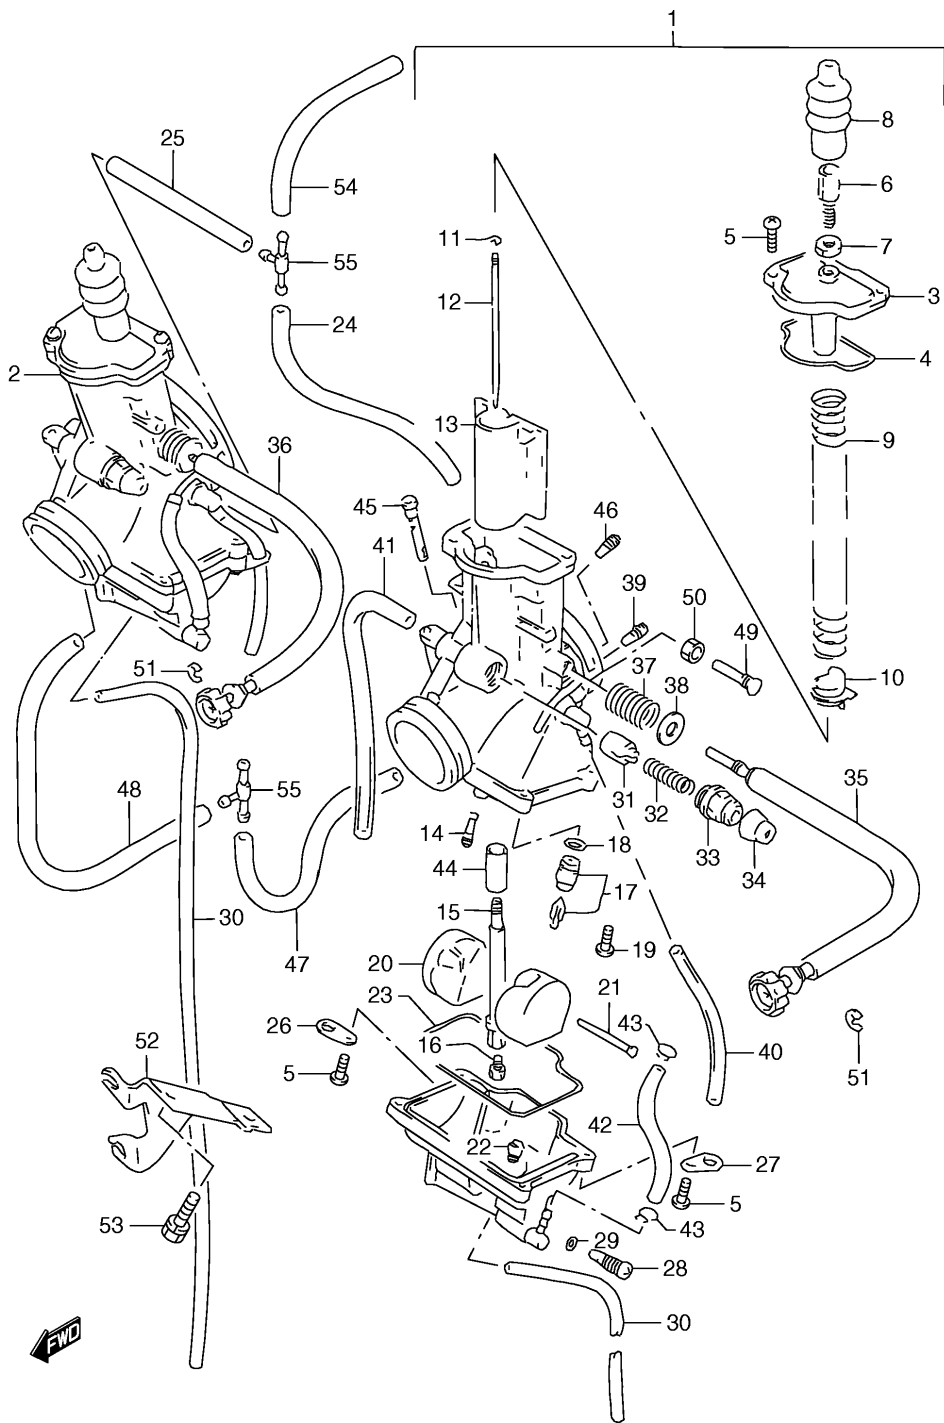


N° Réf.	N° Pièce	Désignation
37	13268-12C00	. Spring, Rh
38	13547-12C00	. Washer
38	13547-12C00	. Washer, Rh
39	09493-26004	. Jet, Pilot Air (1.3)
39	09493-22005	. Jet, Pilot Air (1.1)
40	13684-40A00	. Hose (3x5x650)
41	09352-40703-600	. Hose (4x7x600)
42	13218-12C20	. Hose Set
43	09401-06101	.. Clip
44	13452-12C00	. Ring
45	13236-12C00	. Filter
46	09493-60004	. Jet, Main Air (0.6)
47	09352-35653-600	. Hose (3.5x6.5x600)
48	09352-35653-600	. Hose (3.5x6.5x600)
49	13247-22D00	. Screw, Adjuster Lh
50	13607-47070	. Nut, Lh
51	13617-12C00	E Ring
52	13621-12C00	Bracket, Adjuster
53	01570-06167	Bolt
54	09352-35653-600	Hose (3.5x6.5x600))
55	13685-16720	Nipple



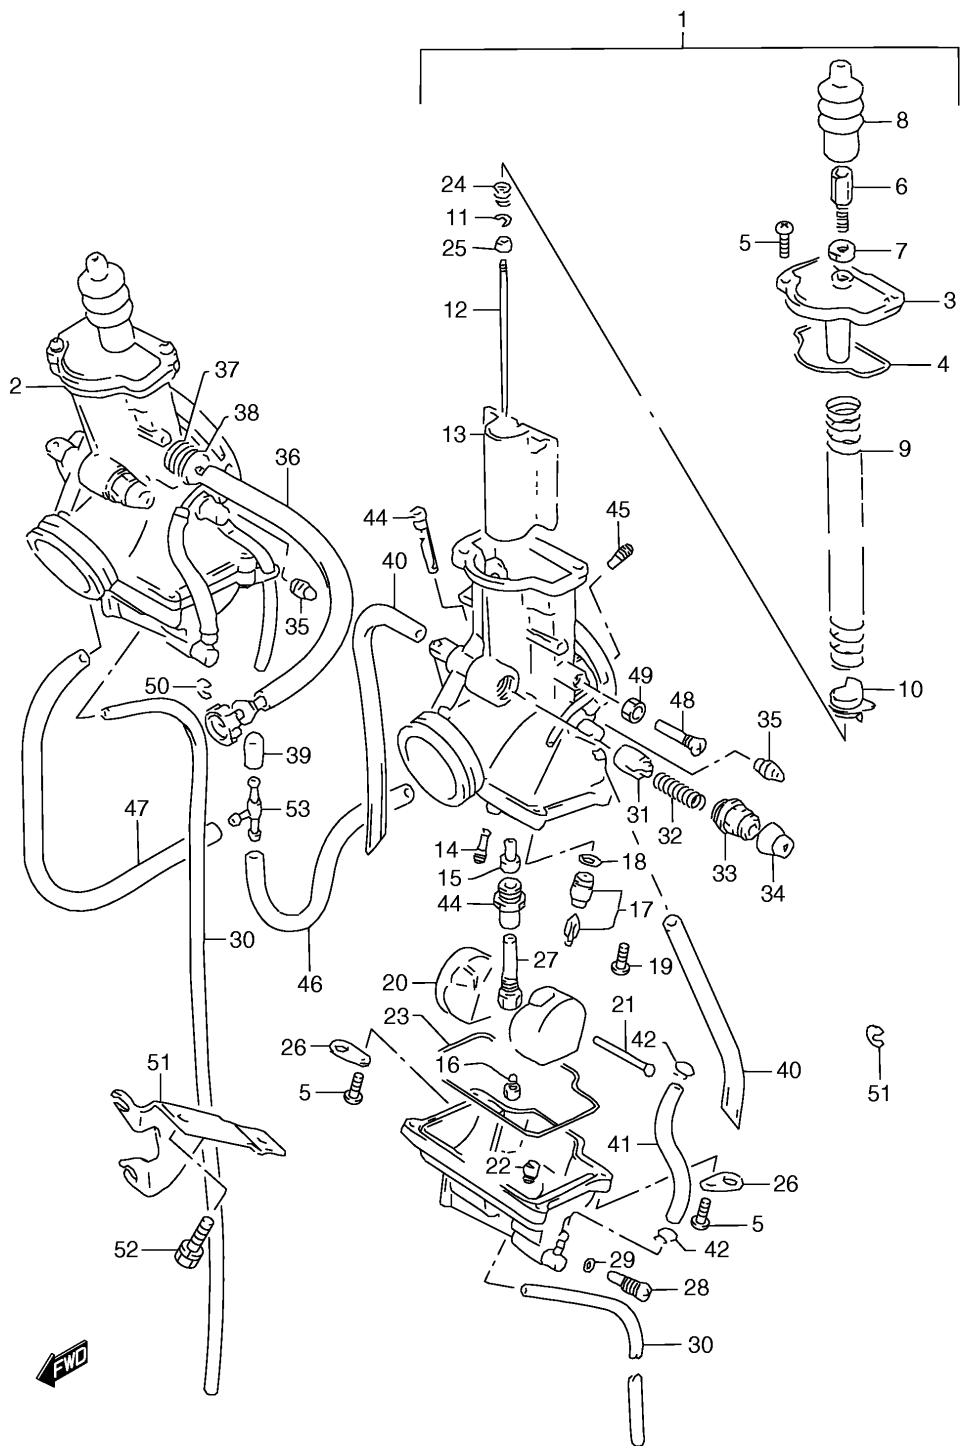


N° Réf.	N° Pièce	Désignation
1	13201-22D70	Carburetor Assy, Lh
2	13202-22D70	Carburetor Assy, Rh
3	13261-22D00	. Cap, Top
4	13251-26C00	. O Ring
5	13602-05A40	. Screw
6	13577-41612	. Adjuster, Cable
7	13661-16600	. Nut, Cable Adjuster Lock
8	13681-41510	. Boot
9	13573-22D10	. Spring
10	13387-19D00	. Ring
11	13394-31210	. Clip, Needle
12	13383-22D70	. Needle, Jet Lh (6f189-55-3)
13	13551-22D00	. Valve, Piston (ca:1.5)
14	09492-22006	. Jet, Pilot (22.5)
15	09494-00771	. Jet, Needle (0-7)
16	09491-54002	. Jet, Main Lh (270)
16	09491-56003	. Jet, Main Rh (280)
17	13370-12C10	. Valve Assy, Needle
18	13374-44080	. O Ring
19	13602-43410	. Screw
20	13250-12C00	. Float
21	13254-92311	. Pin, Float
22	09491-45002	. Jet, Power Lh (45)
22	09491-35012	. Jet, Power Rh (35)
23	13672-12C00	. Gasket, Float Chamber
24	13268-22D00	. Spring
25	13387-44030	. Ring
26	13693-36500	. Plate
27	13385-19D00	. Holder, Jet
28	13247-02340	. Screw, Drain Lh
28	13247-13A00	. Screw, Drain Rh
29	13278-02340	. O Ring, Lh
30	13684-40A00	. Hose (3x5x650)
31	13411-01010	. Plunger, Starter
32	13417-37200	. Spring
33	13418-43410	. Holder, Guide
34	13681-04010	. Cap, Carburetor
35	13688-22D20	. Cap
36	13267-12C10	. Adjuster, Throttle Stop Rh
37	13268-12C00	. Spring, Rh
38	13547-12C00	. Washer, Rh
39	13688-22D10	. Cap
40	13683-22D10	. Hose (4x7x90)
41	13218-12C00	. Hose Set
42	13671-12C00	. Clip
43	13452-19D00	. Ring
44	13236-12C00	. Filter
45	09493-60004	. Jet, Main Air (0.6) Lh
45	09493-70009	. Jet, Main Air (0.7) Rh
46	13683-13A00	. Hose (3.5x6.5x250)
47	13683-13A00	. Hose (3.5x6.5x250)
48	13247-22D00	. Screw, Adjuster Lh
49	13607-47070	. Nut, Lh



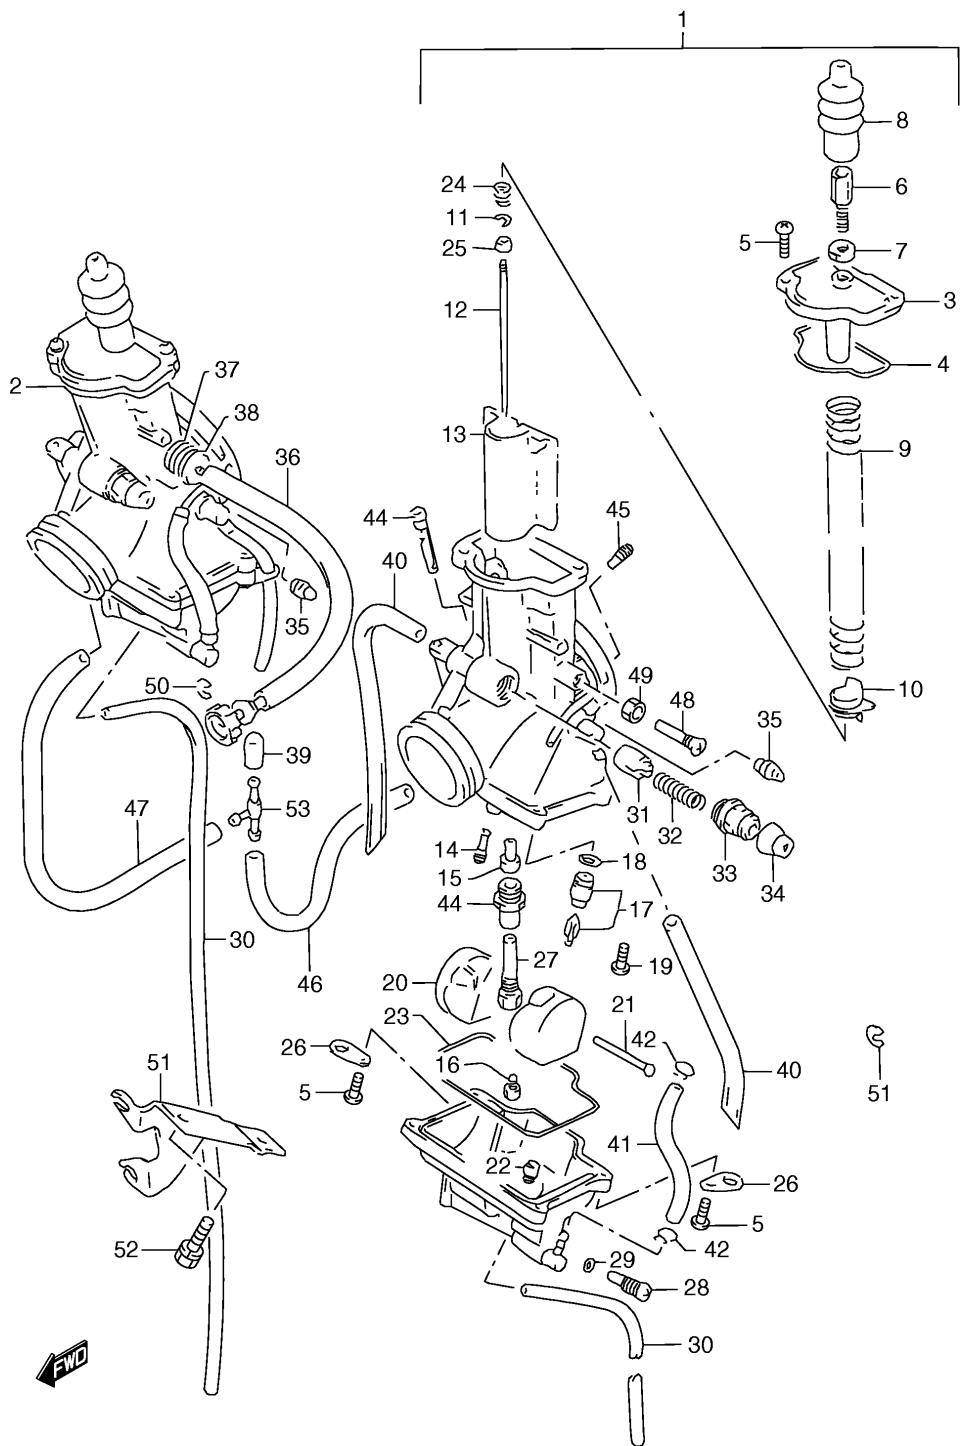


N° Réf.	N° Pièce	Désignation
50	13617-12C00	E Ring
51	13621-12C00	Bracket, Adjuster
52	01137-06167	Bolt
53	13685-16720	Nipple




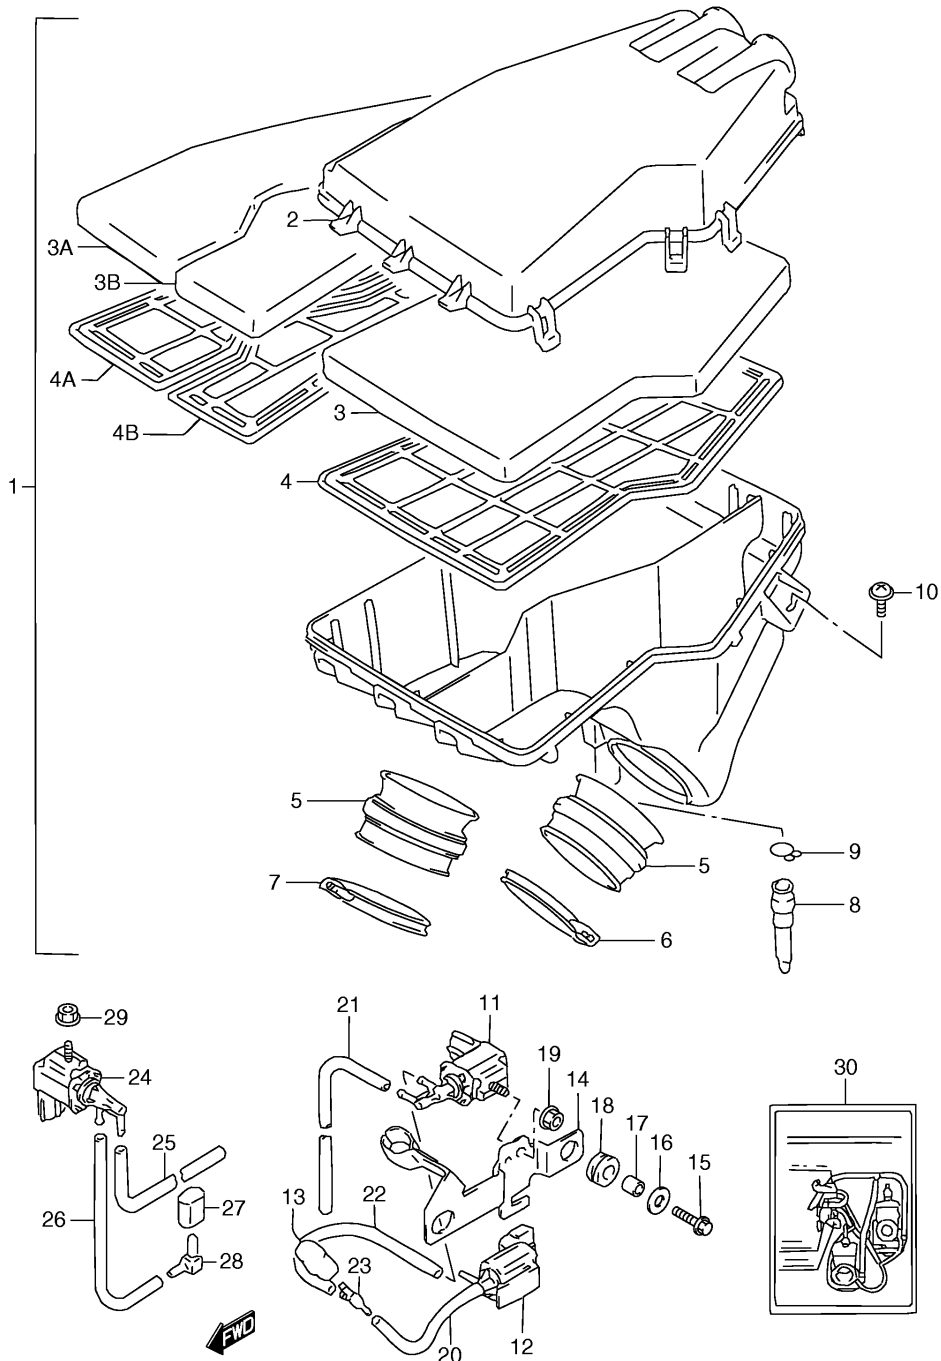


N° Réf.	N° Pièce	Désignation
1	13700-22D00	Cleaner Assy, Air
2	13740-22D00	• Cap, Air Cleaner
3	13781-12C01	• Filter
4	13811-12C03	• Holder, Filter
5	13881-12C00	• Tube, Outlet
6	13826-12C01	• Clamp, Lh
7	13827-12C00	• Clamp, Rh
8	13870-11417	• Tube, Drain
9	09401-13409	• Clip
10	09136-06017	Screw (6x16)
11	13160-22D00	Valve Assy, Main Air Solenoid
12	13161-16720	Valve, Pilot Air
13	13180-22D10	Filter, Solenoid Valve
14	13165-22D00	Bracket, Solenoid Valve
15	01517-06206	Bolt
16	09160-06057	Washer
17	09180-06137	Spacer
18	09320-09036	Cushion
19	08316-16066	Nut
20	09354-35753-600	Hose (3.5x7.5x600)
21	09352-40703-600	Hose (4x7x600)
22	13166-22D00	Hose, Main Air Solenoid,no.2
23	13685-16720	Nipple
30	13189-22D10	Label, Carburetor Warning
30	13189-22D20	Label, Carburetor Warning
30	13189-22D30	Label, Carburetor Warning
30	13189-22D40	Label, Carburetor Warning

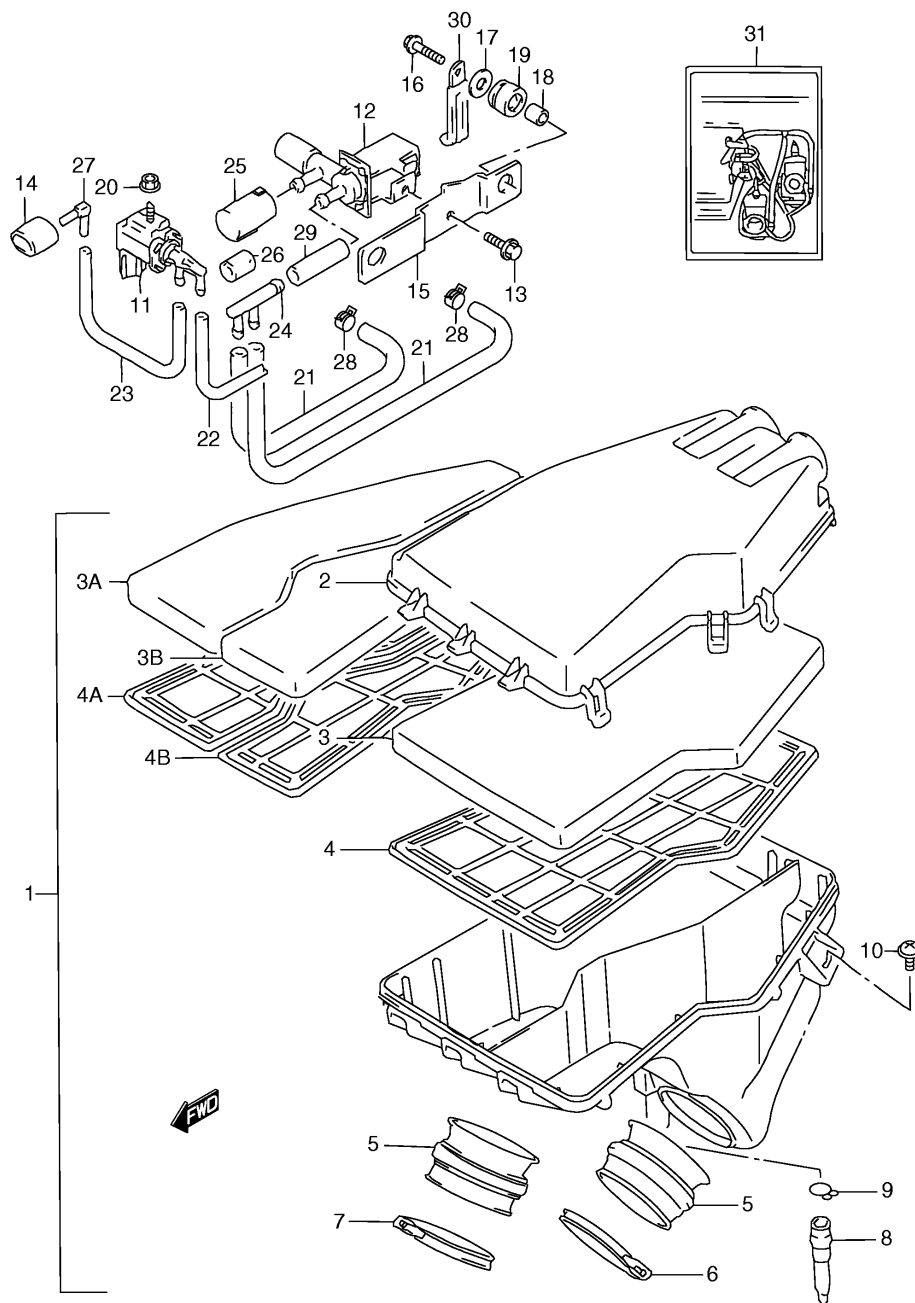

N° Réf.	N° Pièce	Désignation
5	13881-12C00	. Tube, Outlet
6	13826-12C01	. Clamp, Lh
7	13827-12C00	. Clamp, Rh
8	13870-11417	. Tube, Drain
9	13824-00A00	. Clip
10	09136-06017	Screw (6x16)
11	13160-22D00	Valve Assy, Main Air Solenoid
12	95161-60D00	Valve, Pilot Air
13	01517-06106	Bolt
14	13180-22D10	Filter, Solenoid Valve
15	13165-22D70	Bracket, Solenoid Valve
16	01517-06206	Bolt
17	09160-06057	Washer
18	09180-06137	Spacer
19	09320-09036	Cushion
20	08316-16066	Nut
21	09354-50103-600	Hose (5x10x600)
22	09352-40703-600	Hose (4x7x600)
23	09352-40703-600	Hose (4x7x600)
24	09367-06004	Nipple
25	13180-22D70	Case, Filter
26	13789-00010	Filter
27	09367-04005	2 Way, Air Solenoid
28	09401-09401	Clip
29	09354-70123-300	Hose (7x12x300)
30	09404-06405	Clamp
31	13189-22D70	Label, Carburetor Warning

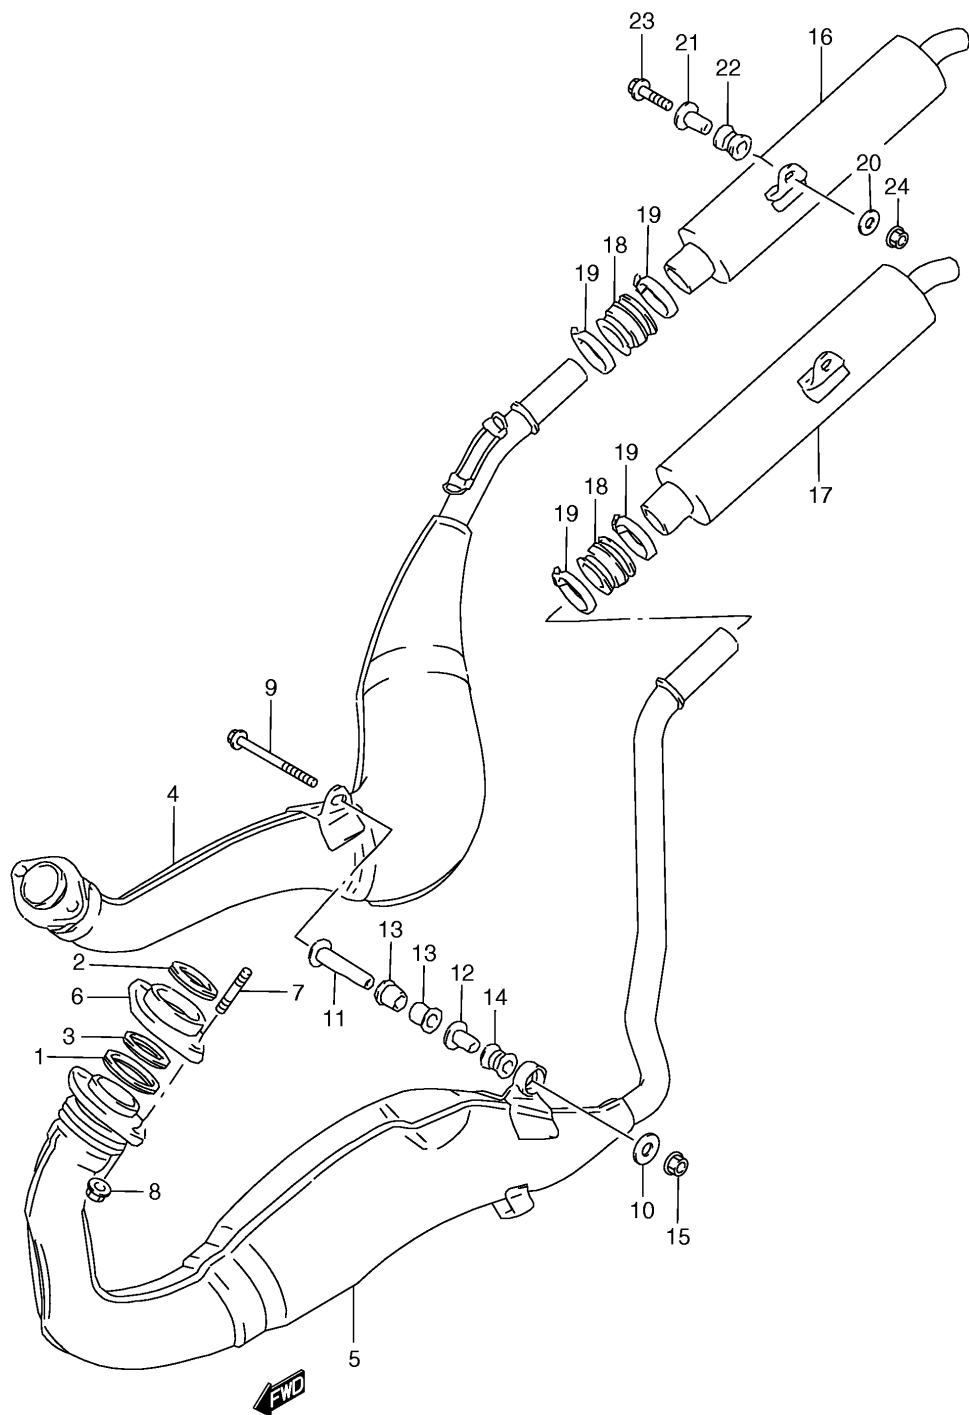


N° Réf.	N° Pièce	Désignation
1	14181-13A01	Gasket, Exhaust Pipe
2	14181-01D00	Gasket, Exhaust Pipe
3	14181-22D01	Gasket, Exhaust Pipe
4	14310-22D10	Body, Muffler 1st Rh
4	14310-22D20	Body, Muffler 1st Rh
5	14340-22D10	Body, Muffler 1st Lh
5	14340-22D20	Body, Muffler 1st Lh
6	14195-22D00	Flange, Exhaust Fitting
7	09108-08142	Stud Bolt (1:30)
8	08319-31085	Nut
9	09103-08133	Bolt (8x105)
10	09160-08067	Washer (8.2x26x1.6)
11	14470-22D00	Spacer, 1st Muffler Support
12	09180-08151	Spacer
13	09320-12021	Cushion
14	09320-12043	Cushion
15	08319-31085	Nut
16	14330-22D00	Body, Muffler 2nd Upper
16	14330-22D10	Body, Muffler 2nd Upper
16	14330-22D21	Body, Muffler 2nd Upper
17	14350-22D00	Body, Muffler 2nd Lower
17	14350-22D10	Body, Muffler 2nd Lower
17	14350-22D21	Body, Muffler 2nd Lower
18	14771-03D00	Connector, 2nd Muffler
19	09402-46511	Clamp
20	09160-08067	Washer (8.2x26x1.6)
21	09180-08151	Spacer
22	09320-12043	Cushion
23	07120-08357	Bolt
24	08319-31085	Nut

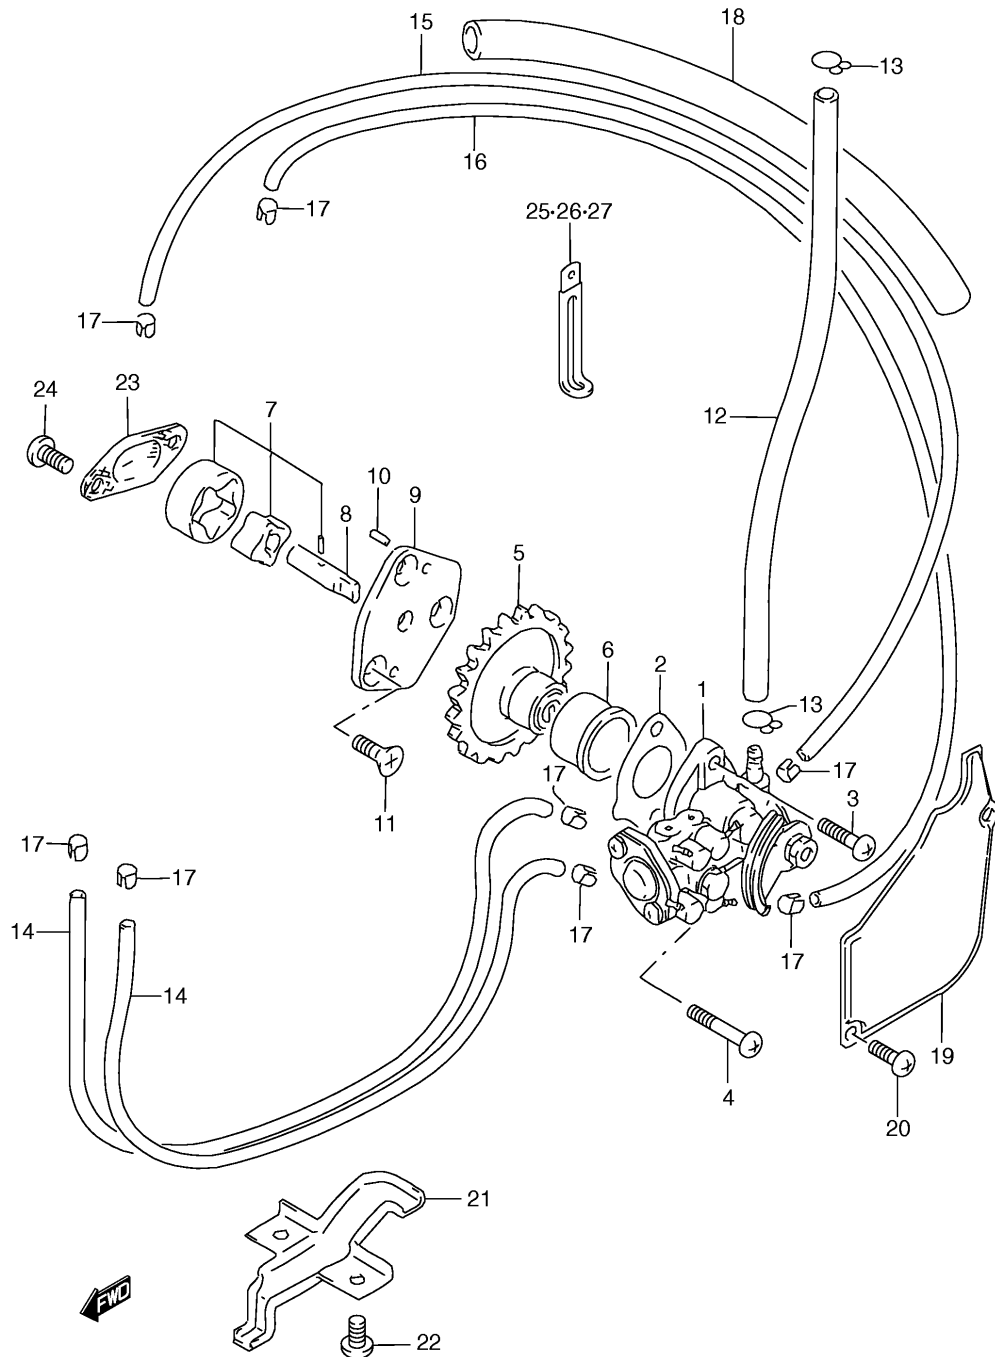


N° Réf.	N° Pièce	Désignation
1	16100-22D00	Pump Assy, Oil
2	16731-03101	Gasket, Oil Pump
3	02112-35168	Screw
4	02112-35308	Screw
5	16320-12C00	Gear, Oil Pump Drive
6	09301-20005	Bush
7	16410-12C00	Rotor Set, Oil Pump
8	16415-12C00	Shaft, Oil Pump Rotor Drive
9	16431-12C00	Cover, Oil Pump
10	04221-04069	Pin
11	02122-06167	Screw
12	09354-45853-600	Hose (4.5x8.5x600)
13	09401-08401	Clip
14	09352-20503-600	Hose (2x5x600)
15	09352-20503-00B	Hose (2x5x2000)
16	09352-20503-600	Hose (2x5x600)
17	09401-04401	Clip
18	09352-11153-600	Hose (11x15x600)
19	11385-12C01	Cap, Oil Inspection
20	02112-05107	Screw
21	11386-12C01	Cover, Oil Hose
22	02112-06127	Screw
23	16520-12C01	Strainer, Engine Oil
24	02112-36127	Screw
25	09404-06402	Clamp
26	09404-08205	Clamp (l:62)
27	09404-08206	Clamp (l:82)


N° Réf.	N° Pièce	Désignation
---------	----------	-------------

1	17410-12C02	Case, Water Pump
2	17415-20920	• Bolt, Drain
3	09168-08008	• Gasket
4	17435-12C00	O Ring, Water Pump Case
5	07110-06208	Bolt
6	08211-08201	Washer
7	09261-02001	Pin
8	17461-12C00	Gear, Water Pump Drive
9	08331-31086	Circlip
10	09164-08018	Washer
11	17491-12C00	Impeller, Water Pump
12	09100-06099	Bolt (6x13)
13	09164-06006	Lock Washer
14	09168-06025	Gasket
15	17510-22D00	Shaft, Water Pump
16	17470-46A00	Seal, Mechanical
17	09283-10005	Oil Seal (10x20x5)
18	17857-12C00	Hose, Water Pump Outlet
19	09402-30502	Clamp
20	17891-12C00	Union, Water Hose 3 Way
21	17858-12C00	Hose, Cylinder Inlet No.1
22	17859-12C01	Hose, Cylinder Inlet No.2
23	09402-28511	Clamp

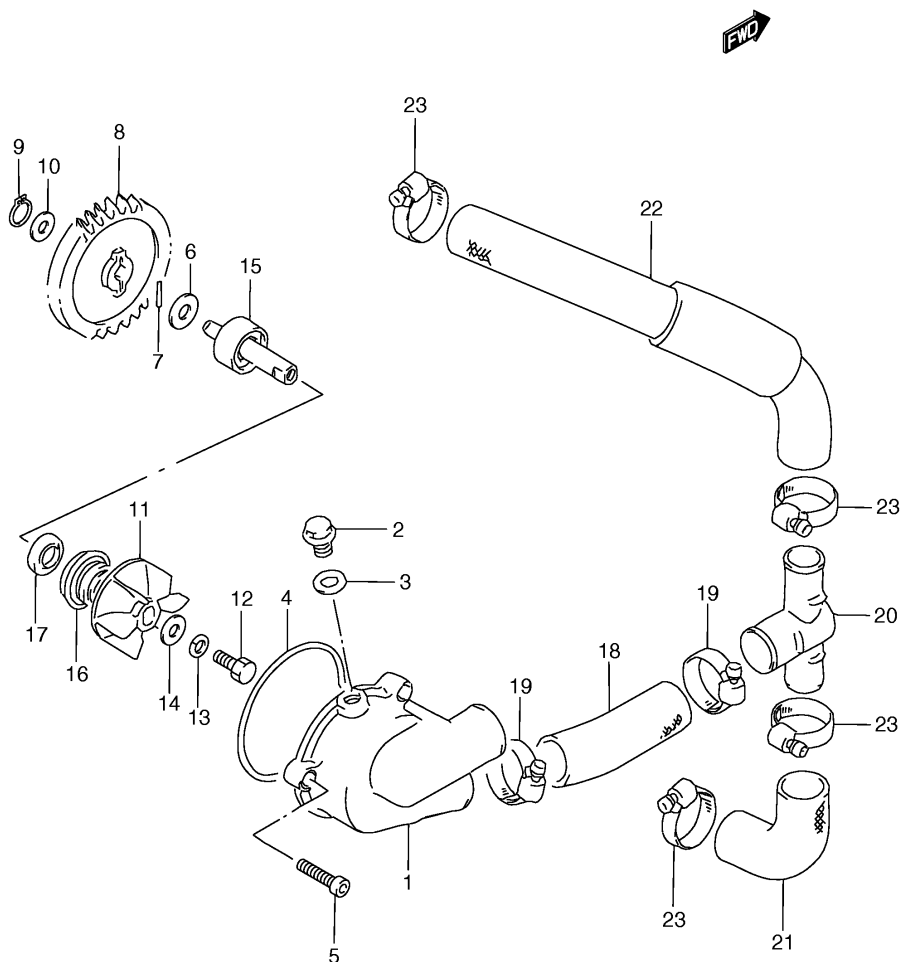

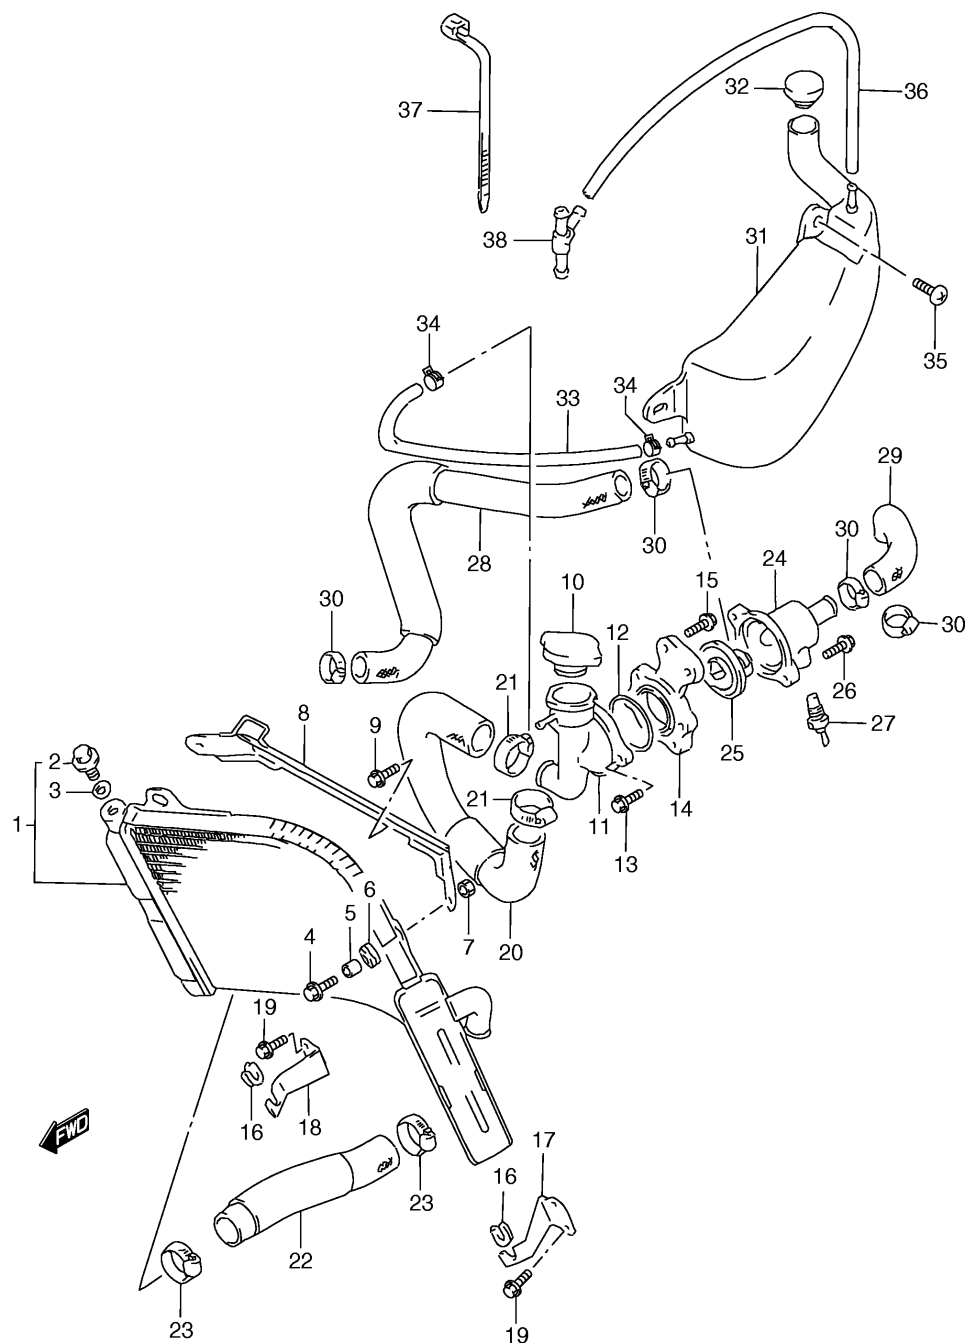


N° Réf.	N° Pièce	Désignation
1	17710-22D00	Radiator Assy, Water
2	17718-38405	• . Plug
3	17759-63210	• . Gasket
4	09116-06143	Bolt (6x20)
5	09180-06030	Spacer
6	09320-10015	Cushion
7	08316-16064	Nut
8	17740-22D01	Bracket, Radiator Upper
9	01174-06165	Bolt
10	17730-20930	Cap, Radiator, 1.1
11	17791-32C00	Conduction, Radiator
12	09280-44005	O Ring
13	01517-06167	Bolt
14	17792-12C00	Bracket, Conduction
15	01517-06307	Bolt
16	16628-27A00	Cushion
17	17742-22D00	Bracket, Radiator Lower Lh
18	17741-22D00	Bracket, Radiator Lower Rh
19	01517-06164	Bolt
20	17851-22D00	Hose, Radiator Inlet
21	09402-30502	Clamp
22	17852-22D00	Hose, Radiator Outlet
23	09402-32502	Clamp
24	17662-12C01	Connector, Thermostat Inlet
25	17670-12C00	Thermostat, Water
26	01517-06207	Bolt
27	34850-82012	Gauge Assy, Water Temperature
28	17853-12C02	Hose, Radiator Joint No.1
29	17854-12C00	Hose, Radiator Joint No.2
30	09402-28511	Clamp
31	17910-22D00	Tank Assy, Reservoir
32	17932-12C00	• . Cap, Reservoir Tank
33	17981-12C00	Hose, Reservoir Tank Inlet
34	09401-08407	Clip
35	09136-06009	Screw (6x20)
36	09352-50901-600	Hose (5x9x600)
37	09407-22404	Clamp (I:214)
38	09367-06005	Union, 3 Way

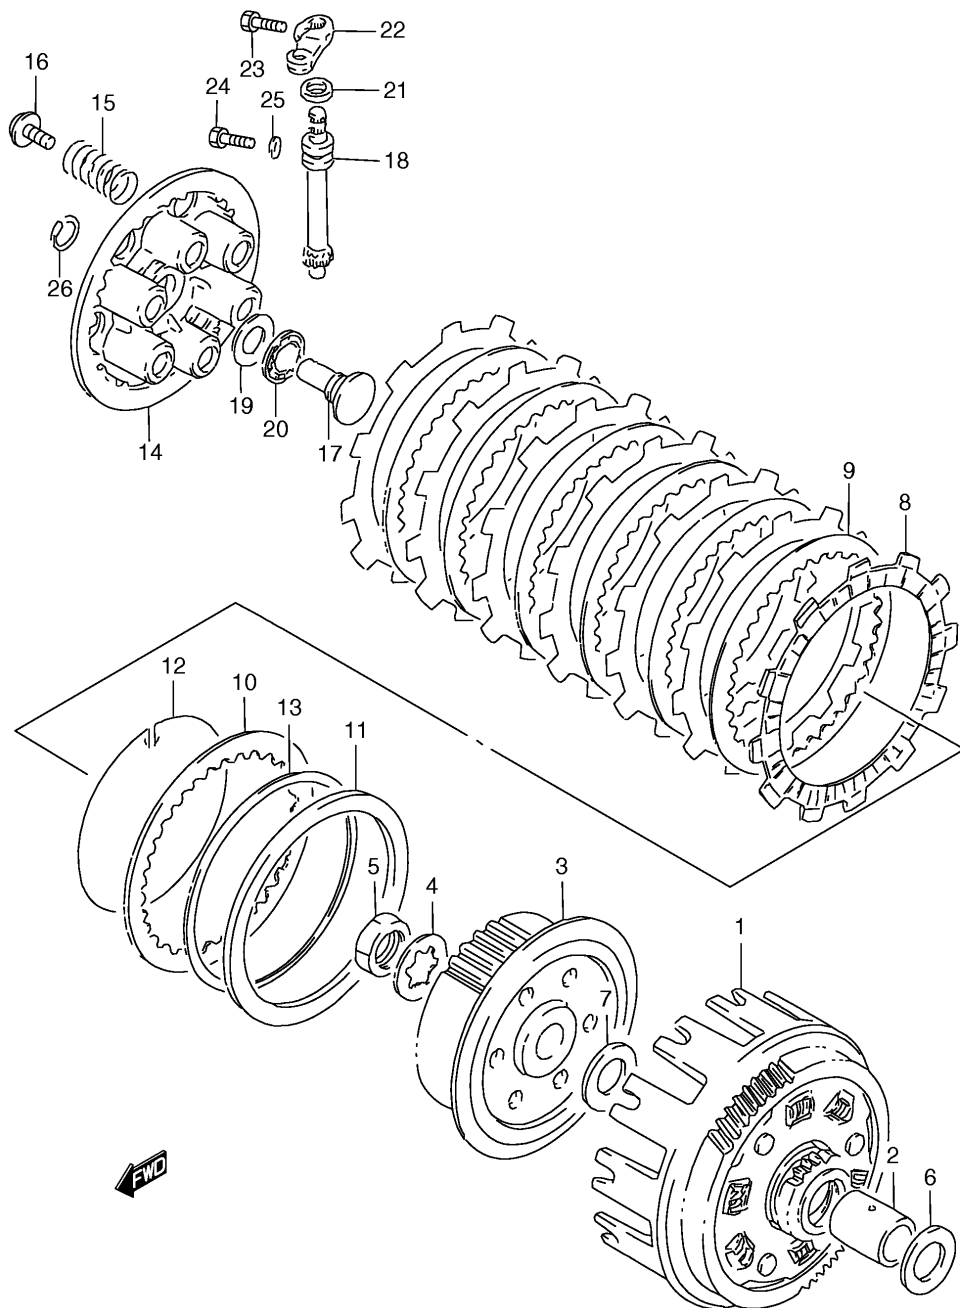


N° Réf.	N° Pièce	Désignation
1	21200-12C15	Gear Assy, Primary Driven
2	21251-12C01	Spacer, Primary Driven
3	21410-16712	Hub, Clutch Sleeve
4	09167-20009	Lock Washer
5	09140-20001	Nut
6	09160-20067	Washer (20x36x3)
7	09160-20063	Washer (20x36x2)
8	21441-37400	Plate, Clutch Drive (t:3)
9	21451-45000	Plate, Clutch Driven (t:1.6)
10	21451-31000	Plate, Clutch Driven (t:2.0)
11	21471-45101	Seat, Wave Washer
12	21481-45100	Ring, Stopper
13	09164-00003	Wave Washer
14	21462-12C00	Disk, Clutch Pressure
15	09440-19023	Spring
16	09116-06016	Bolt
17	23165-21A11	Rack, Clutch Release
18	23261-20A00	Pinion, Clutch
19	09160-15015	Washer (15x28x1)
20	09263-15003	Bearing (15x28x2)
21	09285-10004	Oil Seal (10x17x5)
22	23271-12C00	Arm, Clutch Release
23	01107-06167	Bolt
24	09135-06009	Bolt
25	08322-21067	Washer
26	09380-15001	Snap Ring



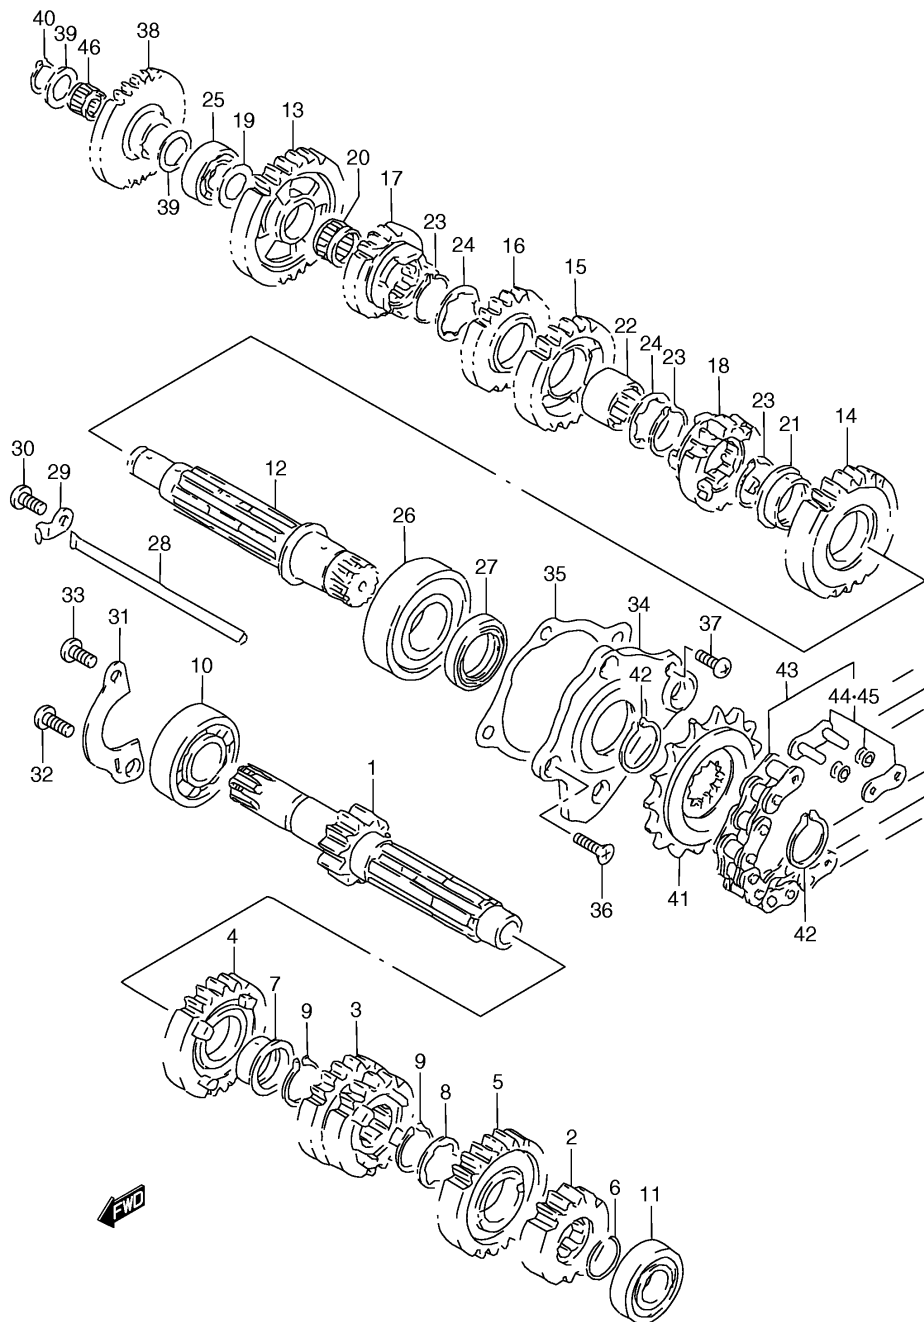


N° Réf.	N° Pièce	Désignation
1	24121-22D01	Shaft, Counter (nt:11)
2	24221-12C00	Gear, 2nd Drive (nt:16)
3	24231-12C01	Gear, 3rd/4th Drive (nt:18/22)
4	24251-12C02	Gear, 5th Drive (nt:24)
5	24261-12C01	Gear, 6th Drive (nt:25)
6	09380-22009	Snap Ring
7	09301-22003	Bush
8	09167-22011	Lock Washer
9	08331-31226	Circlip
10	09262-20065	Bearing (20x52x15)
11	09262-17027	Bearing (17x40x12)
12	24130-22D00	Shaft, Drive
13	24311-12C02	Gear, 1st Driven (nt:27)
14	24321-16701	Gear, 2nd Driven (nt:26)
15	24331-12C01	Gear, 3rd Driven (nt:21)
16	24341-12C02	Gear, 4th Driven (nt:23)
17	24351-12C02	Gear, 5th Driven (nt:22)
18	24361-12C10	Gear, 6th Driven (nt:21)
18	24361-12C11	Gear, 6th Driven (nt:21)
19	08211-15263	Washer
20	09263-18029	Bearing (18x22x12.8)
21	09301-25002	Bush
22	24332-12C00	Bush, 3rd/4th Driven Gear
23	09380-25003	Snap Ring
24	09167-25023	Washer
25	08110-62020	Bearing
26	09262-25083	Bearing (25x62x17)
27	09283-25086	Oil Seal (25x38x6)
28	24881-12C02	Guide, Transmission Oil
29	24885-12C00	Retainer, Oil Guide
30	02112-06103	Screw
31	24741-22D00	Retainer
32	02112-06163	Screw
33	02122-06163	Screw
34	24751-12C03	Retainer, Drive Shaft Bearing
35	24752-22D00	Gasket, Bearing Retainer
36	02122-06163	Screw (6x16)
37	09125-06083	Screw (6x16)
38	26261-12C04	Gear, Kick Starter Idle
39	08211-15241	Thrust Washer
40	08331-31156	Circlip
41	27510-38C00	Sprocket, Engine (nt:14)
42	08331-31246	Circlip
43	27600-06C20-114	Chain Assy (rk520sm114le)
44	27620-06C20	• . Joint (rk)
45	27620-22D10	Joint (did)
46	09263-15028	Bearing (15x19x13)

(nt:33)

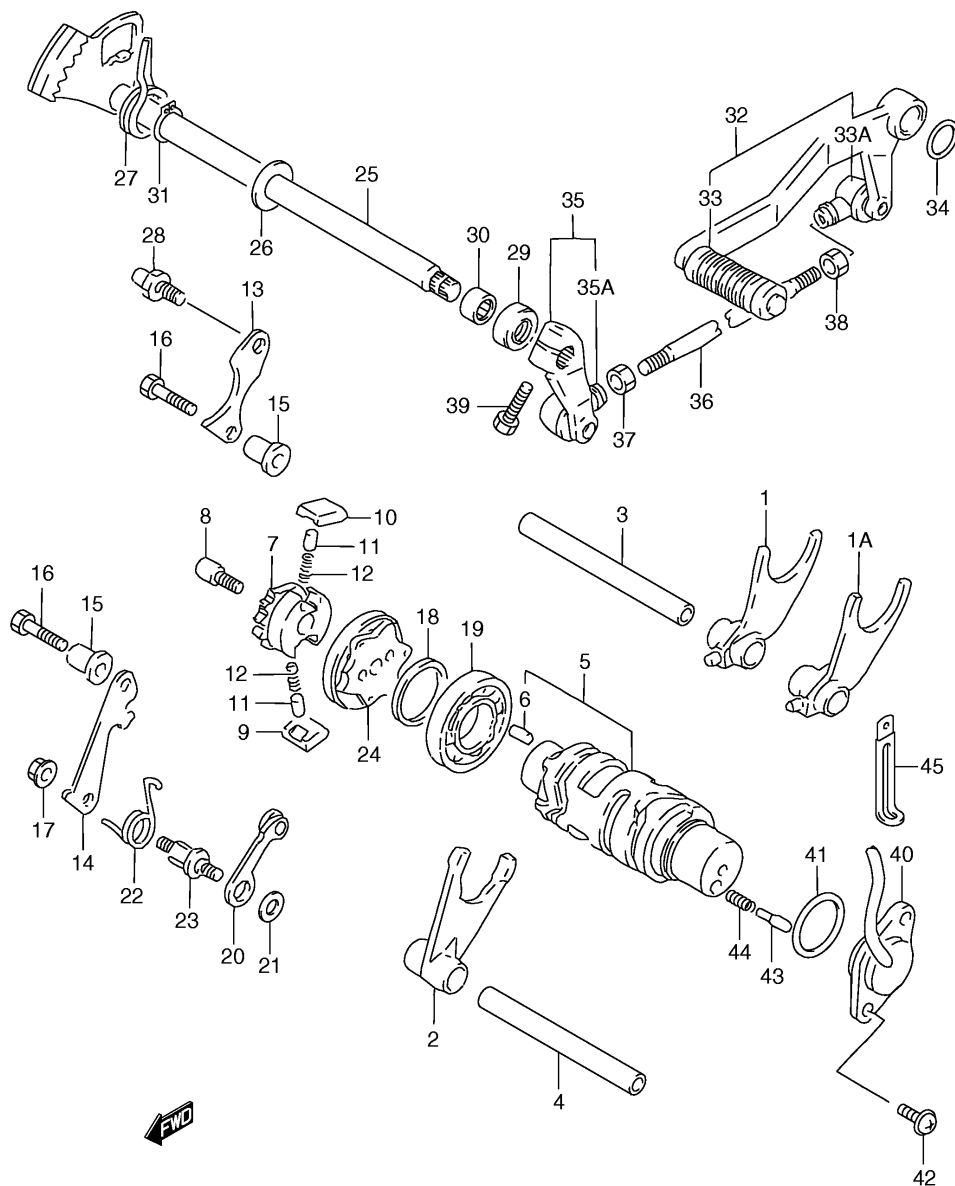


N° Réf.	N° Pièce	Désignation
1	25211-13A00	Fork, Gear Shift No.1
1a	25211-22D00	Fork, Gear Shift No.2
2	25231-22D30	Fork, Gear Shift No.3
3	25411-16701	Shaft, Shift Fork (l:109)
4	25411-14310	Shaft, Gear Shift Fork (l:87.5)
5	25310-12C00	Cam, Gear Shift
6	04221-04089	• . Pin
7	25322-31301	Gear, Gear Shift Cam Driven
8	25312-12C00	Pin, Shift Cam Driven Gear
9	25323-34201	Pawl, Gear Shift No.1
10	25324-34201	Pawl, Gear Shift No.2
11	09261-05003	Roller
12	09440-04003	Spring
13	25331-12C00	Lifter, Gear Shift Pawl
14	25341-12C00	Guide, Gear Shift Cam
15	09180-06202	Spacer (6.1x10x16)
16	02122-06308	Screw
17	09159-06017	Nut
18	09160-25059	Washer (25x32x3)
19	09262-25002	Bearing (25x47x8)
20	25350-12C00	Stopper, Shift Cam
21	08211-06141	Washer
22	25355-12C00	Spring, Stopper Arm
23	25356-12C00	Support, Cam Stopper Arm
24	25380-38A02	Plate, Gear Shift Cam
25	25510-22D01	Shaft, Gear Shift
26	08211-14221	Washer
27	09444-20001	Spring
28	25671-36A00	Stopper, Gear Shift Arm
29	09283-14006	Oil Seal (13x22x6)
30	09263-14027	Bearing (14x20x12)
31	08331-31146	Circlip
32	25600-22D00	Lever Assy, Gear Shift
33	25652-20C00	• . Rubber
33a	25526-47000	• . Cover, Dust
34	09164-18005	Washer (18.6x24.6x12)
35	25520-32C00	Arm, Gear Shift Link
35a	25526-47000	• . Cover, Dust
36	25525-22D01	Rod, Gear Shift Link
37	08310-11068	Nut
38	09140-06011	Nut
39	01107-06207	Bolt
40	37720-12C01	Base Assy, Neutral Switch
41	09280-26003	O Ring (d:2.4,id:26.2)
42	02112-75165	Screw
43	09209-05011	Contact
44	09440-04010	Spring
45	09404-06402	Clamp (l:50)
45	09404-06429	Clamp (l:60)


N° Réf.	N° Pièce	Désignation
1	26210-12C02	Shaft, Kick Starter
2	09180-06067	Spacer (6.5x10.5x22.5)
3	08211-17422	Thrust Washer
4	26233-12C10	Stopper, Kick Starter
5	02112-06103	Screw
6	26221-23030	Guide, Kick Starter Shaft
7	09448-43002	Spring
8	09285-16003	Oil Seal (16x24x5)
9	26241-12C00	Gear, Kick Starter (nt:34)
10	26234-12C01	Spring, Retainer
11	26300-22D10	Lever Assy, Kick Starter
12	01107-08258	Bolt

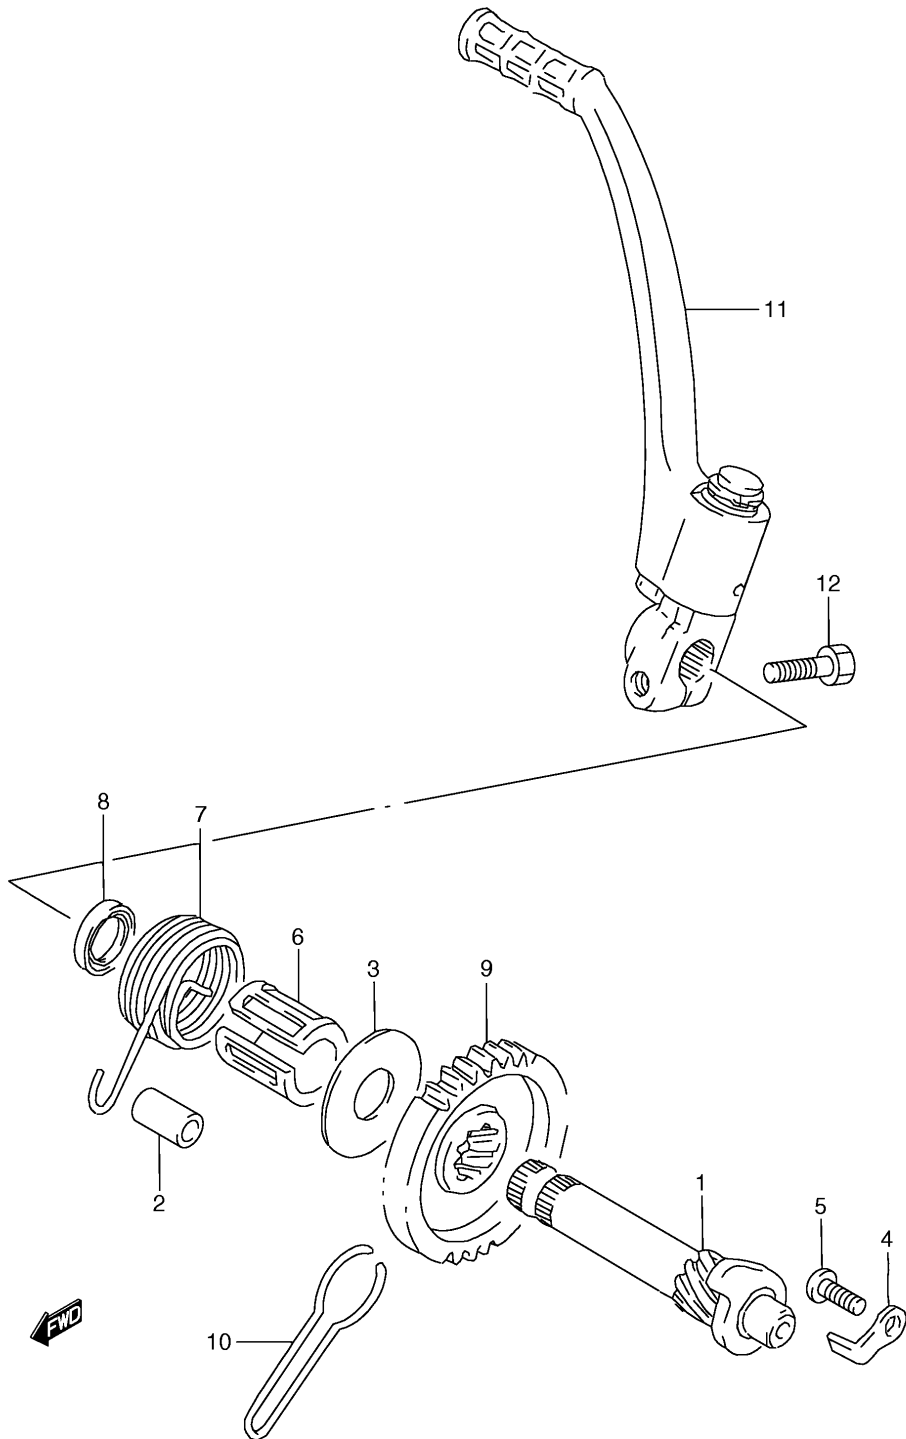


N° Réf.	N° Pièce	Désignation
1	32101-22D02	Stator
2	32102-22D00	Rotor
3	07110-05308	Bolt
4	32157-12C00	Clamp, Pulser Coil
5	07110-05128	Bolt
6	08341-31039	Key
7	08316-16128	Nut
8	09160-12051	Washer (12x27x2)
9	32155-22D01	Clamp, Magneto Wire
10	01547-05128	Bolt
11	09404-06404	Clamp (l:70)
11	09404-06431	Clamp (l:80)
12	09407-18402	Clamp (l:165)

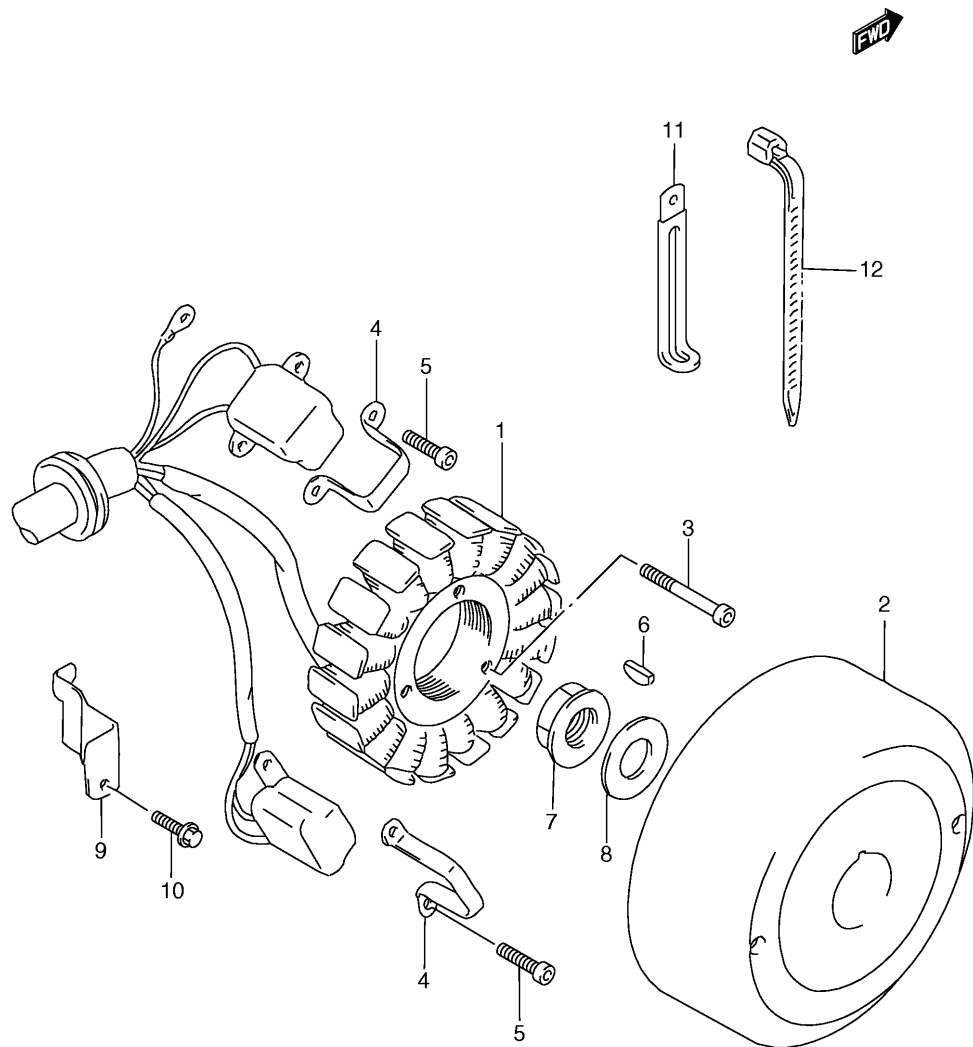


N° Réf.	N° Pièce	Désignation
1	33610-03D00	Battery Assy (12v,3ah)
2	33651-10B00	Band, Battery

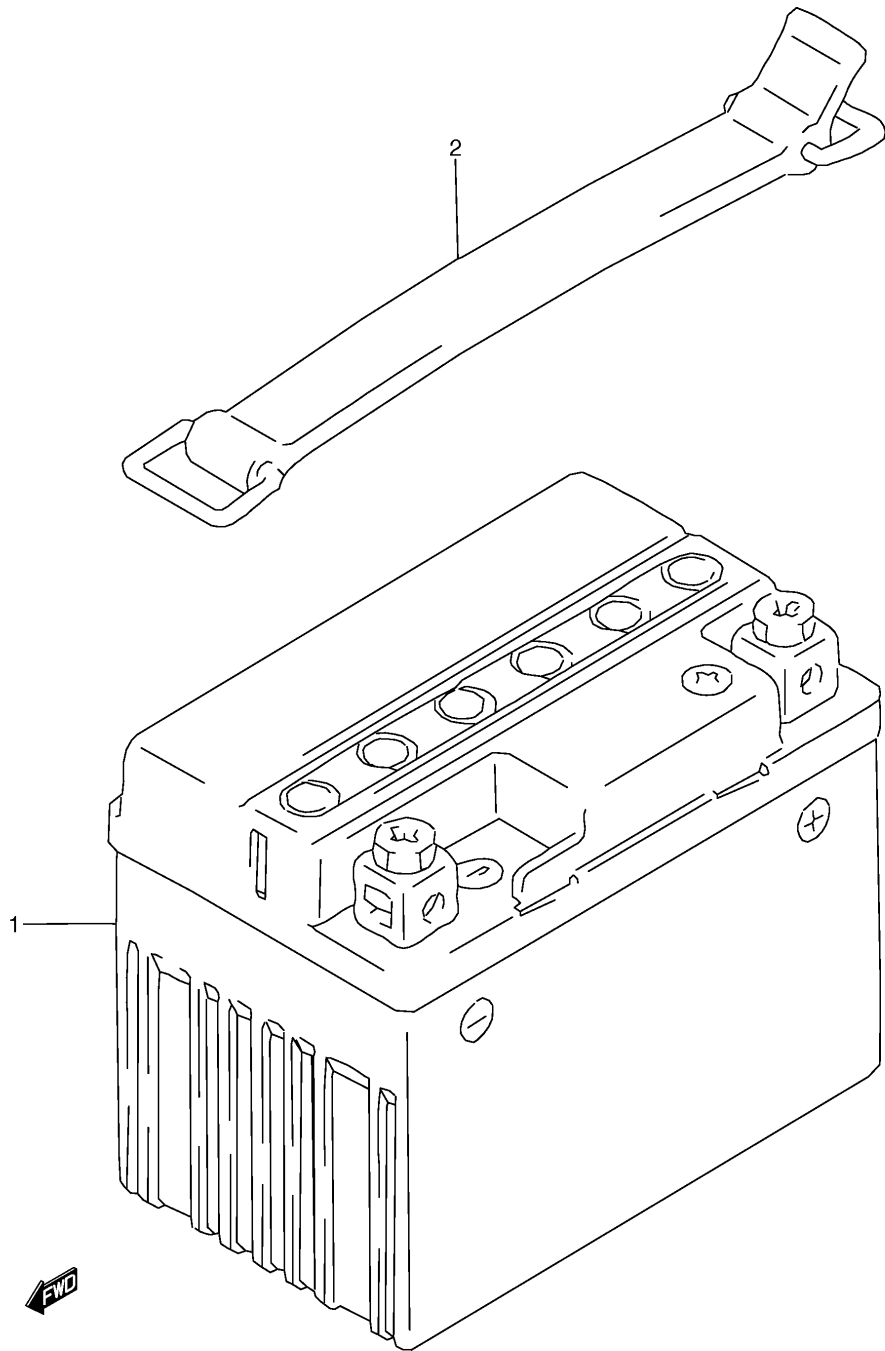


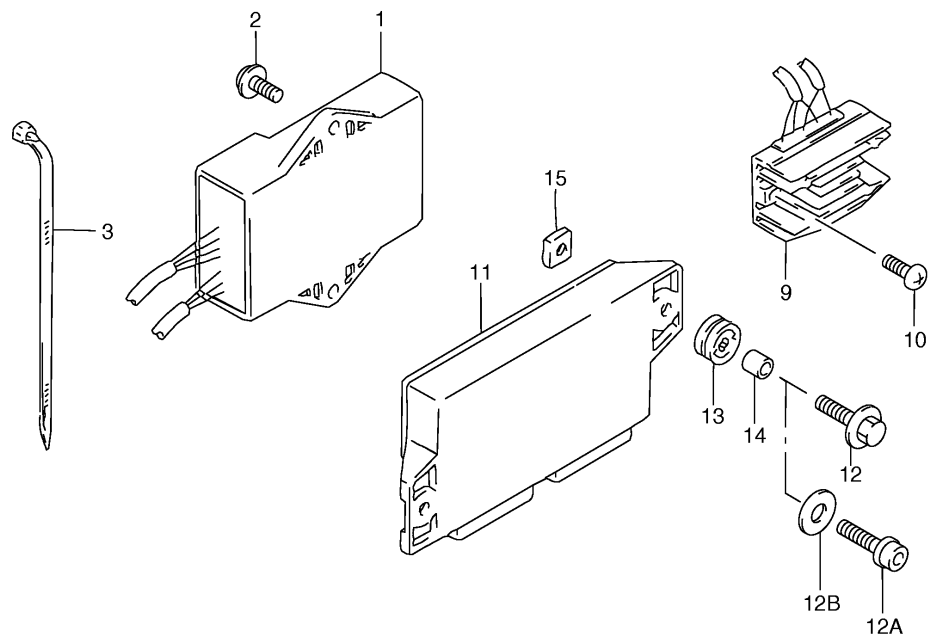


N° Réf.	N° Pièce	Désignation
---------	----------	-------------

1	32900-22D01	Cdi Unit
2	02112-16166	Screw
3	09407-18402	Clamp (l:165)
4	33410-12C00	Coil Assy, Ignition No.1
5	09180-06190	Spacer (6.1x9x22.5)
6	01517-06458	Bolt
7	33510-20A00	Cap, Spark Plug
8	33542-38B00	Seal, High Tension Cord
9	32800-22D00	Rectifier Assy
10	02112-36256	Screw
11	32910-22D10	Control Unit
11	32910-22D30	Control Unit
11	32910-23D00	Control Unit
12	09116-06087	Bolt
13	09320-09009	Cushion
14	09180-06152	Spacer (6.4x9x8.5)
15	09152-06023	Nut

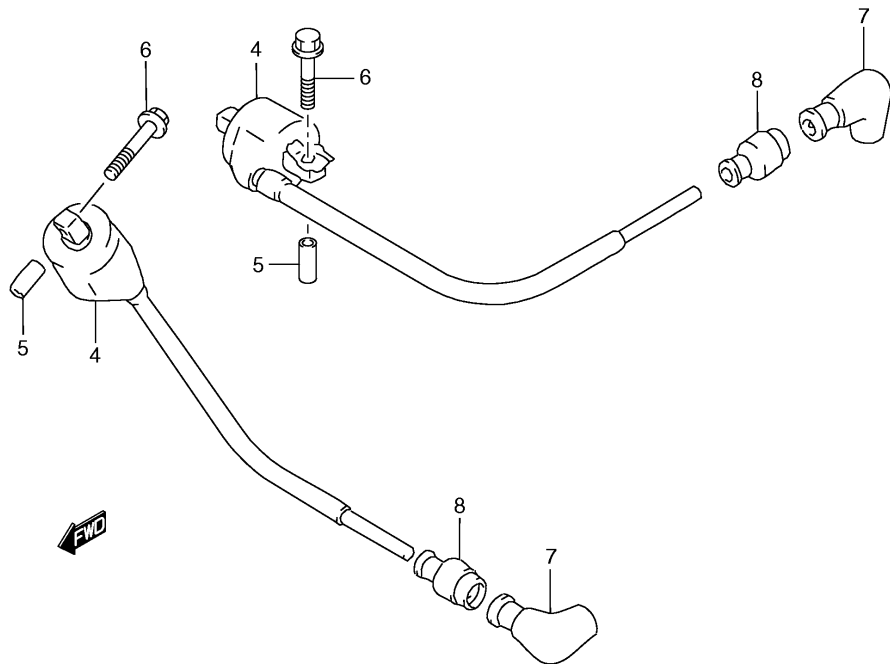

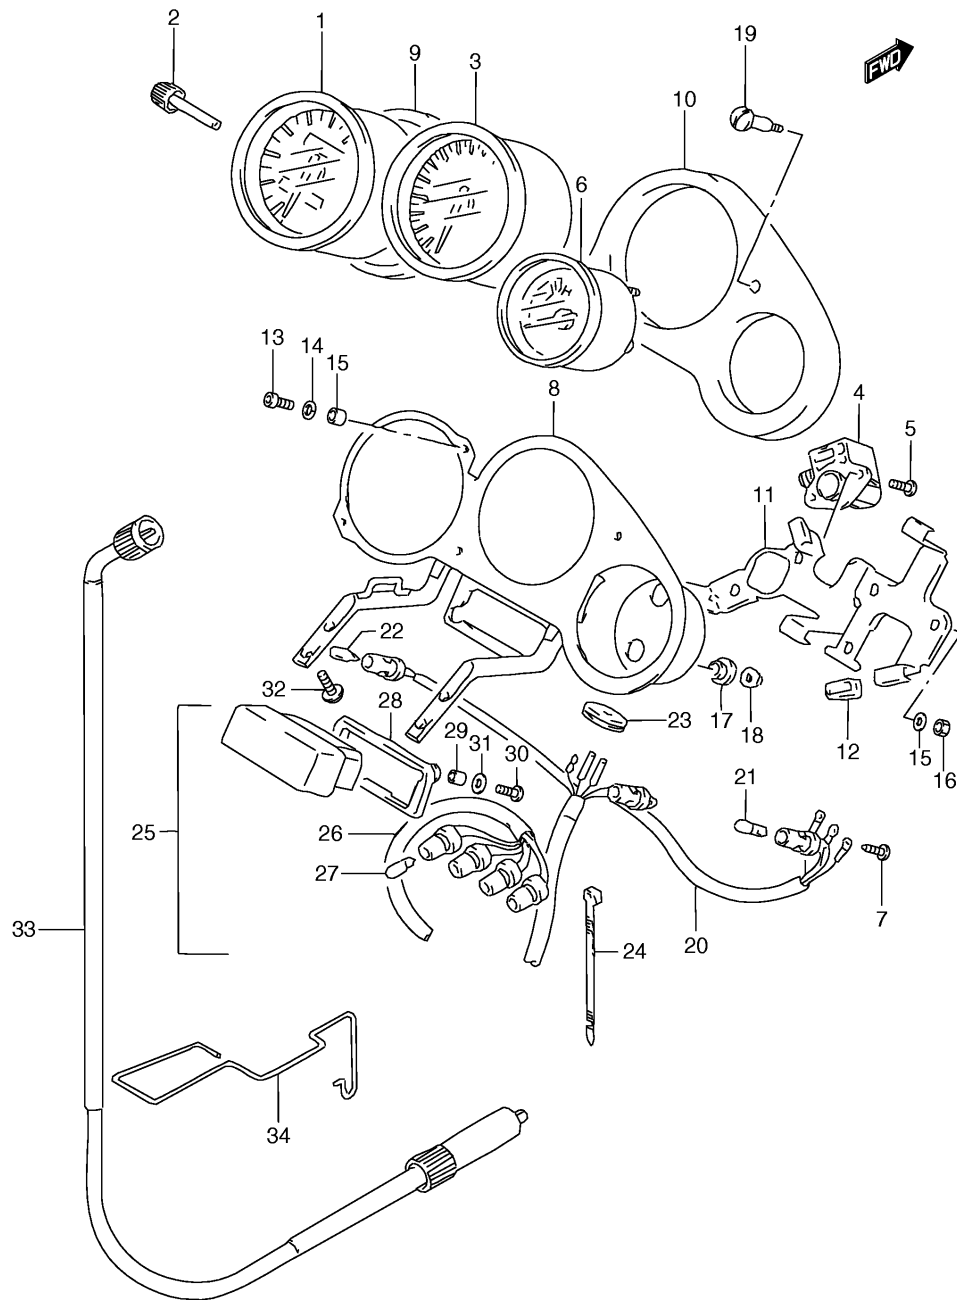


N° Réf.	N° Pièce	Désignation
1	34110-22D10	Speedometer (kilo)
1	34110-22D30	Speedometer (mile/kilo)
2	34124-27A00	Knob, Trip
3	34210-22D01	Tachometer
4	34131-27A00	Box, Meter Gear
5	02112-34103	Screw
6	34420-12C10	Meter, Temperature
7	34383-27A00	Screw
8	34950-22D02	Plate, Setting
9	34288-22D00	Cushion, Speedometer
10	34257-22D00	Cushion
11	34111-22D00	Bracket, Speedometer
12	34189-27A00	Cushion
13	34199-22D00	Screw
14	34181-22D00	Lock Washer
15	08321-01043	Washer
16	08310-21035	Nut
17	34189-12C10	Cushion
18	34185-14A00	Nut
19	34299-22D00	Screw
20	34170-22D00	Socket
21	09471-12100	Bulb (12v,1.7w)
22	09471-12085	Bulb (12v,3w)
23	34414-16700	Grommet
24	09404-10404	Clamp
25	36380-22D00	Box Assy, Pilot Lamp
25	36380-22D10	Box Assy, Pilot Lamp
26	36394-22D00	• . Socket
27	09471-12118	• . Bulb (13.5v,2w)
28	36382-22D00	Holder, Pilot Box
29	09180-04017	Spacer (4.5x6.5x9)
30	09132-03008	Tapping Screw (l:16)
31	08322-21045	Washer
32	01517-06125	Bolt
33	34910-22D00	Cable Assy, Speedometer
34	34938-22D20	Guide, Speedometer Cable

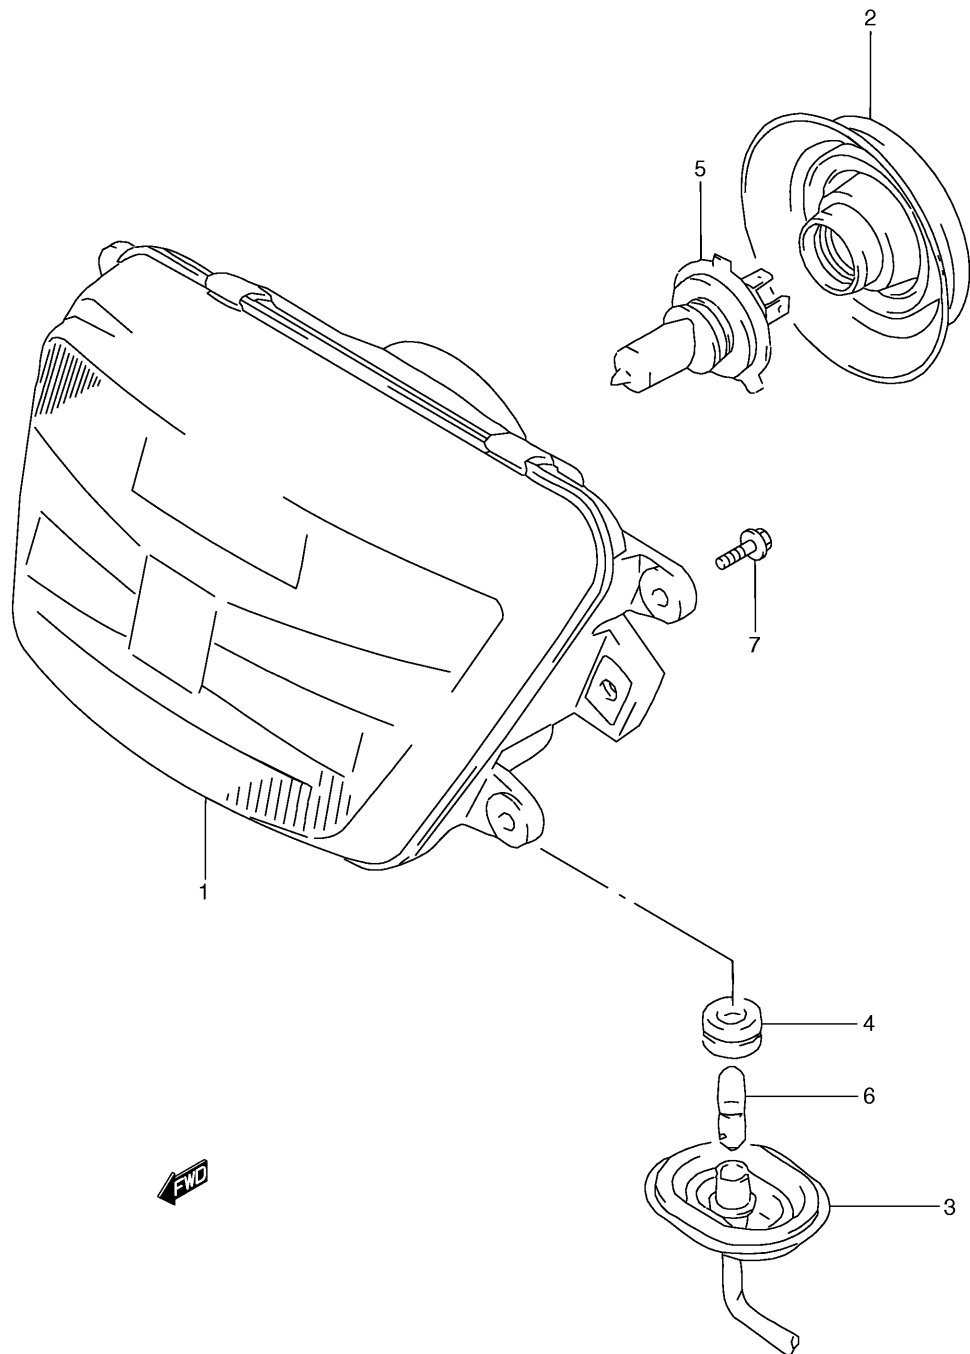


N° Réf.	N° Pièce	Désignation
1	35121-22D00	Lamp Unit, Headlamp
1	35121-22D10	Lamp Unit, Headlamp
1	35121-22D20	Lamp Unit, Headlamp
2	35173-26B20	Cover, Socket
3	36118-12C00	Socket
4	36116-22630	Joint Rubber
5	09471-12060	Bulb (12v,60/55w,h4)
5	09471-12061	Bulb (12v,60/55w)
6	09471-12063	Bulb (12v,4w)
7	02112-75165	Screw



N° Réf.	N° Pièce	Désignation
1	35100-19D10	Headlamp Assy
2	35173-26B20	• . Cover, Socket
3	09471-12060	• . Bulb (12v,60/55w,h4)
4	02142-05163	Screw


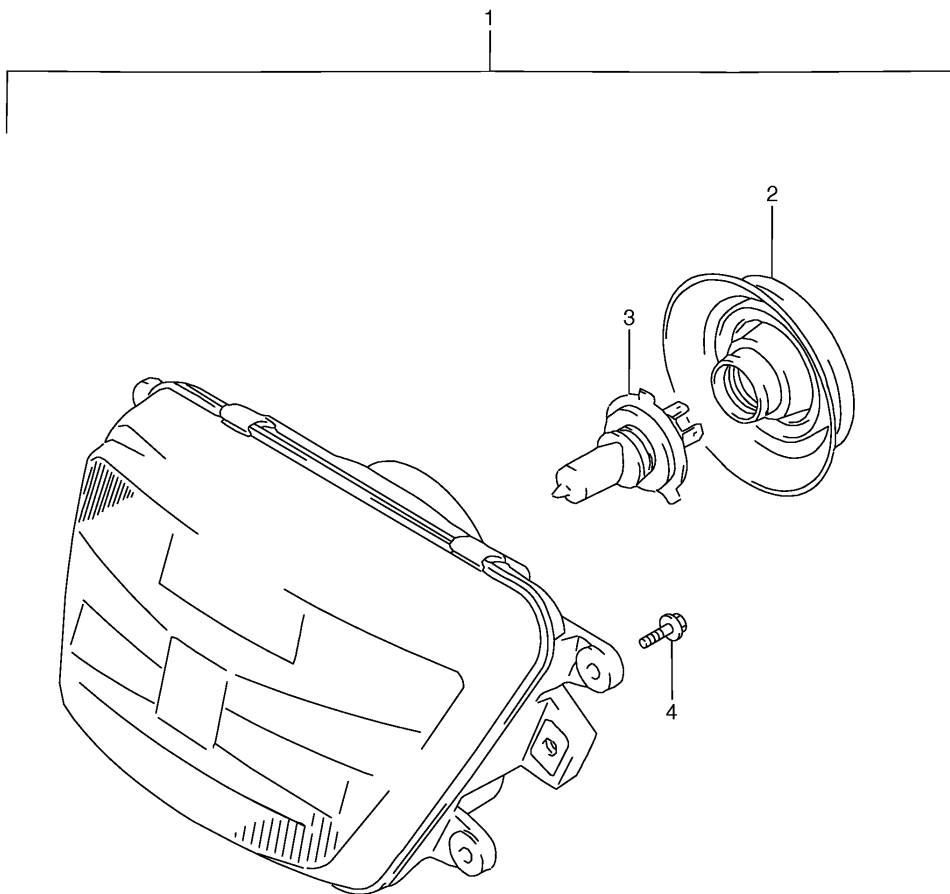


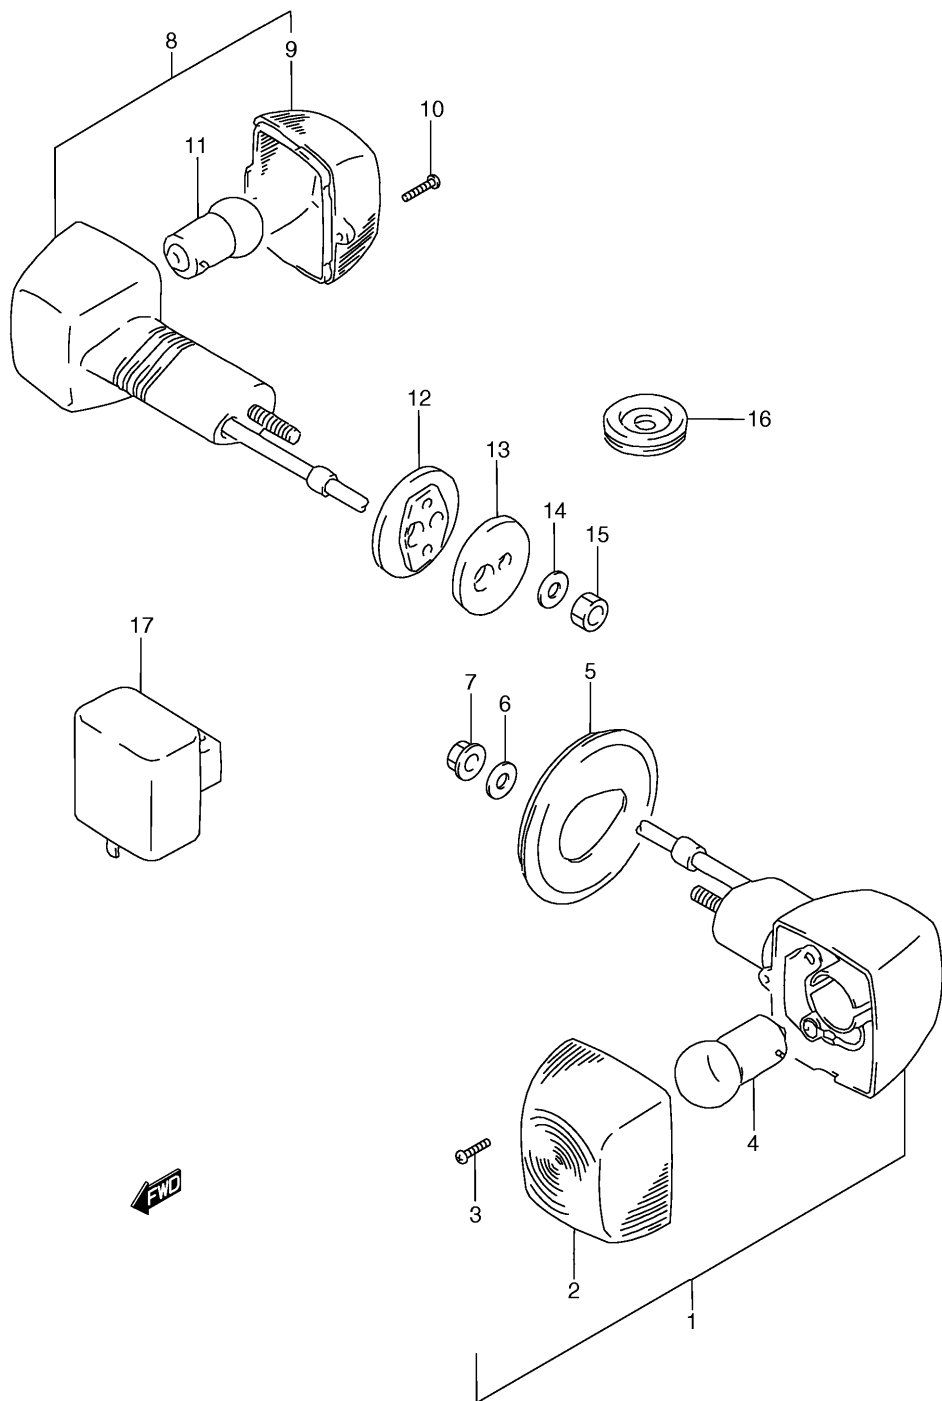


N° Réf.	N° Pièce	Désignation
1	35601-22D00	Lamp Assy, Front Turn Rh
1	35602-22D00	Lamp Assy, Front Turn Lh
2	35652-06C00	• . Lens
3	35625-01A00	• . Screw
4	09471-12162	• . Bulb (12v,15w)
5	35674-07D00	Grommet, Turn Signal Lamp
6	09160-06093	Washer (6.2x14x2)
7	08316-20063	Nut
8	35603-07D00	Lamp Assy, Rear Turn Rh
8	35604-07D00	Lamp Assy, Rear Turn Lh
9	35652-06C00	• . Lens
10	35625-01A00	• . Screw
11	09471-12162	• . Bulb (12v,15w)
12	35695-07D00	Spacer, Rear Turn Signal
13	35695-07D10	Spacer, Rear Turn Signal
14	08322-01063	Washer
15	08310-00063	Nut
16	09308-07013	Grommet
17	38610-10D00	Relay Assy, Turn Signal


N° Réf. N° Pièce Désignation

1	35601-12C11	Lamp Assy, Front Turn
2	35612-17C20	. . Lens
3	35613-27A00	. . Gasket
4	35623-27A00	. . Screw, Inner (3x30)
5	35725-40511	. . Screw, Outer (3x20)
6	35627-27A02	. . Gasket
7	09471-12045	. . Bulb (12v/21w)
8	35674-27A01	Grommet
9	08316-20103	Nut
10	35603-17C41-999	Lamp Assy, Rear Turn
11	35603-17C51-999	Lamp Assy, Rear Turn
12	35652-17C20	. . Lens
13	35613-27A00	. . Gasket
14	35623-27A00	. . Screw, Inner (3x20)
15	35725-40511	. . Screw, Outer (3x20)
16	35627-27A02	. . Gasket
17	09471-12045	Bulb (12v,21w)
18	35695-17C00	Spacer, Rear
19	09160-10094	Washer (10.5x30x3.2)
20	08316-26105	Nut
21	09308-07013	Grommet
22	38610-31X50	Relay, Turn Signal
	38610-45091	Relay, Turn Signal

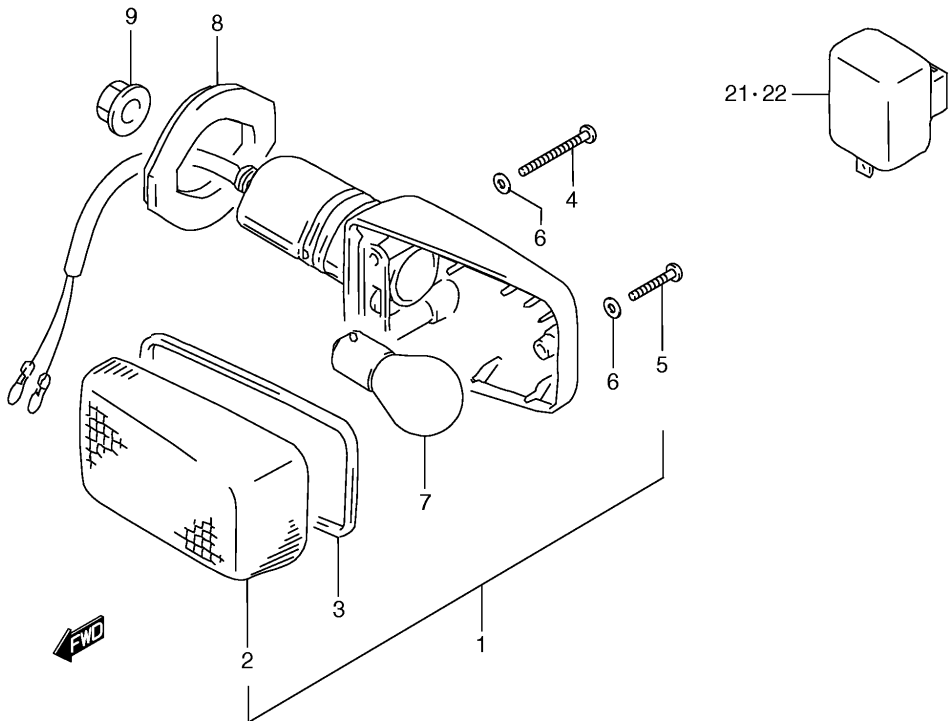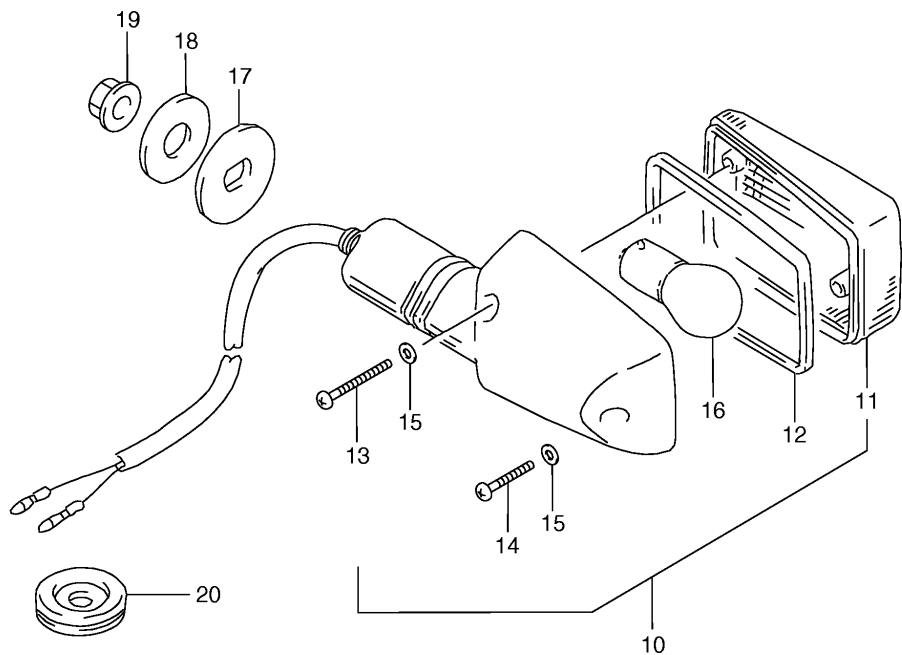


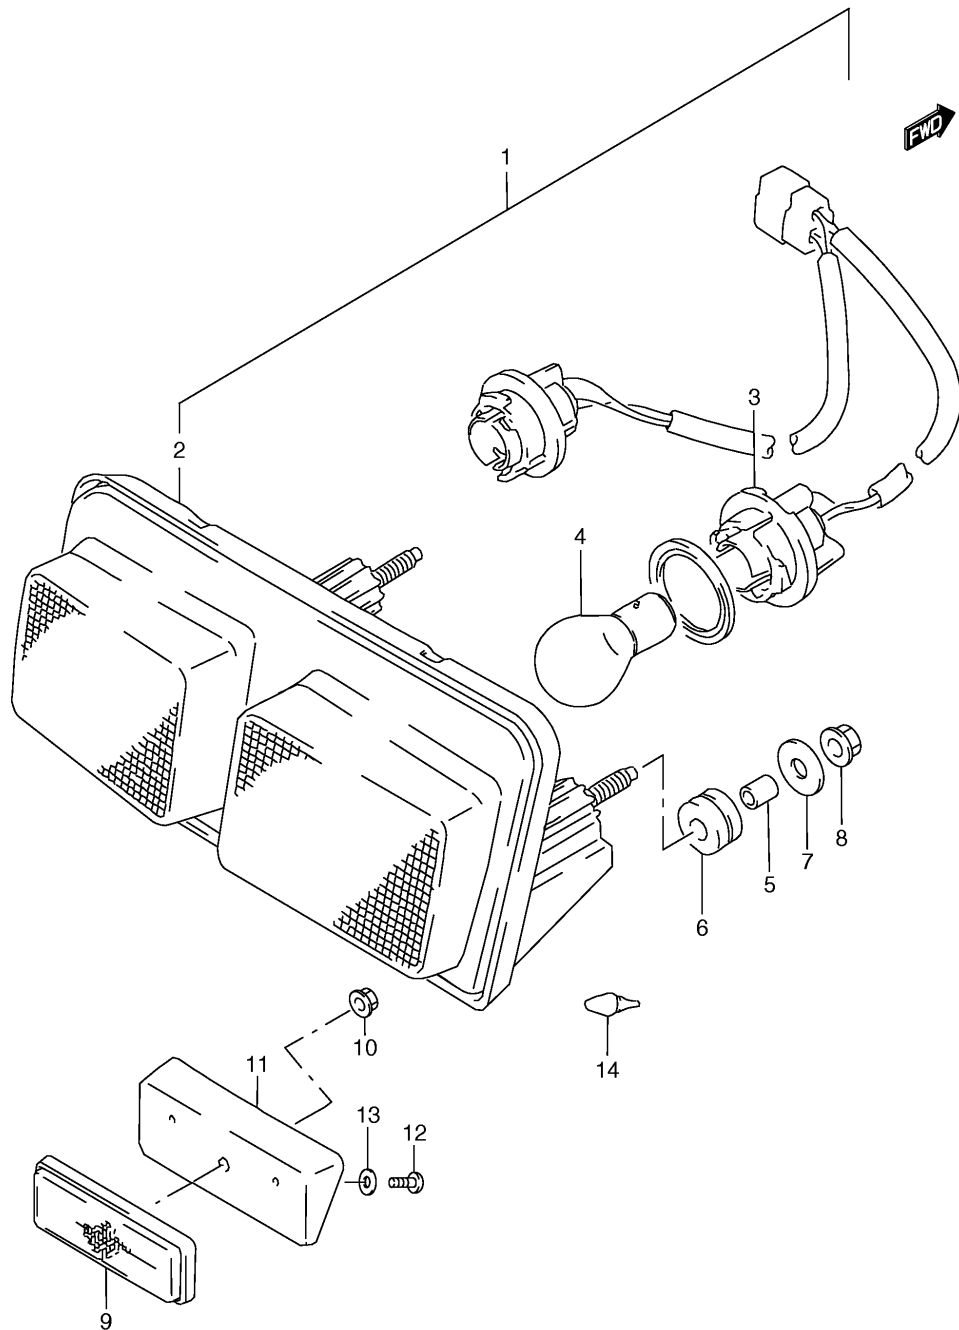

N° Réf.	N° Pièce	Désignation
1	35710-22D00	Lamp Assy, Rear Combination
2	35740-22D00	. . Lamp Unit
3	35718-22D00	. . Socket Assy
4	09471-12083	. . Bulb (12v,21/5w)
5	09180-06044	Spacer
6	09320-08048	Cushion
7	09160-06056	Washer
8	08316-16066	Nut
9	35970-00A21	Reflector Assy, Rear
10	08316-26056	Nut
11	35977-12C00	Spacer, Rear Reflector
12	03541-04123	Screw, Spacer
13	08322-21043	Washer
14	09321-06026	Cushion, License Plate

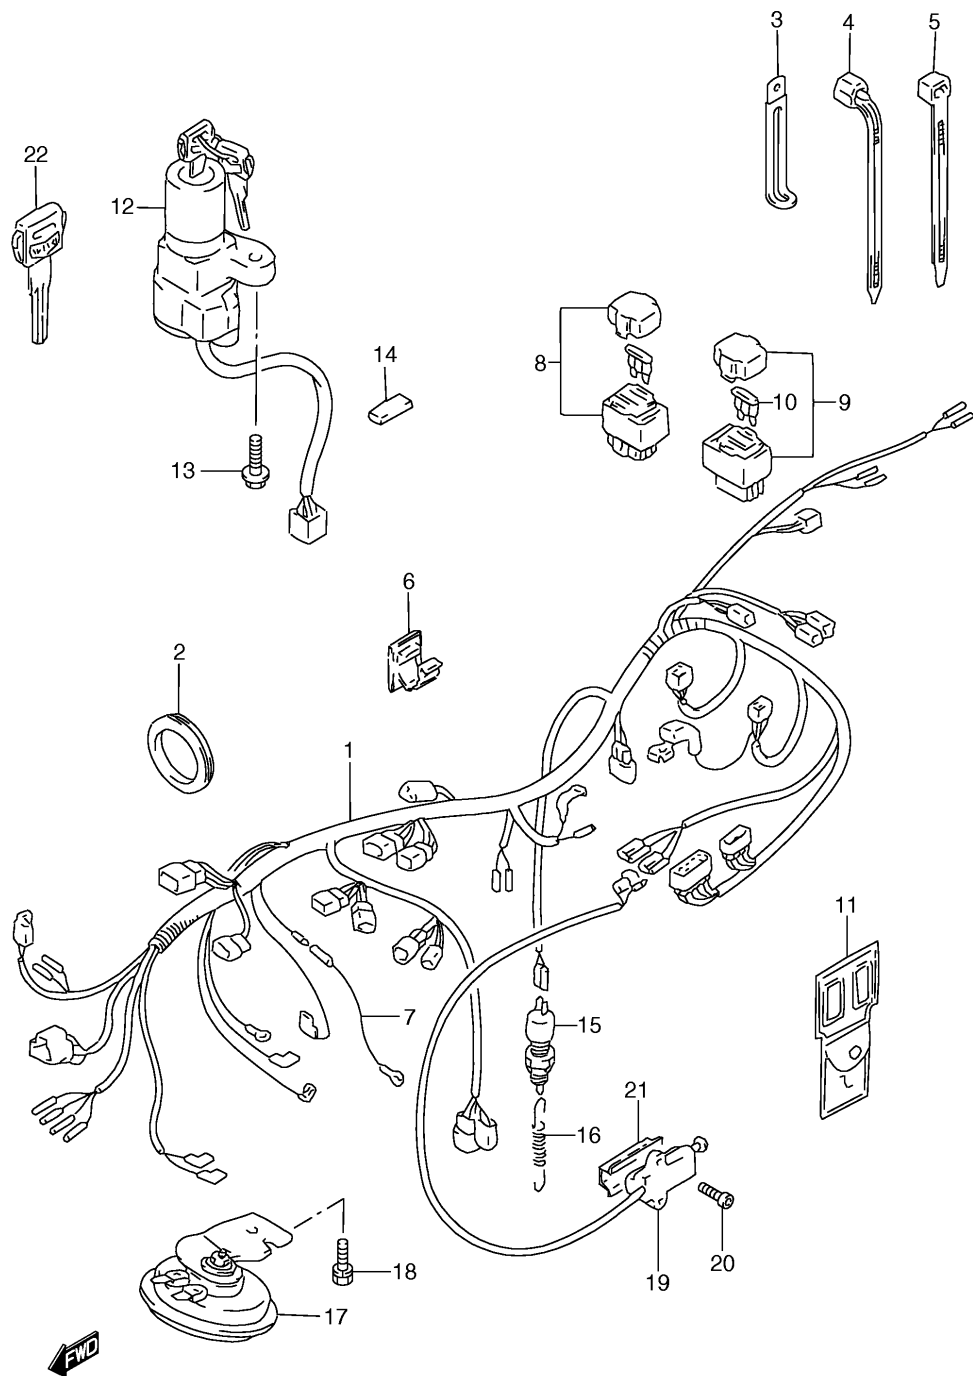


N° Réf.	N° Pièce	Désignation
1	36610-22D00	Harness, Wiring
1	36610-22D20	Harness, Wiring
1	36610-22D30	Harness, Wiring
2	09320-37001	Grommet
3	09404-06402	Clamp (l:60)
3	09404-06429	Clamp (l:60)
3	09404-06415	Clamp (l:95)
3	09404-06433	Clamp (l:95)
3	09404-06420	Clamp (l:90)
3	09404-06435	Clamp (l:135)
3	09404-08405	Clamp (l:82)
3	09404-08418	Clamp (l:82)
4	09407-14403	Clamp (l:125)
4	09407-11401	Clamp (l:95)
4	09407-18403	Clamp (l:165)
5	09407-10403	Clamp
6	09408-00098	Clamp
7	36851-02900	Wire, Lead
8	36740-22D00	Case Assy, Fuse No.2
9	36740-12C01	Box Assy, Fuse
10	09481-20101	• . Fuse (20a)
10	09481-05101	• . Fuse (5a)
11	36738-22D00	Back, Spare Fuse
12	37100-12C03	Lock Assy, Steering
13	09139-06026	Screw
14	33651-37000	Cushion, Ignition
15	37740-24A00	Switch Assy, Stop Lamp
16	09443-06012	Spring
17	38500-22D00	Horn Assy
17	38500-22D20	Horn Assy
18	01134-06125	Bolt (6x12)
19	37840-32C01	Switch Assy, Side Stand
20	09106-06055	Bolt (6x12)
21	37841-22D00	Heat Shield, Switch
22	37146-26D10	Key, Blank

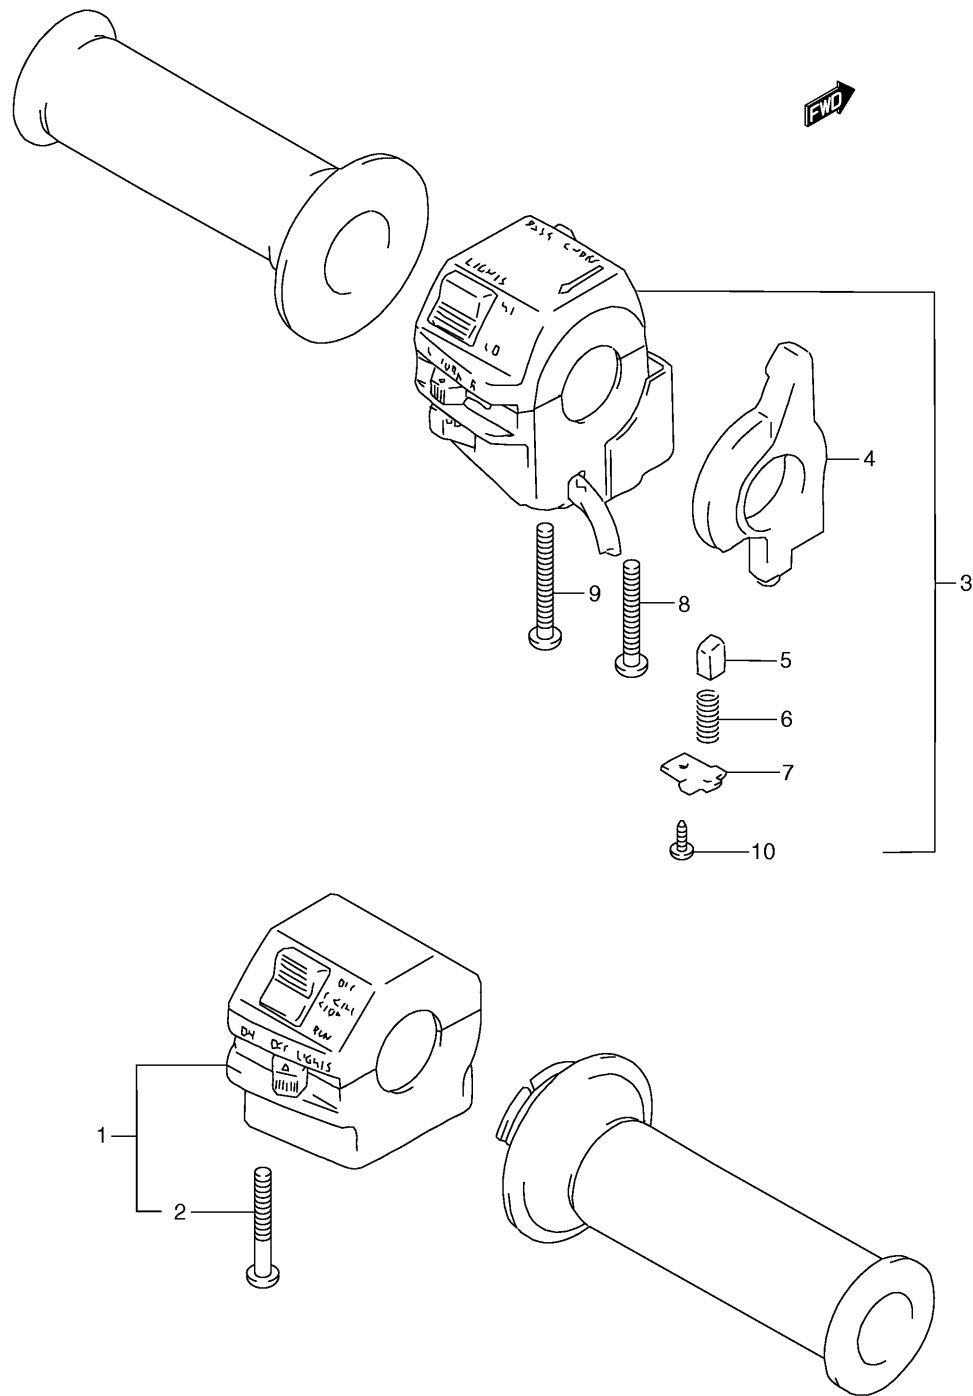


N° Réf.	N° Pièce	Désignation
1	37200-12C22	Switch Assy, Handle Rh
2	02112-05455	. . Screw
3	37400-32B01	Switch Assy, Handle Lh
4	37481-30B01	. . Lever, Choke
5	37482-30B00	. . Piece, Slide
6	37483-30B00	. . Spring
7	37486-30B00	. . Plate
8	02112-05405	. . Screw
9	02112-05455	. . Screw
10	03511-04123	. . Screw



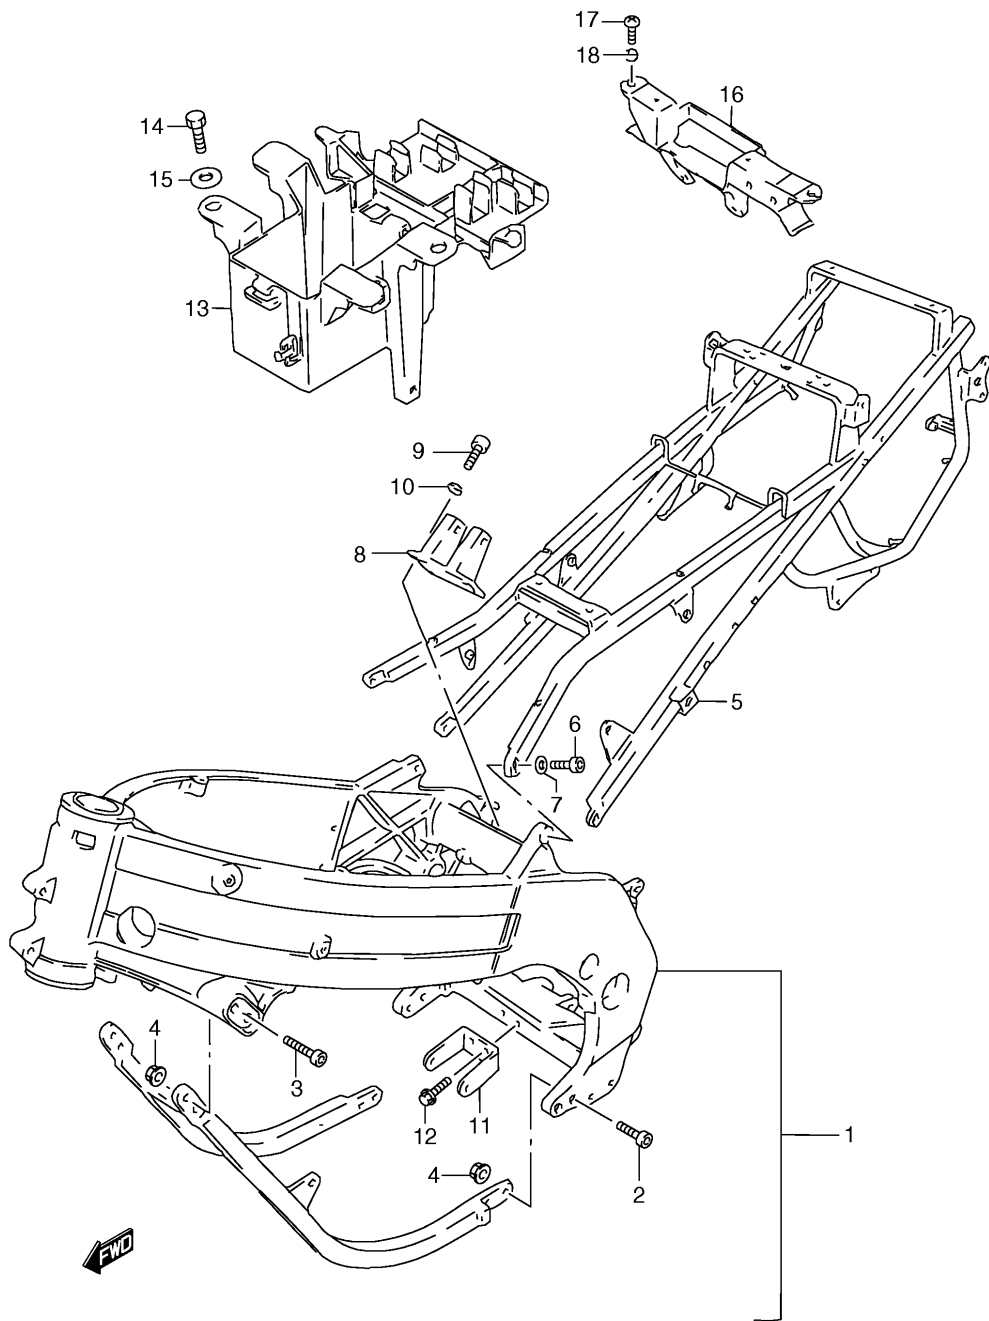

N° Réf.	N° Pièce	Désignation
4	08319-31087	. . Nut
6	07130-10207	Bolt
7	09164-10005	Washer
10	09164-08015	Washer
11	41911-12C00	Plate, Engine Mounting
13	41540-12C02	Holder, Battery
15	09169-06031	Washer
16	47411-22D00	Holder, Electric Parts




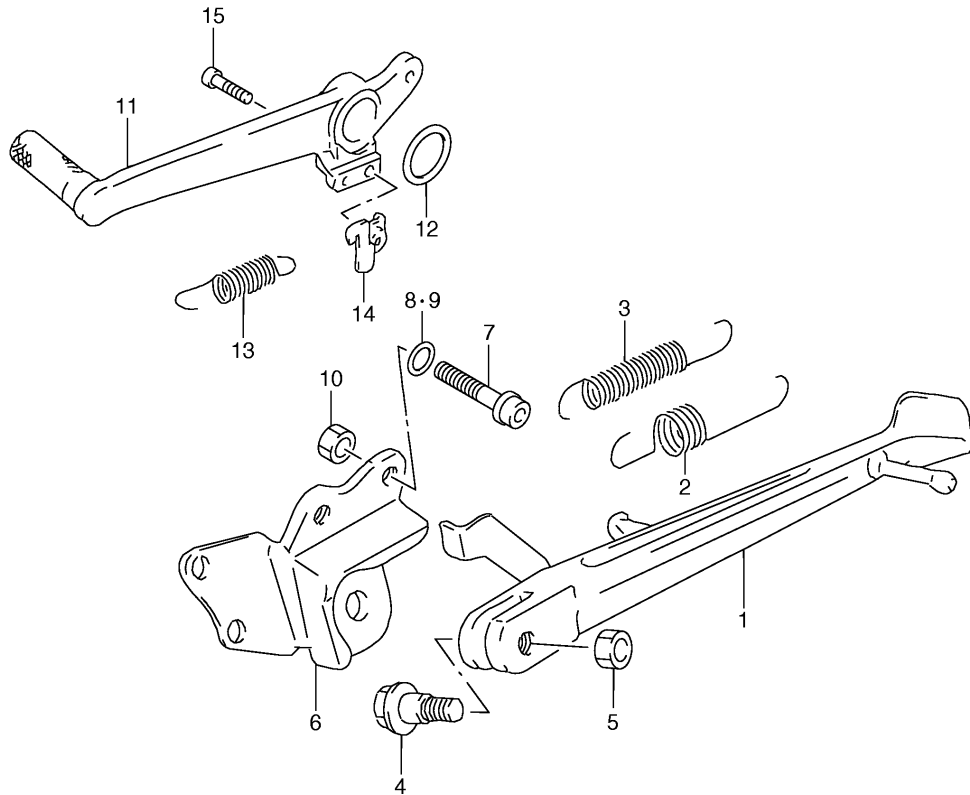


N° Réf.	N° Pièce	Désignation
1	42310-22D00	Stand, Prop
2	09443-14042	Spring, Inner
3	09443-19011	Spring, Outer
4	09111-10046	Bolt
5	08310-22105	Nut
6	42330-22D01	Bracket, Prop Stand
7	07130-08357	Bolt
8	09164-08015	Washer
9	08322-01087	Washer
10	08319-21088	Nut
11	43111-22D00	Pedal, Brake
12	09161-18003	Washer (18.2x27x1)
13	09443-13017	Spring
14	43560-12C00	Bracket, Stop Lamp Switch
15	02112-05167	Screw

Spring




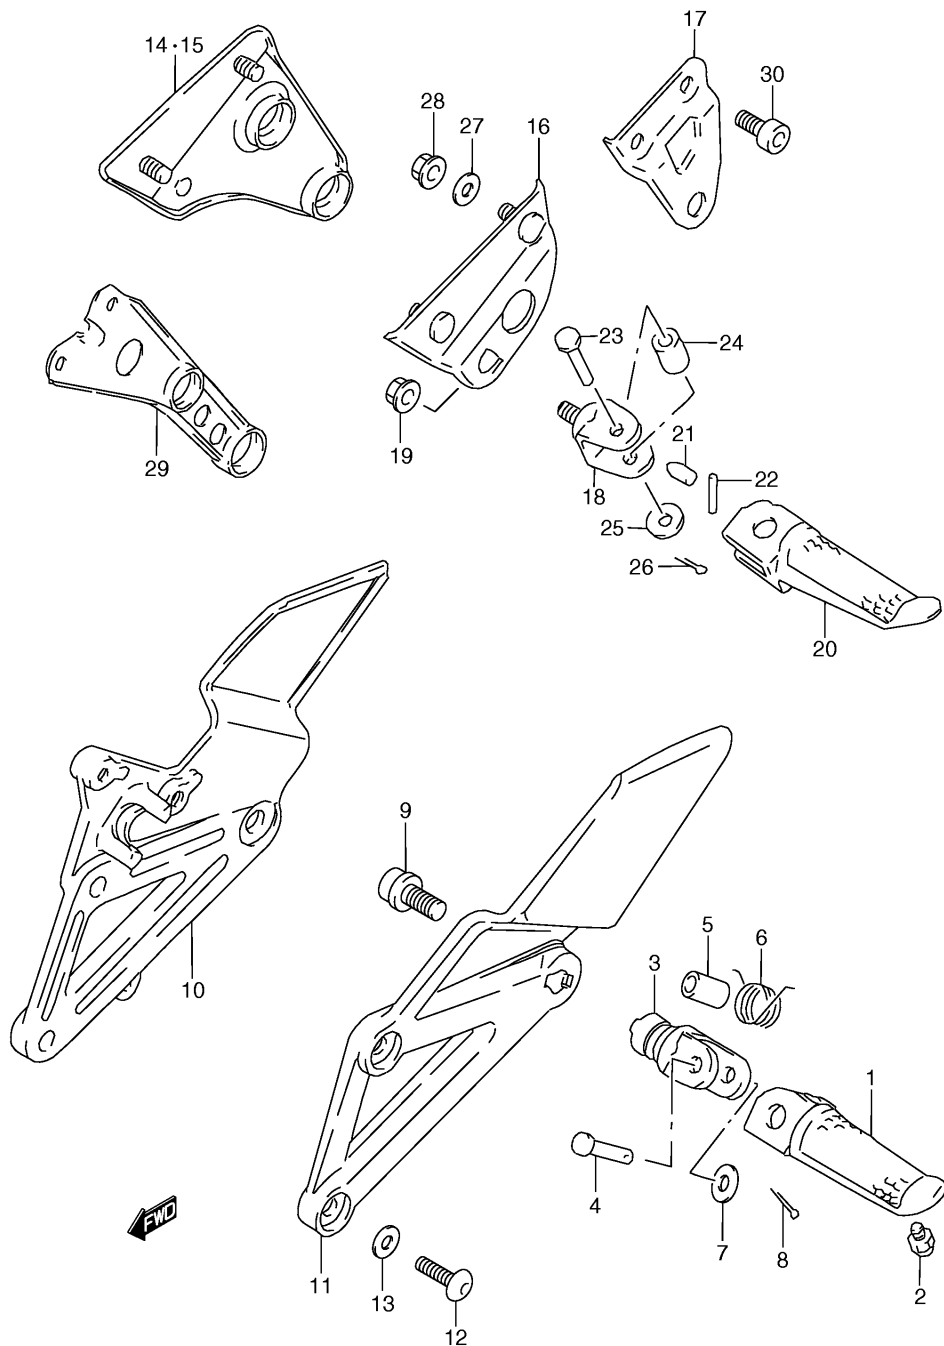


N° Réf.	N° Pièce	Désignation
1	43511-32C00	Bar, Front Footrest Rh
1	43521-32C00	Bar, Front Footrest Lh
2	09104-06006	Bolt (6x6)
3	43530-06C01	Holder, Footrest
4	09200-08067	Pin
5	09180-08149	Spacer (8.1x12x22)
6	09448-19020	Spring
7	08322-01087	Washer
8	04111-25158	Cotter Pin
9	09106-10052	Bolt (10x24)
10	43811-22D00	Bracket, Front Footrest Rh
11	43821-22D00	Bracket, Front Footrest Lh
12	09106-08058	Bolt
13	09164-08015	Washer
14	43600-22D00	Footrest Assy, Pillion Rh
16	43700-22D00	Footrest Assy, Pillion Lh
18	43610-32C02	• . Holder, Pillion Footrest
19	08319-31105	• . Nut
20	43611-32C00	• . Bar, Pillion Footrest Rh
20	43621-32C00	• . Bar, Pillion Footrest Lh
21	43691-17C00	• . Cushion, Footrest Holder
22	43612-17D00	• . Roller
23	09200-08067	• . Pin
24	09180-08149	• . Spacer (8.1x12x22)
25	08322-01087	• . Washer
26	04111-25158	• . Cotter Pin
27	09164-08015	Washer
28	08316-20083	Nut

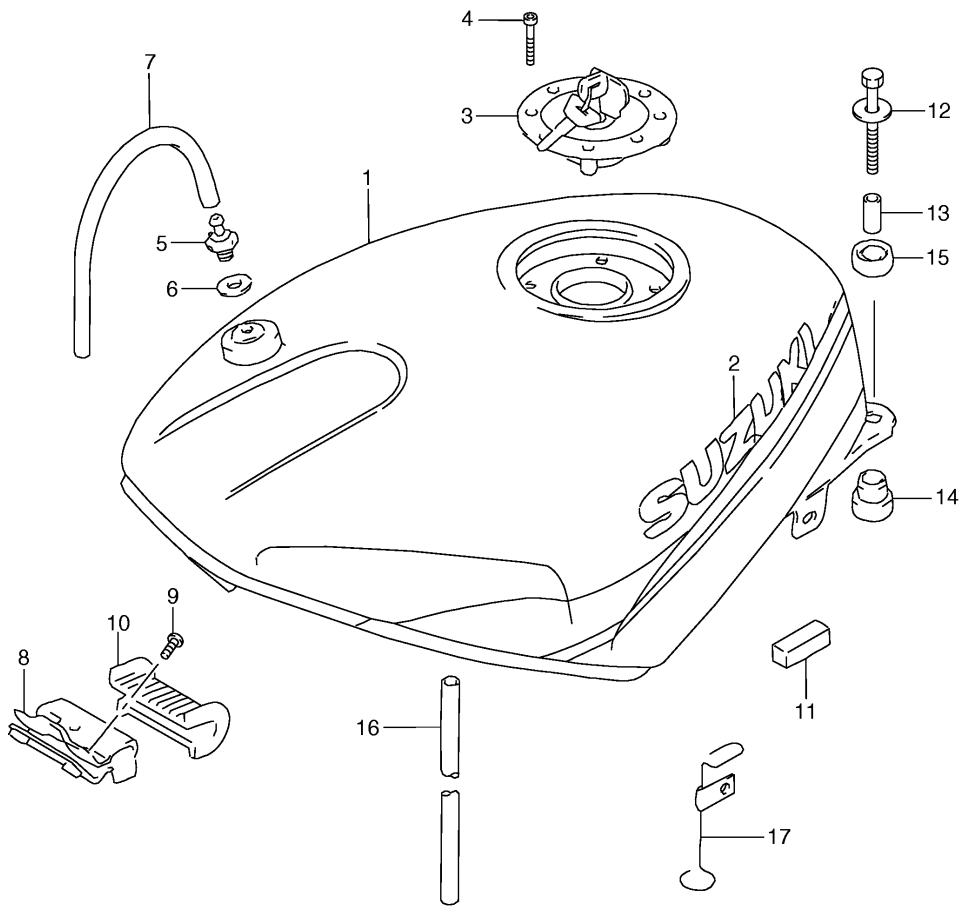

N° Réf.	N° Pièce	Désignation
1	44100-22D00-33J	Tank Assy, Fuel (black)
1	44100-22D00-3SH	Tank Assy, Fuel
1	44100-22D20-33J	Tank Assy, Fuel (black)
1	44100-22D20-3SH	Tank Assy, Fuel
2	68111-43400-0FP	• . Emblem (silver)
2	68111-43400-0JW	• . Emblem (white)
3	44201-01851	Cap Set, Fuel Tank
4	09106-05017	Bolt (1:20)
5	44240-06B10	Plug, Fuel Tank Breather
6	09168-12012	Gasket
7	09352-50823-600	Hose (5x8.2x600)
8	44521-32C00	Bracket, Fuel Tank
9	02142-06167	Screw
10	44511-32C00	Cushion, Fuel Tank Front
11	44545-20A00	Cushion, Fuel Tank Side
12	01550-06307	Bolt
13	09180-06072	Spacer (6.4x9x18)
14	09320-10020	Cushion
15	09320-14013	Cushion
16	09352-50823-00B	Hose (5x8.2x2000)
17	44480-22D00	Guide, Drain Hose

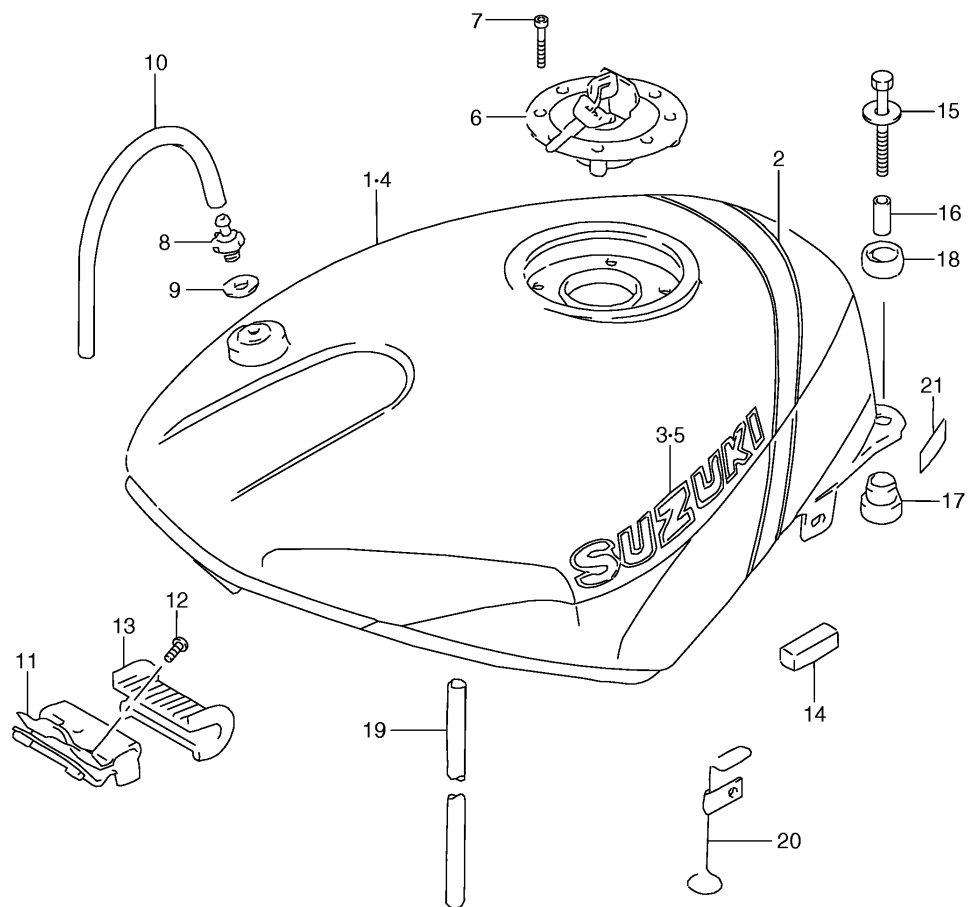


N° Réf.	N° Pièce	Désignation
1	44100-22D80-L99	Tank Assy, Fuel
1	44100-23D00-L99	Tank Assy, Fuel
2	68115-22D00-N13	• . Tape, Fuel Tank
3	68181-32B00-0JW	• . Emblem (white)
4	44100-22D90-13Z	Tank Assy, Fuel (black)
4	44100-23D10-13Z	Tank Assy, Fuel (black)
5	68111-24D00-1NF	• . Emblem
6	44201-01851	Cap Set, Fuel Tank
7	09106-05017	Bolt (1:20)
8	44240-06B10	Plug, Fuel Tank Breather
9	09168-12012	Gasket
10	09352-50823-600	Hose (5x8.2x600)
11	44521-32C00	Bracket, Fuel Tank
12	02142-06167	Screw
13	44511-32C00	Cushion, Fuel Tank Front
14	44545-20A00	Cushion, Fuel Tank Side
15	01550-06307	Bolt
16	09180-06072	Spacer (6.4x9x18)
17	09320-10020	Cushion
18	09320-14013	Cushion
19	09352-50823-00B	Hose (5x8.2x2000)
20	44480-22D00	Guide, Drain Hose
21	94461-08C00	Protector

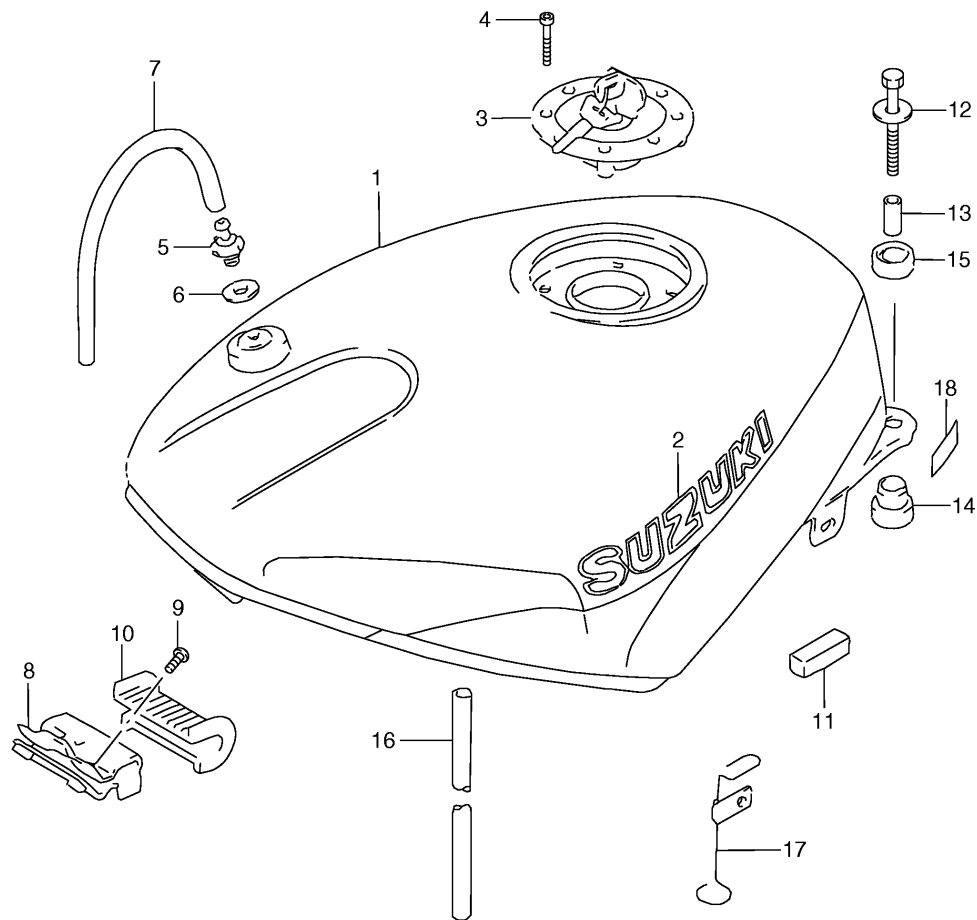


N° Réf.	N° Pièce	Désignation
1	44100-23D40-1LE	Tank Assy, Fuel (blue)
2	68111-12C00-0JW	• Emblem (white)
2	68111-12C00-0SF	• Emblem (silver)
2	68111-12C00-17U	• Emblem (gray)
3	44201-01852	Cap Set, Fuel Tank
4	09106-05017	Bolt (l:20)
5	44240-06B10	Plug, Fuel Tank Breather
6	09168-12012	Gasket
7	09352-50823-600	Hose (5x8.2x600)
8	44521-32C00	Bracket, Fuel Tank
11	44545-20A00	Cushion, Fuel Tank Side
13	09180-06072	Spacer (6.4x9x18)
14	09320-10020	Cushion
15	09320-14013	Cushion
16	09352-50823-00B	Hose (5x8.2x2000)
17	44480-22D00	Guide, Drain Hose
18	94461-08C00	Protector




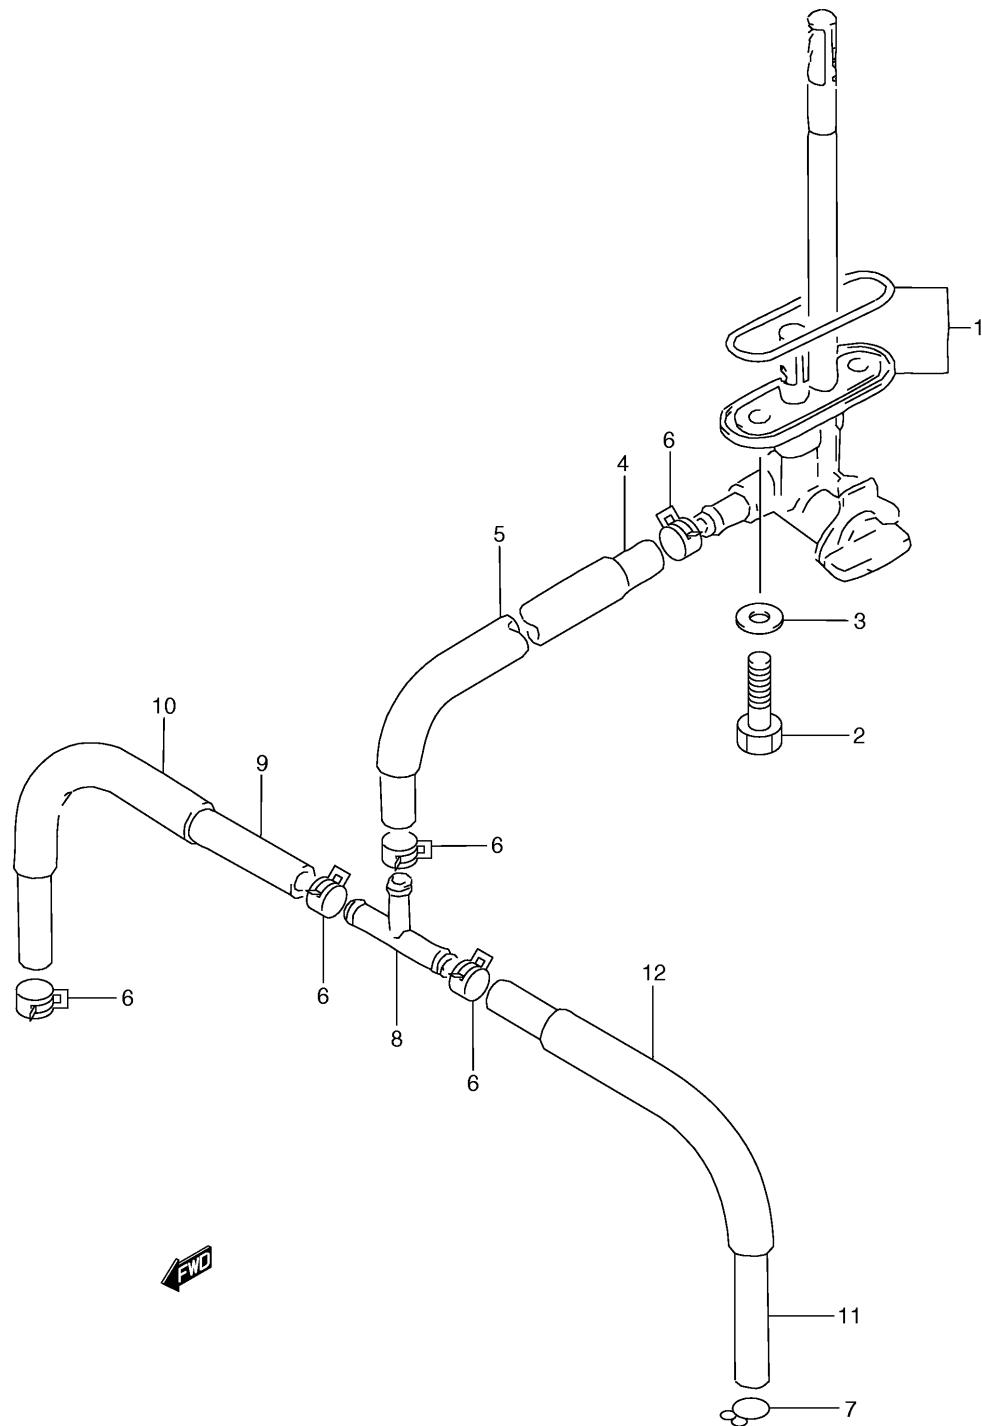

N° Réf.	N° Pièce	Désignation
1	44300-22D00	Cock Assy, Fuel
2	09128-06006	Screw (6x20)
3	09168-06026	Gasket (6.4x11.5x0.8)
4	09354-70113-600	Hose (7x11x600)
5	09352-13162-600	Protector (13.5x16.5x600)
6	09401-10409	Clip
7	09401-12403	Clip
8	09367-08004	3 Way
9	09354-70113-600	Hose (7x11x600)
10	09352-13162-600	Protector (13.5x16.5x600)
11	09354-70113-600	Hose (7x11x600)
12	09352-13162-600	Protector (13.5x16.5x600)

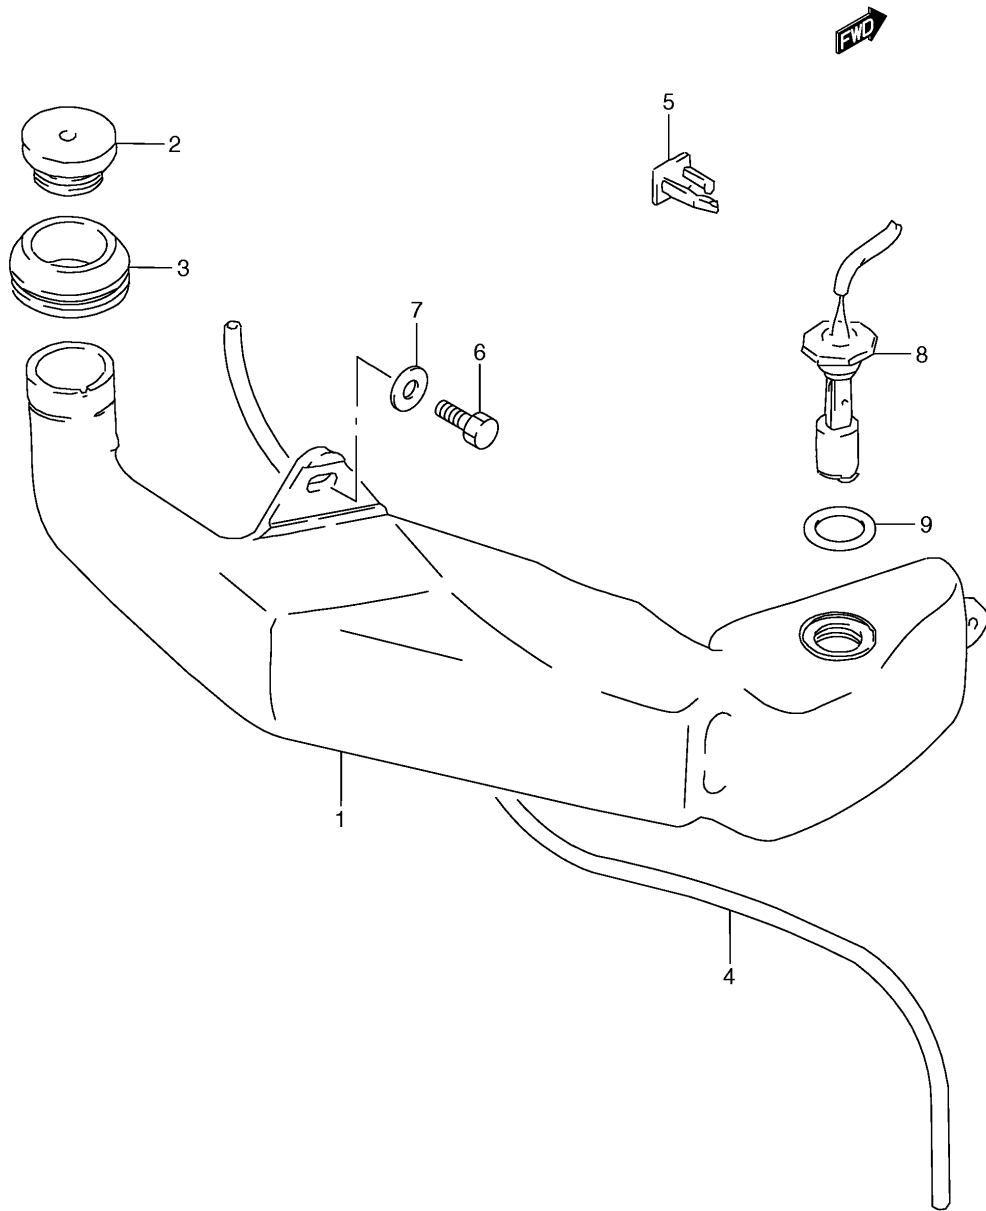


N° Réf.	N° Pièce	Désignation
1	44611-22D00	Tank, Oil
2	44651-04701	Cap, Oil Tank
3	44667-12C00	Rubber, Oil Tank Inlet
4	09352-50823-600	Hose (5x8.2x600)
4	09352-50823-00B	Hose (5x8.2x2000)
5	09408-00146	Clamp
6	09116-06010	Bolt (6x20)
7	09160-06028	Washer (6.5x18x1)
8	37880-22D00	Switch Assy, Oil Level
9	44643-31000	Gasket

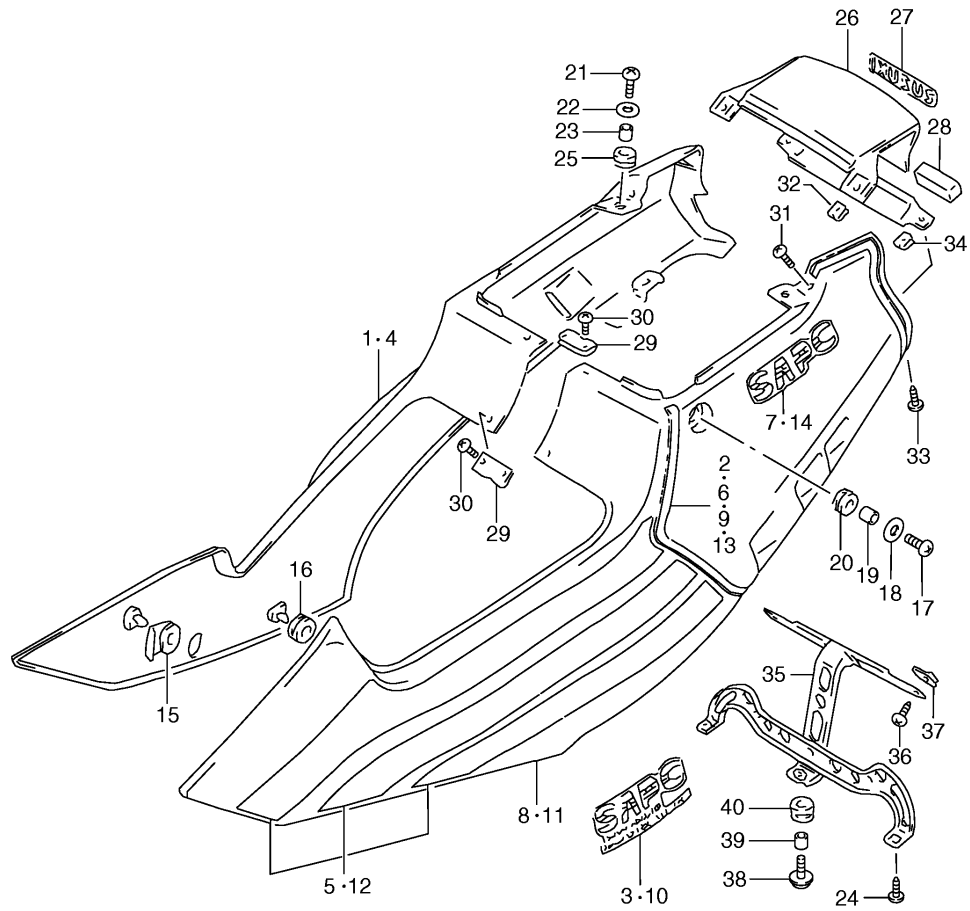


N° Réf.	N° Pièce	Désignation
1	47110-22D11-C67	Cover, Frame Rh
2	68135-22D20-0FP	• . Tape, Frame Cover Rh (silver)
3	68131-22D10-3WC	• . Emblem, Frame Cover
4	47110-22D20-0JW	Cover, Frame Rh (white)
5	68130-22D00-C21	• . Tape Set, Frame Cover Rh
6	68135-22D10-0NE	• . Tape, Frame Cover Rh (blue)
7	68131-22D00-3RZ	• . Emblem, Frame Cover
8	47210-22D11-C67	Cover, Frame Lh
9	68145-22D20-0FP	• . Tape, Frame Cover Lh (silver)
10	68131-22D10-3WC	• . Emblem, Frame Cover
11	47210-22D20-0JW	Cover, Frame Lh (white)
12	68140-22D00-C21	• . Tape Set, Frame Cover Lh
13	68145-22D10-0NE	• . Tape, Frame Cover Lh (blue)
14	68131-22D00-3RZ	• . Emblem, Frame Cover
15	47164-12C01	Cushion, Frame Cover Front
16	09320-08028	Cushion
17	09139-06050	Screw (6x20)
18	09160-06054	Washer (6.5x22x1.6)
19	09180-06027	Spacer (6.3x9.1x6.7)
20	94433-26B00	Cushion
21	09139-06063	Screw (6x20)
22	09160-06063	Washer (6.5x22x1.6)
23	09180-06027	Spacer (6.3x9.1x6.7)
24	09136-06062	Screw (6x16)
25	94433-26B00	Cushion
26	47310-22D00-33J	Cover, Frame Center (black)
26	47310-22D00-0JW	Cover, Frame Center (white)
27	68166-31300-0FP	• . Emblem (silver)
27	68166-31300-0NE	• . Emblem (blue)
28	47191-22D00	• . Rubber
29	47168-12C00	Nut, Frame Cover Center
30	09139-05020	Screw
31	03241-15125	Screw
32	09148-05019	Nut
33	03142-04125	Screw
34	09148-04024	Nut
35	47410-22D00	Bracket, Tail Lamp Rear
36	03541-04125	Screw
37	09148-05019	Nut
38	09116-06010	Bolt (6x20)
39	09180-06044	Spacer (6.1x8x9.5)
40	09320-08048	Cushion






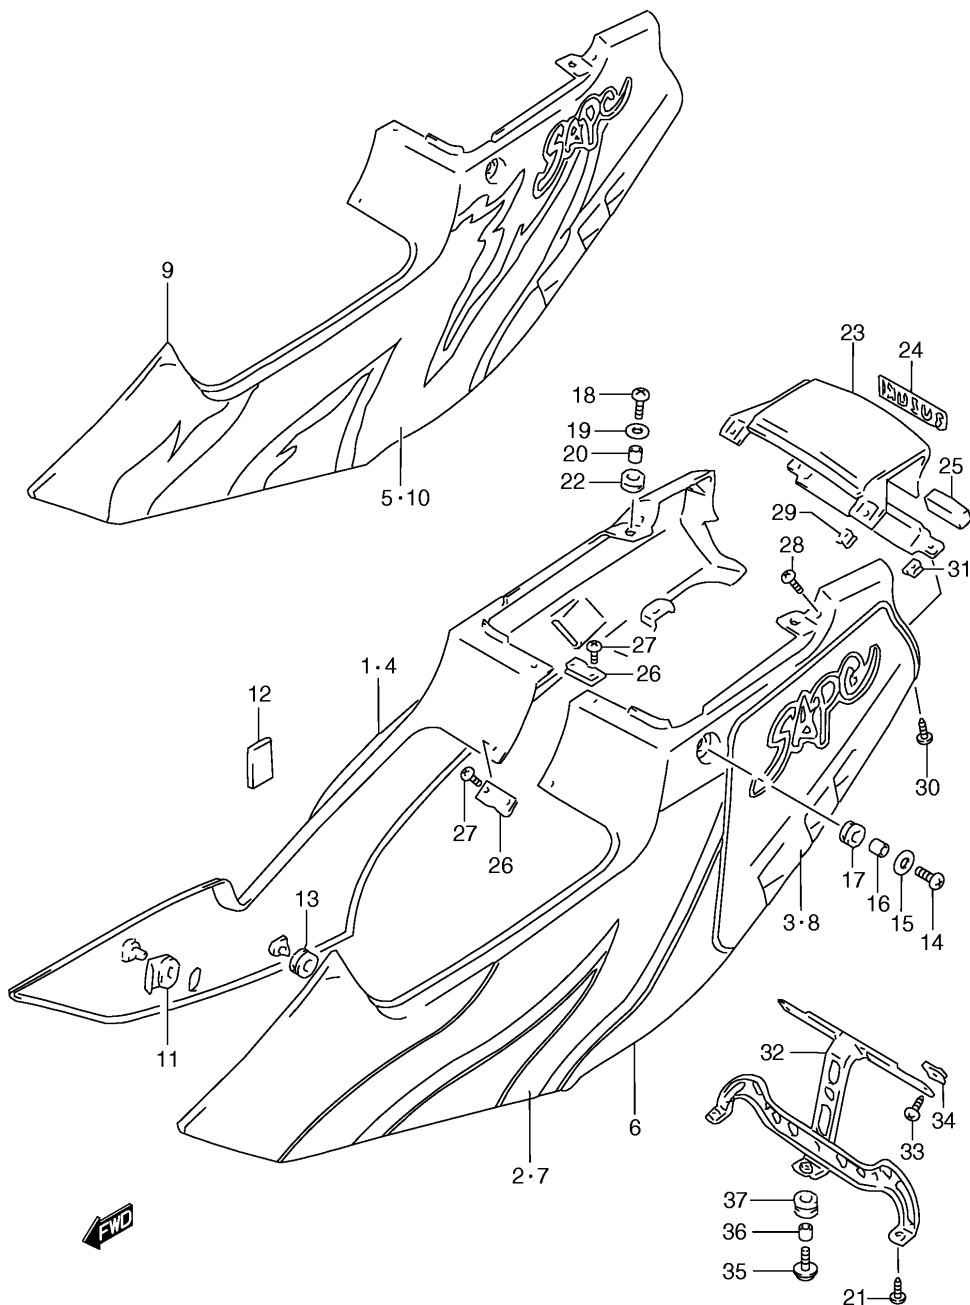


N° Réf.	N° Pièce	Désignation
1	47110-23D00-0JW	Cover, Frame Rh (white)
2	68135-22D50-M95	. . Tape, Frame Cover Rh
3	68136-22D20-N47	. . Tape, Zekken
4	47110-23D30-13Z	Cover, Frame Rh (black)
5	68135-22D60-1NS	. . Tape, Frame Cover Rh1
6	47210-23D00-0JW	Cover, Frame Lh (white)
7	68145-22D50-M95	. . Tape, Frame Cover Lh
8	68146-22D20-N47	. . Tape, Zekken
9	47210-23D30-13Z	Cover, Frame Lh (black)
10	68145-22D60-1NS	. . Tape, Frame Cover Lh
11	47164-12C01	Cushion, Frame Cover Front
12	41881-06C00	Protector
13	09320-08018	Cushion
14	09139-06050	Screw (6x20)
15	09160-06054	Washer (6.5x22x1.6)
16	09180-06027	Spacer (6.3x9.1x6.7)
17	94433-26B00	Cushion
18	02142-06205	Screw (6x20)
19	09160-06102	Washer (6.5x22x1.6)
20	09180-06027	Spacer (6.3x9.1x6.7)
21	09136-06062	Screw (6x16)
22	94433-26B00	Cushion
23	47310-22D10-0LX	Cover, Frame Center (white)
23	47310-22D40-13Z	Cover, Frame Center (black)
24	68166-31300-1LF	. . Emblem
24	68166-22D00-N14	. . Emblem
25	47191-22D00	. . Rubber
26	47168-12C00	Nut, Frame Cover Center
27	09139-05020	Screw
28	03241-15125	Screw
29	09148-05019	Nut
30	03142-04125	Screw
31	09148-04024	Nut
32	47410-22D10	Bracket, Tail Lamp Rear
33	03541-04125	Screw
34	09148-05019	Nut
35	09116-06010	Bolt (6x20)
36	09180-06044	Spacer (6.1x8x9.5)
37	09320-08048	Cushion

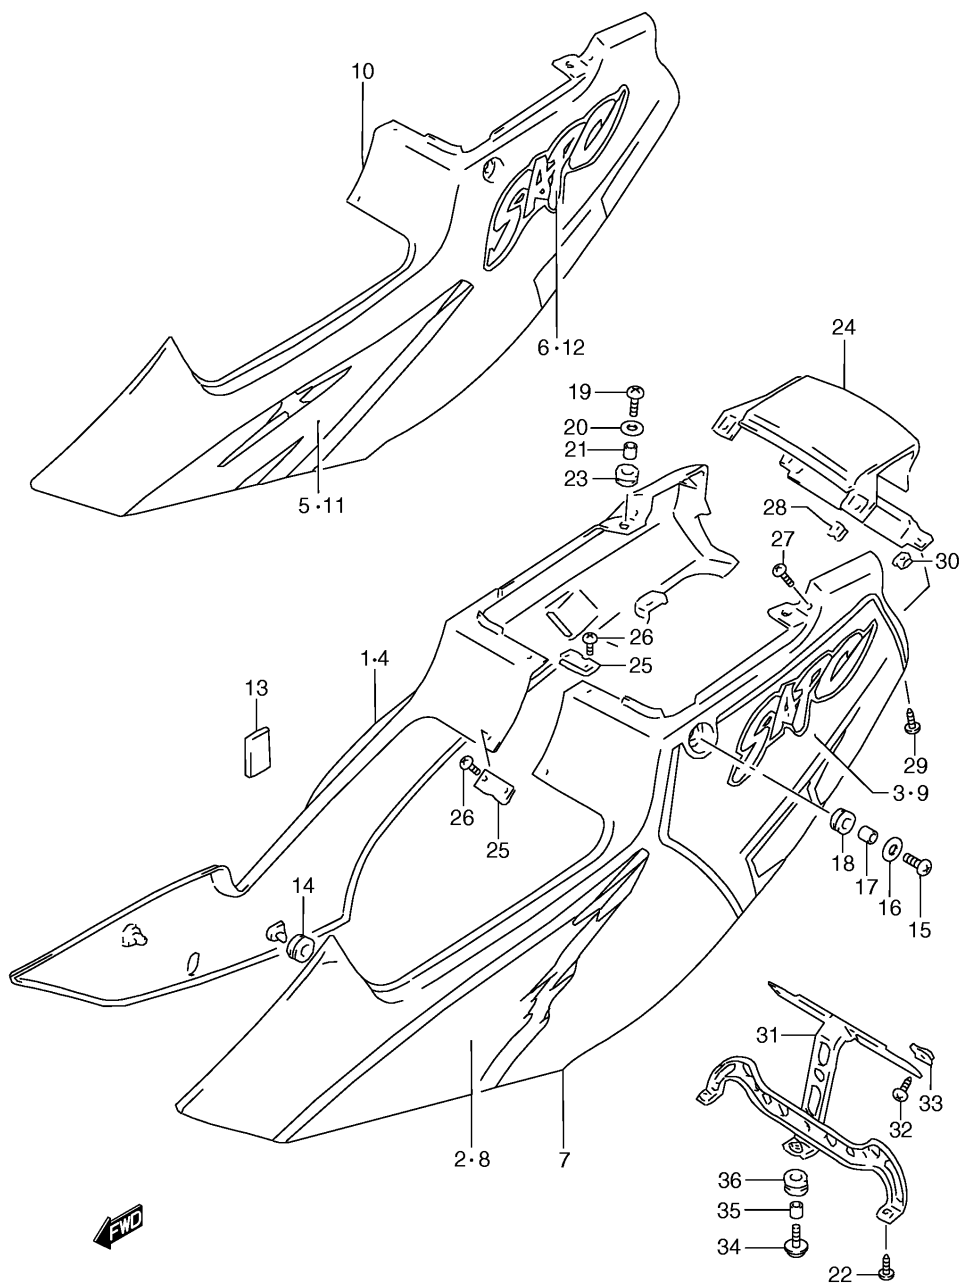


N° Réf.	N° Pièce	Désignation
1	47110-23D40-0JW	Cover, Frame Rh (white)
2	68135-22D70-A5H	. . Tape, Frame Cover Rh
3	68136-22D30-A5F	. . Tape, Zekken
4	47110-23D50-33J	Cover, Frame Rh (black)
5	68135-22D80-B6L	. . Tape, Frame Cover Rh
6	68131-22D20-B6M	. . Emblem
7	47210-23D40-0JW	Cover, Frame Lh (white)
8	68145-22D70-A5H	. . Tape, Frame Cover Lh
9	68146-22D30-A5F	. . Tape, Zekken
10	47210-23D50-33J	Cover, Frame Lh (black)
11	68145-22D80-B6L	. . Tape, Frame Cover Lh
12	68131-22D20-B6M	. . Emblem
13	41881-06C00	Protector
14	09320-08018	Cushion
15	02142-06206	Screw (6x20)
16	09160-06054	Washer (6.5x22x1.6)
17	09180-06027	Spacer (6.3x9.1x6.7)
18	94433-26B00	Cushion
19	02142-06207	Screw (6x20)
20	09160-06102	Washer (6.5x22x1.6)
21	09180-06027	Spacer (6.3x9.1x6.7)
22	09136-06062	Screw (6x16)
23	94433-26B00	Cushion
24	47311-22D10-0JW	Cover, Frame Center (white)
24	47311-22D10-33J	Cover, Frame Center (black)
25	47168-12C00	Nut, Frame Cover Center
26	02142-05107	Screw
27	03241-15125	Screw
28	09148-05019	Nut
29	03142-04125	Screw
30	09148-04024	Nut
31	47410-22D11	Bracket, Tail Lamp Rear
32	03541-04125	Screw
33	09148-05019	Nut
34	09116-06010	Bolt (6x20)
35	09180-06044	Spacer (6.1x8x9.5)
36	09320-08048	Cushion

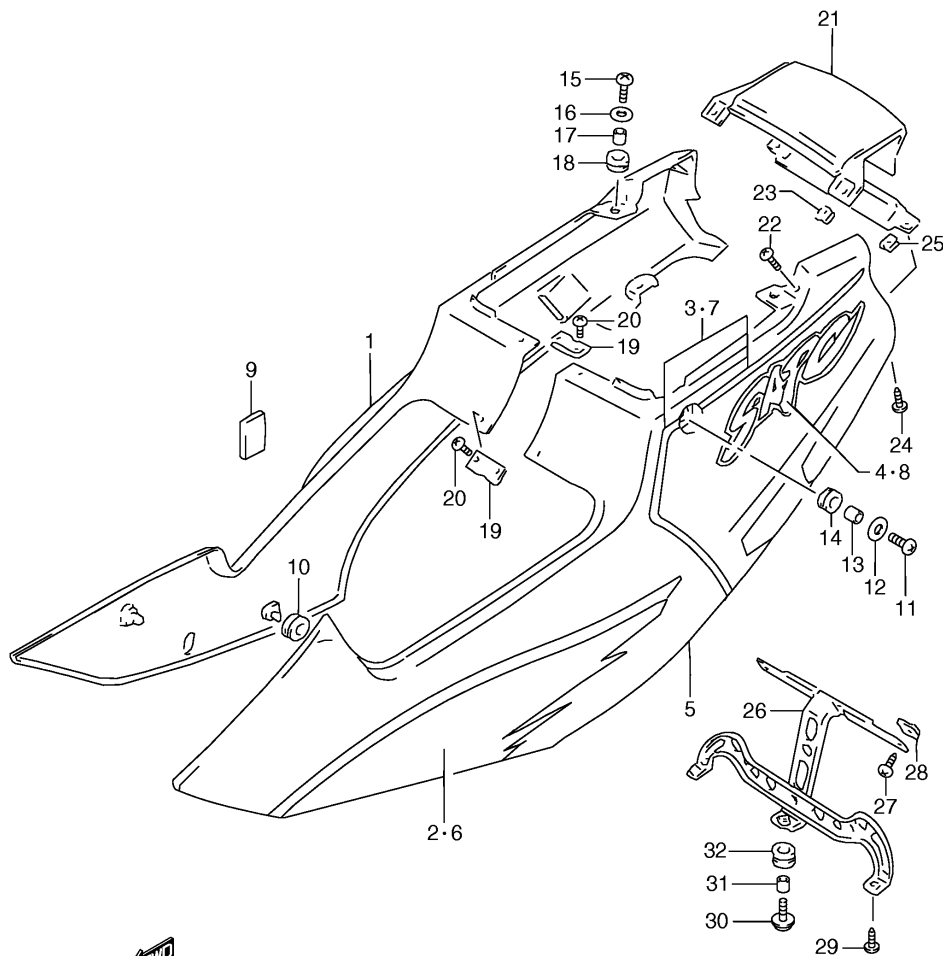


N° Réf.	N° Pièce	Désignation
1	47110-23D60-0JW	Cover, Frame Rh (white)
1	47110-23D60-17U	Cover, Frame Rh (gray)
2	68135-22D90-C3T	. Tape, Frame Cover Rh
2	68135-22D90-C8K	. Tape, Frame Cover Rh
3	68136-22D40-C5N	. Tape, Zecken Rh
3	68136-22D40-C3R	. Tape, Zecken Rh
4	68131-22D30-C8L	. Emblem, Rh
4	68131-22D30-C8M	. Emblem, Rh
5	47210-23D60-0JW	Cover, Frame Lh (white)
5	47210-23D60-17U	Cover, Frame Lh (gray)
6	68145-22D90-C3T	. Tape, Frame Cover Lh
6	68145-22D90-C8K	. Tape, Frame Cover Lh
7	68146-22D40-C5N	. Tape, Zecken Lh
7	68146-22D40-C3R	. Tape, Zecken Lh
8	68131-22D30-C8L	. Emblem, Lh
8	68131-22D30-C8M	. Emblem, Lh
9	41881-06C00	Protector
10	09320-08018	Cushion
11	02142-06207	Screw, Side
12	09160-06054	Washer
13	09180-06027	Spacer
14	94433-26B00	Cushion
17	09180-06027	Spacer
18	94433-26B00	Cushion
19	47168-12C00	Nut, Center
20	02142-05103	Screw
21	47311-22D10-0JW	Cover, Frame Center (white)
21	47311-22D10-17U	Cover, Frame Center (gray)
22	03241-15123	Screw
23	09148-05019	Nut
24	03541-14123	Screw, Lower
25	09148-04024	Nut
26	47410-22D12	Bracket, Tail Lamp Rear
27	03241-15123	Screw
28	09148-05019	Nut
29	03141-14123	Screw
30	09116-06010	Bolt
31	09180-06044	Spacer
32	09320-08048	Cushion

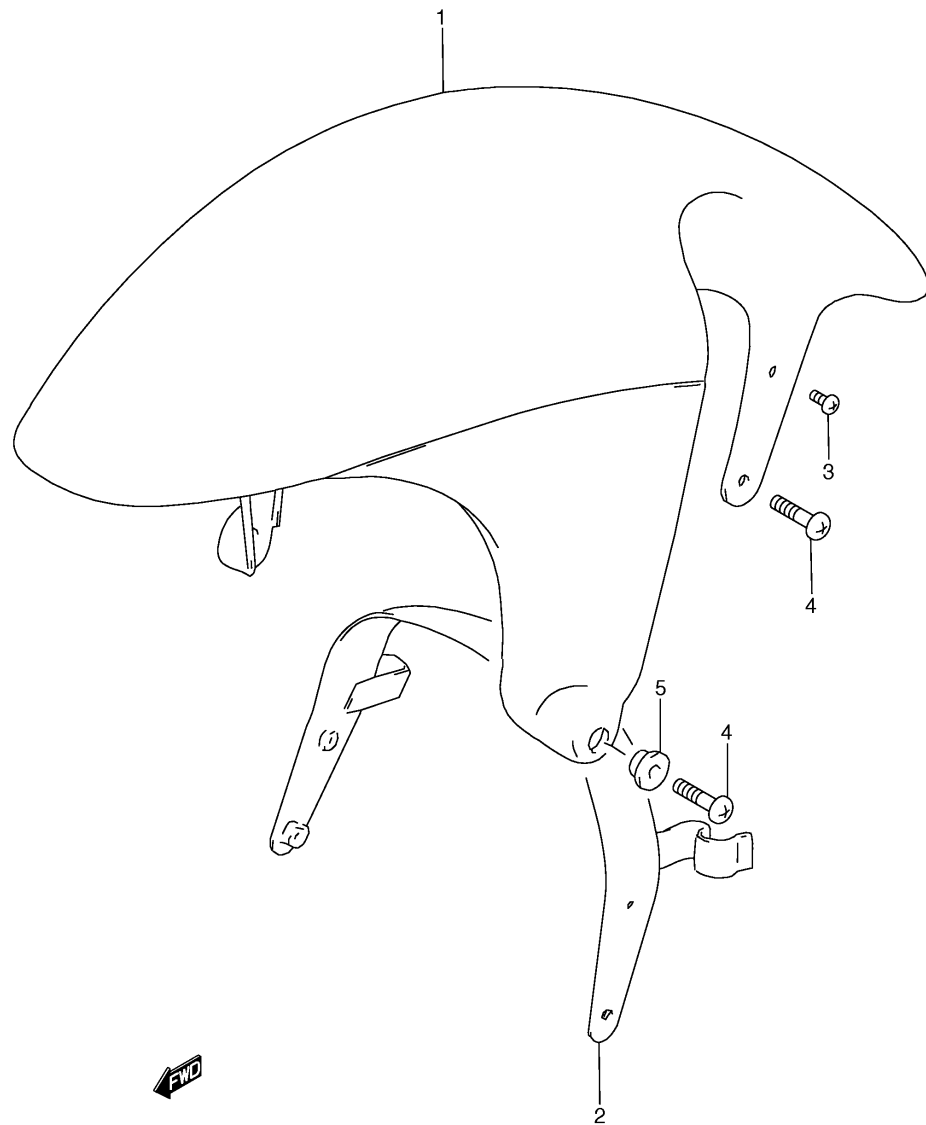

N° Réf.	N° Pièce	Désignation
1	53110-22D00-0NE	Fender, Front (blue)
1	53110-22D00-33J	Fender, Front (black)
1	53110-22D40-0NE	Fender, Front (blue)
1	53110-22D40-33J	Fender, Front (black)
1	53110-22D00-1LE	Fender, Front (blue)
2	53115-22D00	• . Brace
3	02142-04105	• . Screw
4	09139-06028	Screw (6x20)
5	09161-06021	Washer

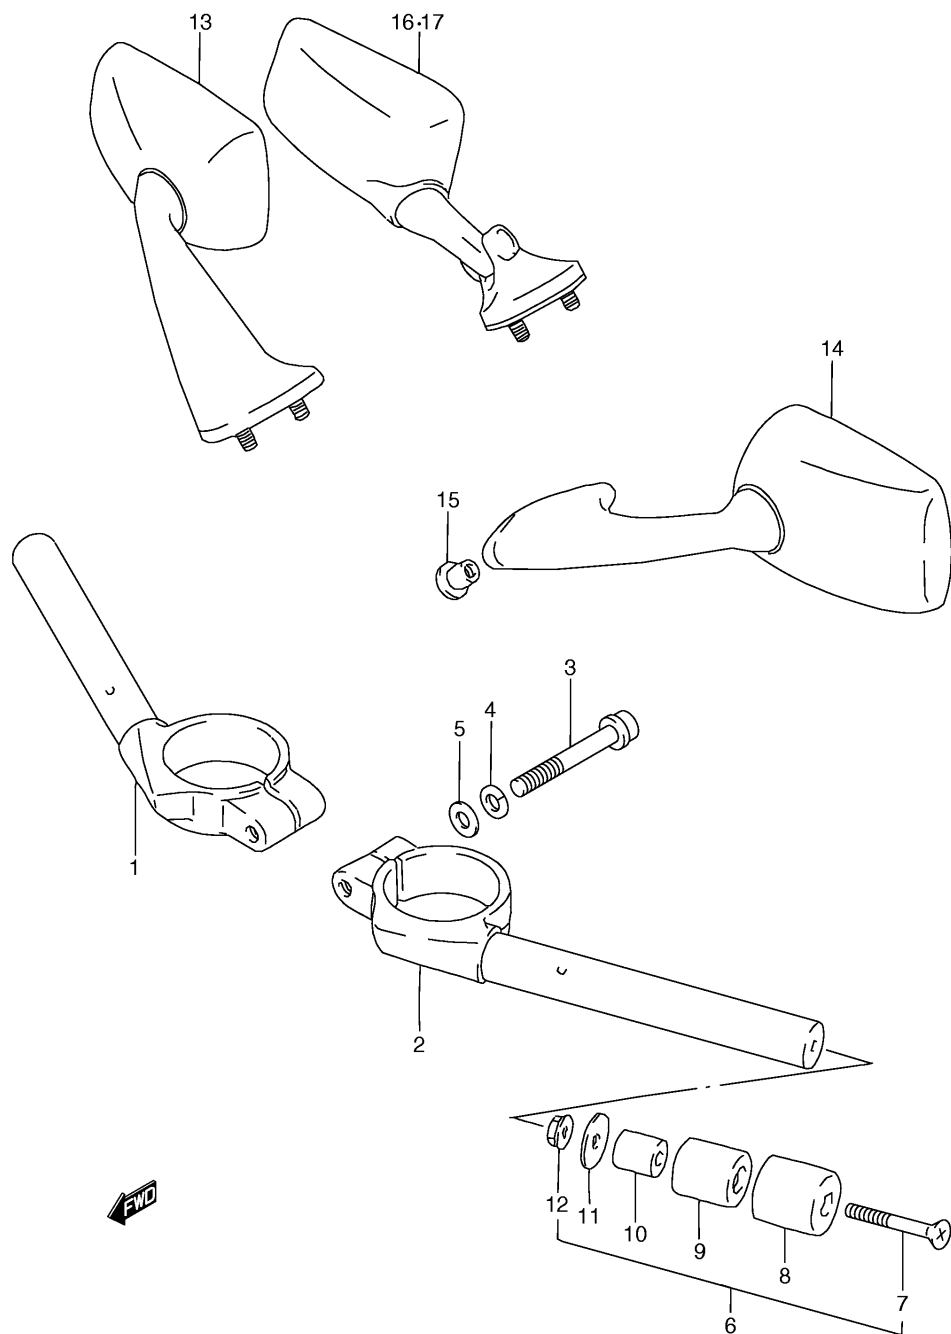


N° Réf.	N° Pièce	Désignation
1	56110-22D01	Handle Bar, Rh
2	56150-22D01	Handle Bar, Lh
3	07130-08457	Bolt
4	08321-01087	Lock Washer
5	08322-01087	Washer
6	56200-11810	Balancer Set, Handle Bar
7	02122-06657	. . Screw
8	56274-12C00	. . Cap
8	56274-31300	. . Cap
9	56271-49420	. . Balancer
10	56272-44500	. . Expander
11	56275-34400	. . Spacer
12	09159-06024	. . Nut
13	56500-22D00	Mirror Assy, Rear View Rh
14	56600-22D00	Mirror Assy, Rear View Lh
15	56619-12C00	Nut, Rear View Mirror
16	56500-22D11	Mirror Assy, Rear View Rh
17	56600-22D11	Mirror Assy, Rear View Lh

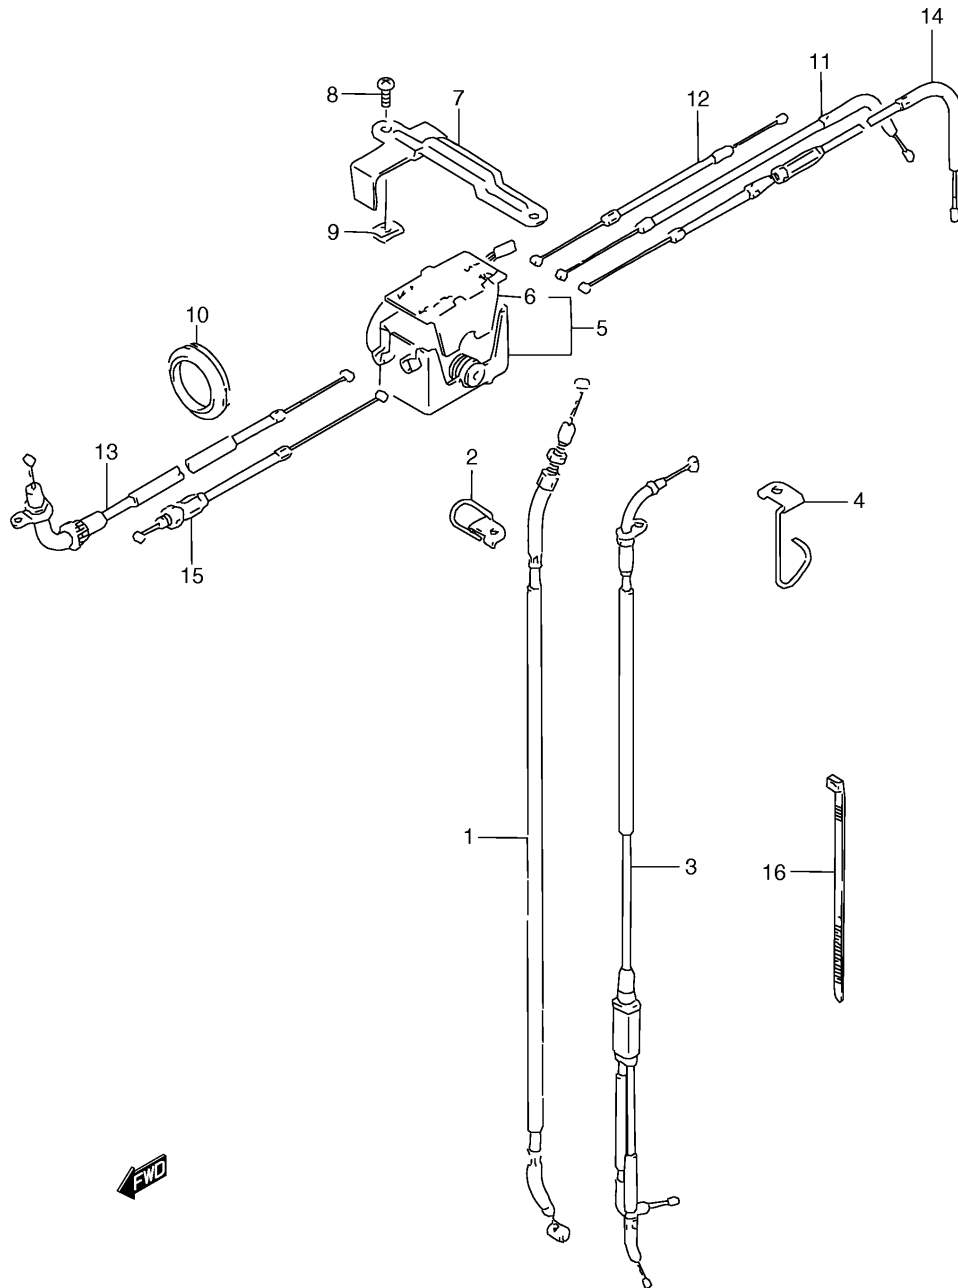


N° Réf.	N° Pièce	Désignation
1	58200-22D11	Cable Assy, Clutch
2	58290-22D01	Guide, Clutch Cable
3	58410-22D01	Cable, Starter
4	58470-12C00	Guide, Starter Cable
5	33900-12852	Sensor Set, Throttle
6	58373-12C01	•• .. Cover, Box
7	58374-12C11	Plate, Connecto Box
8	03242-05129	Screw
9	09148-05017	Nut
10	09320-37001	Grommet
11	58310-12C02	Cable, Throttle No.1 (lh Carburetor)
12	58350-12C03	Cable, Throttle No.2 (rh Carburetor)
13	58360-22D00	Cable, Throttle No.3 (throttle Grip)
14	58380-22D00	Cable, Throttle No.4 (oil Pump)
15	58390-12C01	Cable, Throttle No.5 (actuator)

N° Réf.	N° Pièce	Désignation
---------	----------	-------------


1	57110-22D01	Grip, Throttle
2	57300-32C01	Lever Assy, Brake
3	57420-32C00	. . Adjust Lever
4	57430-32C00	. . Knocker
5	57438-32C00	.. . Spring
6	57437-32C00	. . Bolt
7	08319-31065	. . Nut
8	57431-17C00	. . Bolt, Lever
9	08316-16064	. . Nut
10	57460-17C00	Switch Assy, Stop
11	57465-17C00	. . Screw
12	57211-22D00	Grip, Lh
13	57500-32C01	Lever Assy, Clutch
14	57620-27A31	. . Lever, Clutch
15	57431-49110	. . Bolt, Lefer
16	08319-21065	. . Nut
17	57644-20A02	. . Spring, Adjuster
18	57641-20A03	. . Adjuster, Lock
19	02112-74085	. . Screw
20	01204-06204	. . Bolt
21	08322-21064	. . Washer

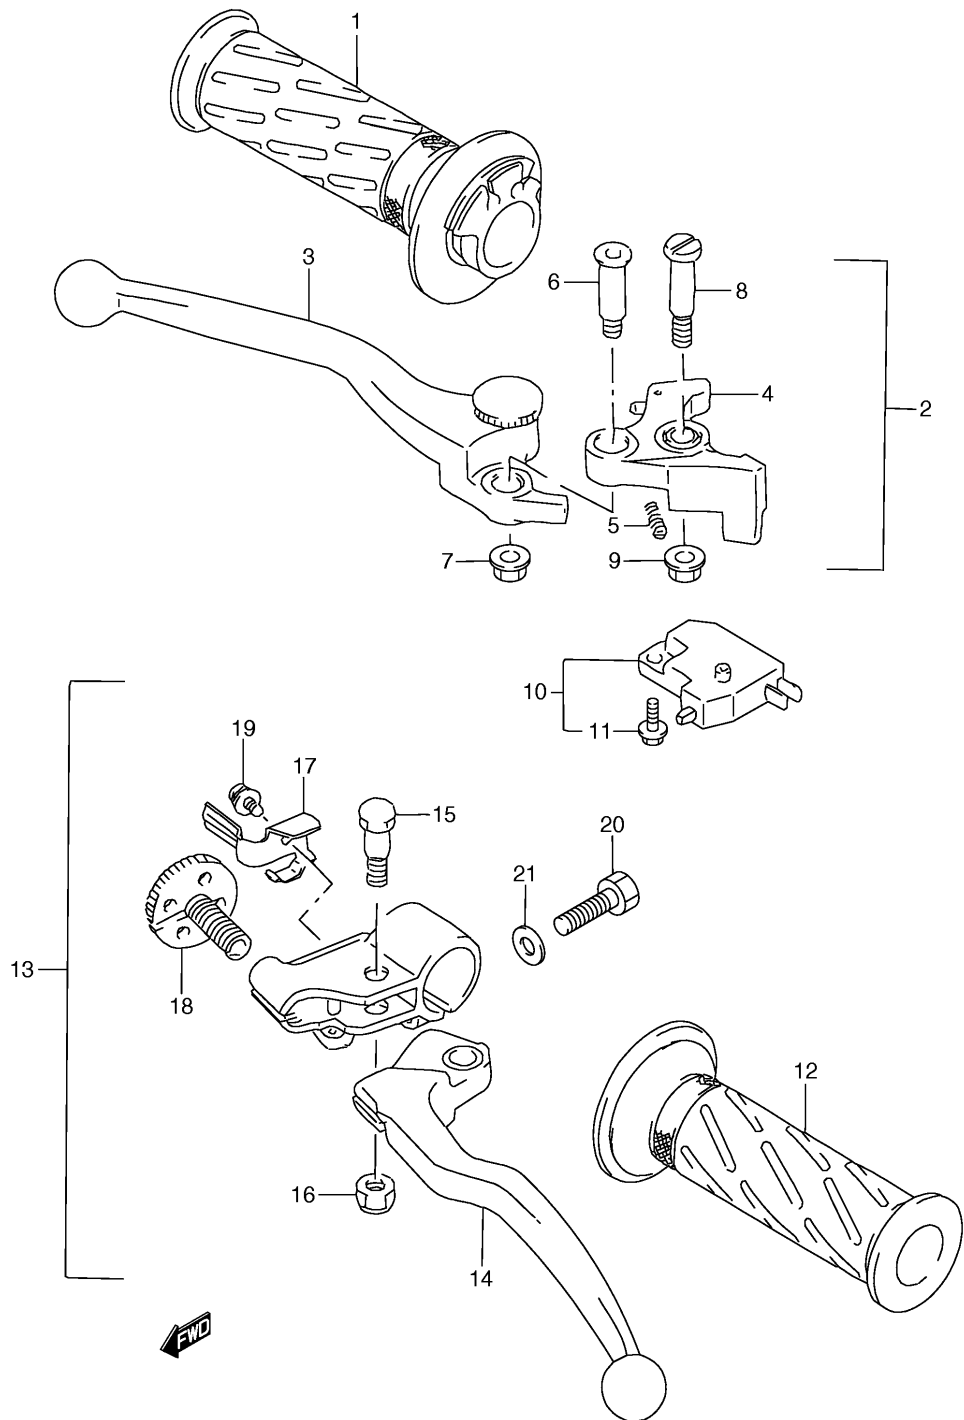

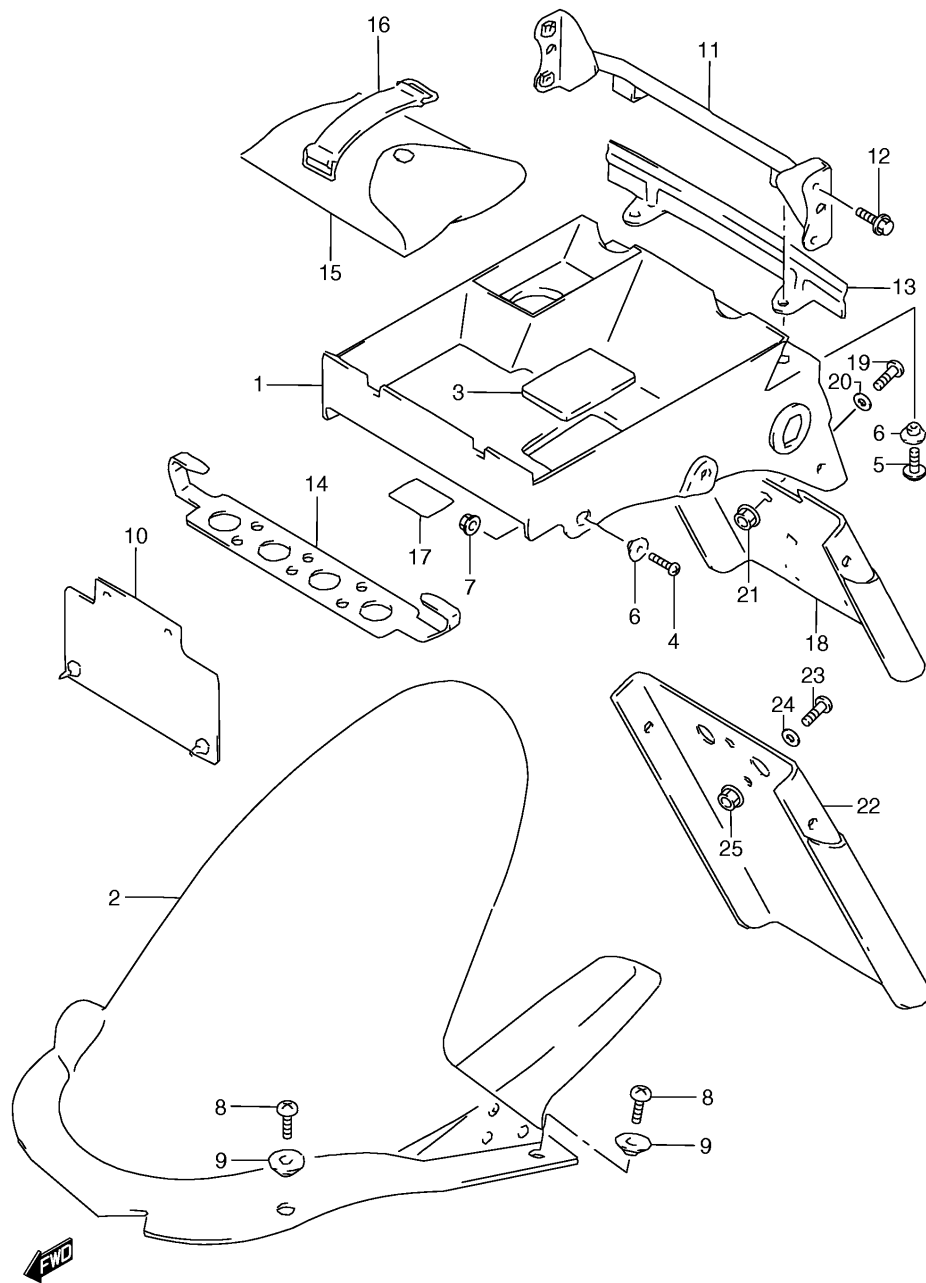


N° Réf.	N° Pièce	Désignation
1	63113-22D00	Body, Rear Fender Rear
1	63113-22D10	Body, Rear Fender Rear
1	63113-22D20	Body, Rear Fender Rear
2	63110-22D00	Fender, Rear Lower
3	63175-12C00	Cap, Rear Fender Rear
4	02142-06307	Screw
5	01570-06167	Bolt
6	09169-06033	Washer
7	08316-26068	Nut
8	02142-06164	Screw
9	09169-06026	Washer
10	63411-12C00	Mud Guard, Rear Fender
11	63210-22D00	Brace, Rear Fender
12	01517-06125	Bolt
13	63115-22D00	Plate, Rear Fender Cover
14	95721-22D00	Holder, Helmet
15	09800-20024	Tool Assy
16	09462-00034	Band
17	63115-06C00	Tape, Rear Fender
18	63311-12C00	Extension, Rear Fender
18	63311-48B21	Extension, Rear Fender
19	02142-06164	Screw
20	09160-06019	Washer
21	08319-21066	Nut
22	63331-22D00	Mud Guard, Rear Fender
23	02142-06164	Screw
24	09160-06019	Washer
25	08319-21066	Nut
26	99011-22D50-046	Manual, Owner's
26	99011-22D50-22G	Manual, Owner's




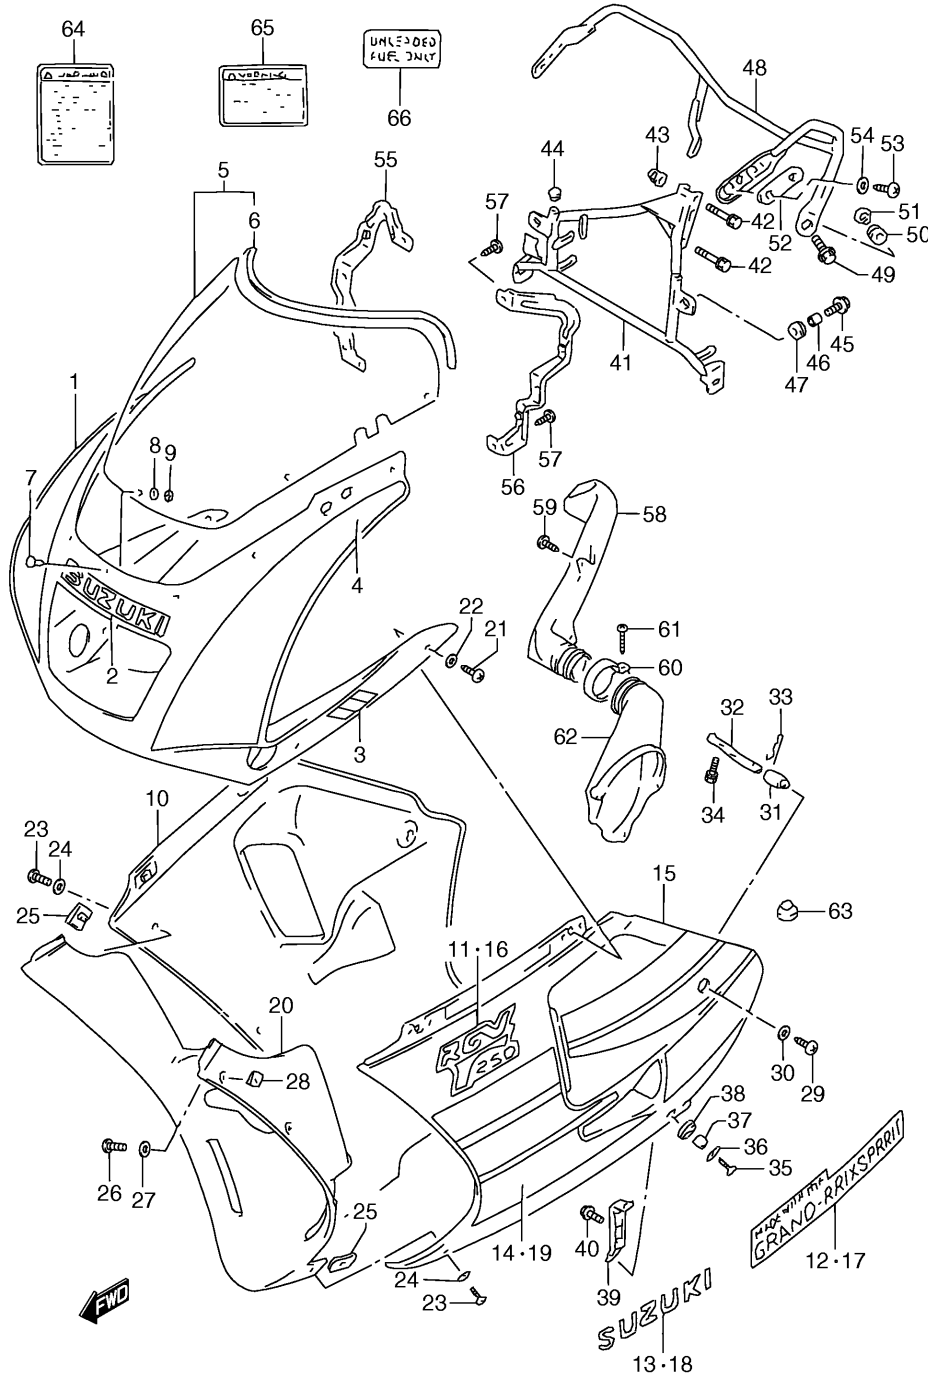


N° Réf.	N° Pièce	Désignation
1	94400-22D00-0JW	Cowling Assy, Body (white)
2	68271-40A10-0NE	• . Emblem, Suzuki
3	68270-07D00-3BK	• . Tape Set, Upper
4	68270-22D00-0NE	• . Tape Set, Front
5	94610-22D01	Window Screen Set
6	94631-22D00	• . Molding
7	94616-22D00	Pin, Window Screen
8	09320-04007	Cushion (4x13x1.0)
9	09148-04032	Nut
10	94407-22D00-0JW	Cowling Assy, Under Rh (white)
10	94407-23D00-0JW	Cowling Assy, Under Rh (white)
11	68181-22D00-C11	• . Emblem, Under "rgv"
12	68182-22D00-3SL	• . Emblem, Under
13	68183-22D00-0NE	• . Emblem, Suzuki
14	68180-22D00-C21	• . Tape Set, Under Rh
15	94408-22D00-0JW	Cowling Assy, Under Lh (white)
15	94408-23D00-0JW	Cowling Assy, Under Lh (white)
16	68181-22D00-C11	• . Emblem, Under "rgv"
17	68182-22D00-3SL	• . Emblem, Under
18	68111-42031-0NE	• . Emblem, Suzuki
19	68190-22D00-C21	• . Tape Set, Under Lh
20	94490-22D00-30H	Cowling, Under Center (white)
20	94490-22D30-30H	Cowling, Under Center (white)
21	09139-05044	Screw
22	09161-07009	Washer
23	09139-05043	Screw
24	09161-07009	Washer
25	94484-12C11	Nut
26	03242-05165	Screw
27	09161-05017	Washer
28	09148-05004	Nut
29	09139-06053	Screw
30	09160-06053	Washer
31	94520-12C00	Plug, Under Center
32	94522-12C00	Pipe, Under Center
33	94523-12C00	Pin, Under Pipe
34	01137-06205	Bolt
35	09139-06053	Screw
36	09160-06056	Washer (6.5x18x1)
37	09180-06114	Spacer
38	09320-09016	Cushion
39	94740-22D01	Bracket, Under Cowling Lower
39	94740-22D01	Bracket, Under Lower Lh
39	94740-22D10	Bracket, Under Lower Rh
40	09116-06027	Bolt (6x16)
41	94510-22D00	Brace, Cowling
42	01137-08355	Bolt
43	08313-21085	Nut
44	09250-08013	Cap
45	09116-06143	Bolt (6x20)
46	09180-06114	Spacer
47	09320-08047	Cushion
48	94520-22D00	Brace, Rear View Mirror

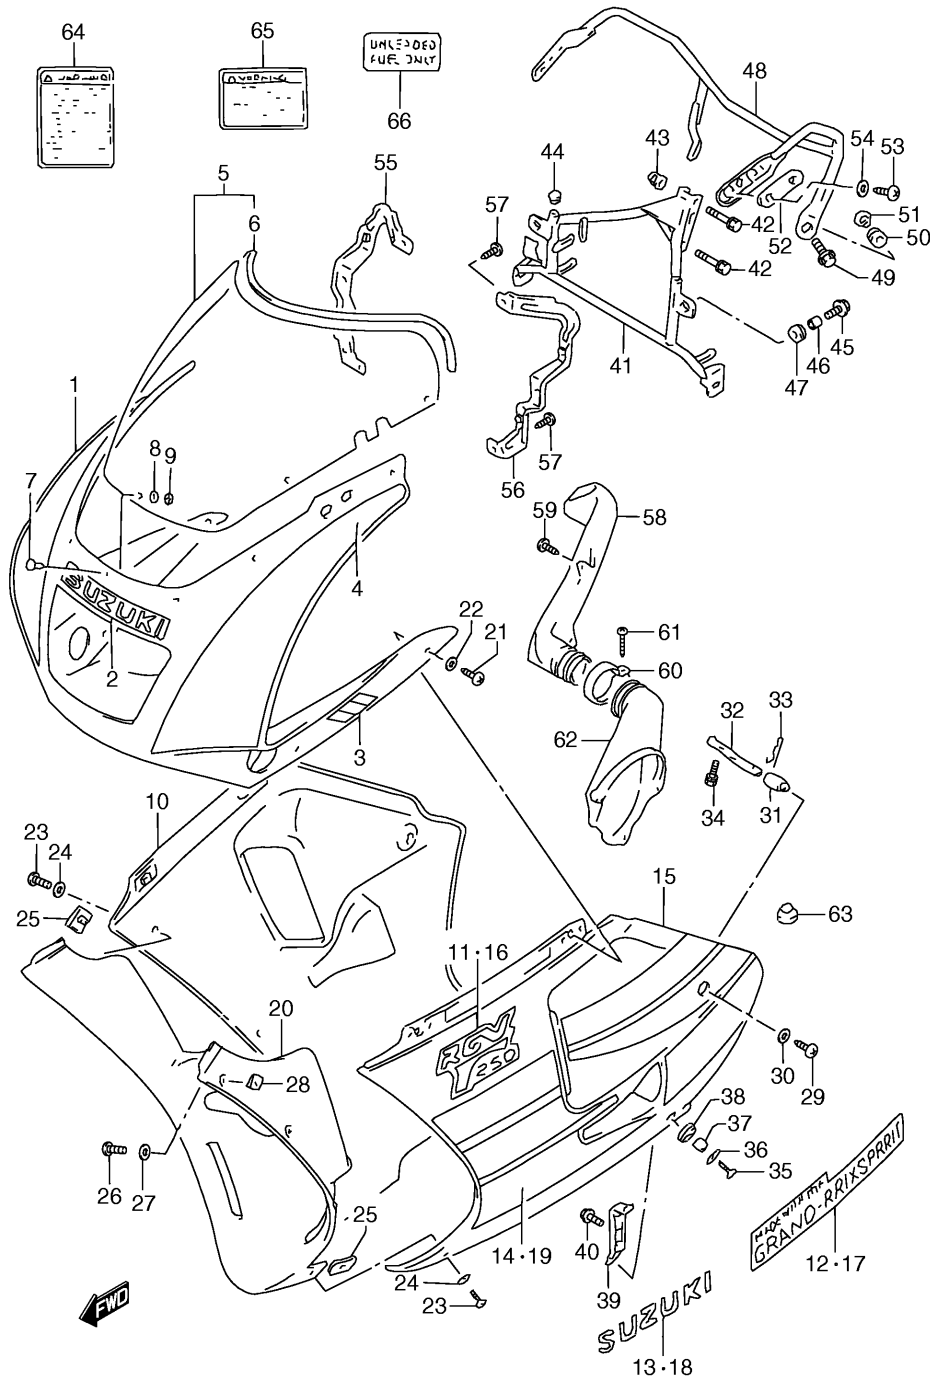


N° Réf.	N° Pièce	Désignation
49	09116-06143	Bolt (6x20)
50	09320-09009	Cushion
51	09169-06062	Washer
52	94576-22D00	Cushion, Rear View Mirror
53	09136-06004	Screw (6x12)
54	09161-06023	Washer
55	94418-22D00	Bracket, Head Lamp Rh
56	94419-22D00	Bracket, Head Lamp Lh
57	03541-05165	Screw
58	94454-12C01	Body, Air Duct
59	02142-05124	Screw
60	09402-36403	Clamp
61	03211-04255	Screw
62	94455-22D00	Body, Air Duct
63	09321-10018	Cushion
64	68612-48B00	Label, Warning Screen
64	68612-48B10	Label, Warning Screen
64	68612-48B20	Label, Warning Screen
65	68319-40C00	Label, Warning Safety
65	68319-40C20	Label, Warning Safety
65	68319-40C30	Label, Warning Safety
65	68319-40C40	Label, Warning Safety
66	86932-73060	Label, Caution Fuel
66	68623-22D00	Label, Caution Fuel

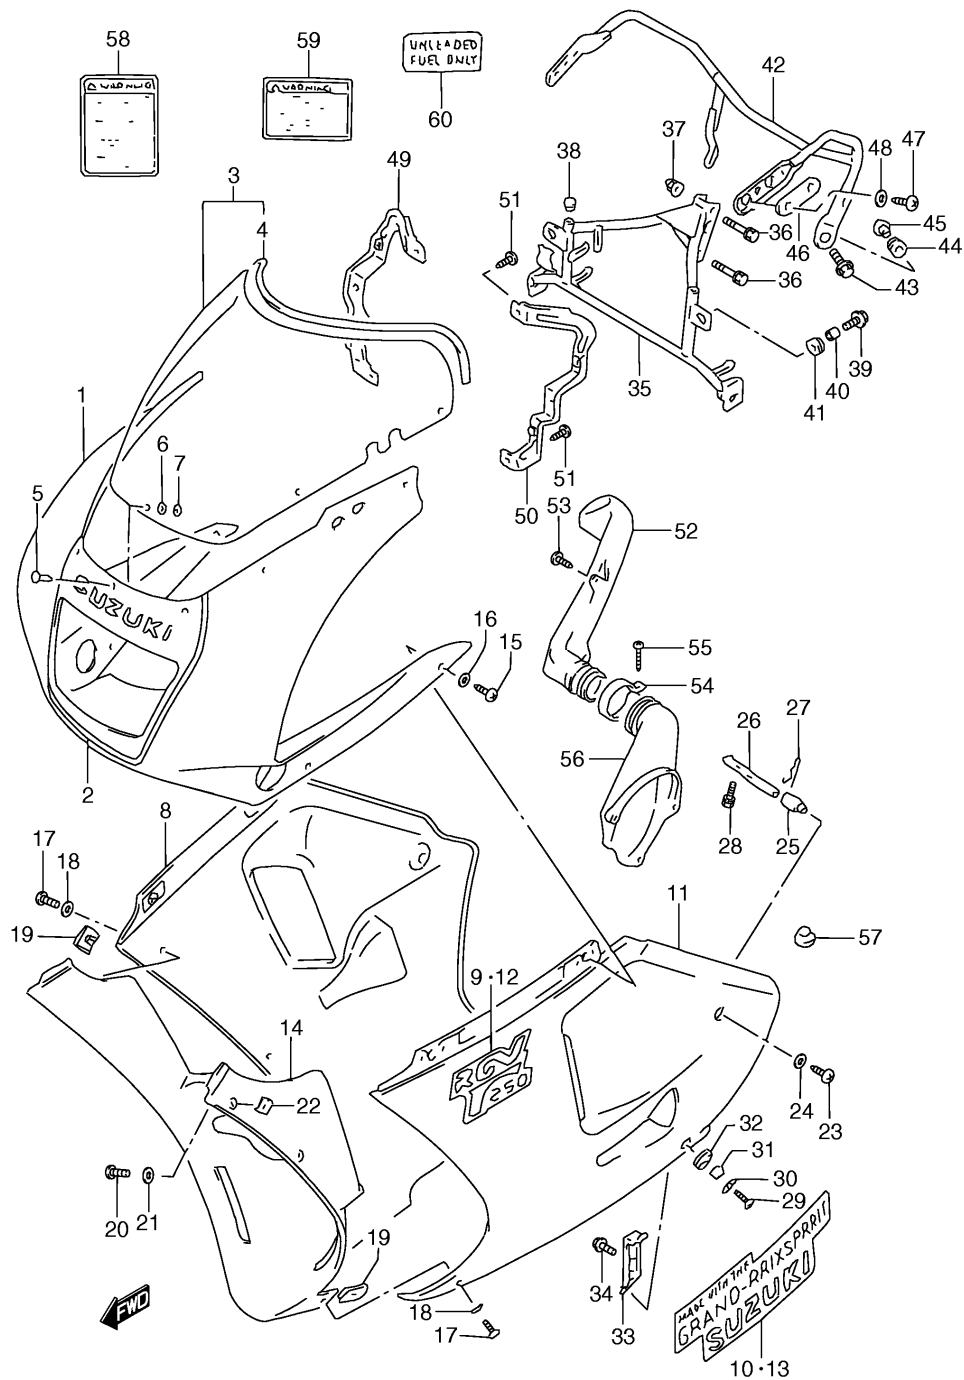


N° Réf.	N° Pièce	Désignation
1	94400-22D10-33J	Cowling Assy, Body (black)
2	68275-22D20-C68	• Tape, Upper
3	94610-22D01	Window Screen Set
4	94631-22D00	• Molding
5	94616-22D00	Pin, Window Screen
6	09320-04007	Cushion (4x13x1.0)
7	09148-04032	Nut
8	94407-22D10-33J	Cowling Assy, Under Rh (black)
8	94407-23D10-33J	Cowling Assy, Under Rh (black)
9	68181-22D00-C69	• Emblem, Under "rgv"
10	68181-22D10-3WC	• Emblem, Under Rh
11	94408-22D10-33J	Cowling Assy, Under Lh (black)
11	94408-23D10-33J	Cowling Assy, Under Lh (black)
12	68181-22D00-C69	• Emblem, Under "rgv"
13	68191-22D10-3WC	• Emblem, Under Lh
14	94490-22D00-019	Cowling, Under Center (black)
14	94490-22D30-019	Cowling, Under Center (black)
15	09139-05044	Screw
16	09161-07009	Washer
17	09139-05043	Screw
18	09161-07009	Washer
19	94484-12C11	Nut
20	03242-05165	Screw
21	09161-05017	Washer
22	09148-05004	Nut
23	09139-06053	Screw
24	09160-06053	Washer
25	94520-12C00	Plug, Under Center
26	94522-12C00	Pipe, Under Center
27	94523-12C00	Pin, Under Pipe
28	01137-06205	Bolt
29	09139-06053	Screw
30	09160-06056	Washer (6.5x18x1)
31	09180-06114	Spacer
32	09320-09016	Cushion
33	94740-22D01	Bracket, Under Cowling Lower
33	94740-22D01	Bracket, Under Lower Lh
33	94740-22D10	Bracket, Under Lower Rh
34	09116-06027	Bolt (6x16)
35	94510-22D00	Brace, Cowling
36	01137-08355	Bolt
37	08313-21085	Nut
38	09250-08013	Cap
39	09116-06143	Bolt (6x20)
40	09180-06114	Spacer
41	09320-08047	Cushion
42	94520-22D00	Brace, Rear View Mirror
43	09116-06143	Bolt (6x20)
44	09320-09009	Cushion
45	09169-06062	Washer
46	94576-22D00	Cushion, Rear View Mirror
47	09136-06004	Screw (6x12)
48	09161-06023	Washer

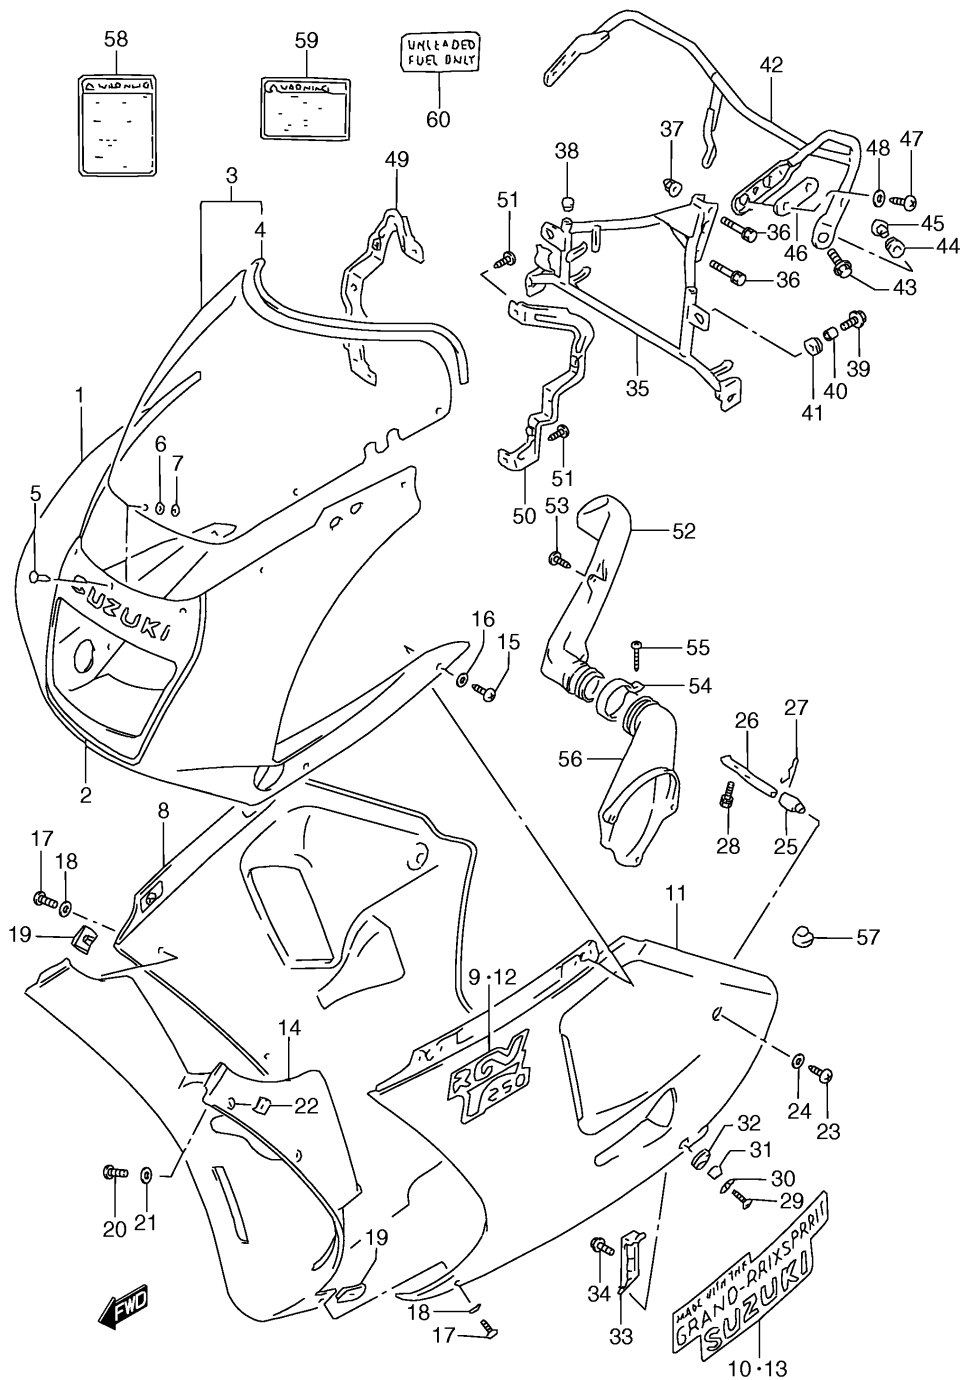


N° Réf.	N° Pièce	Désignation
49	94418-22D00	Bracket, Head Lamp Rh
50	94419-22D00	Bracket, Head Lamp Lh
51	03541-05165	Screw
52	94454-12C01	Body, Air Duct
53	02142-05124	Screw
54	09402-36403	Clamp
55	03211-04255	Screw
56	94455-22D00	Body, Air Duct
57	09321-10018	Cushion
58	68612-48B00	Label, Warning Screen
58	68612-48B10	Label, Warning Screen
58	68612-48B20	Label, Warning Screen
59	68319-40C00	Label, Warning Safety
59	68319-40C20	Label, Warning Safety
59	68319-40C30	Label, Warning Safety
59	68319-40C40	Label, Warning Safety
60	86932-73060	Label, Caution Fuel
60	68623-22D00	Label, Caution Fuel

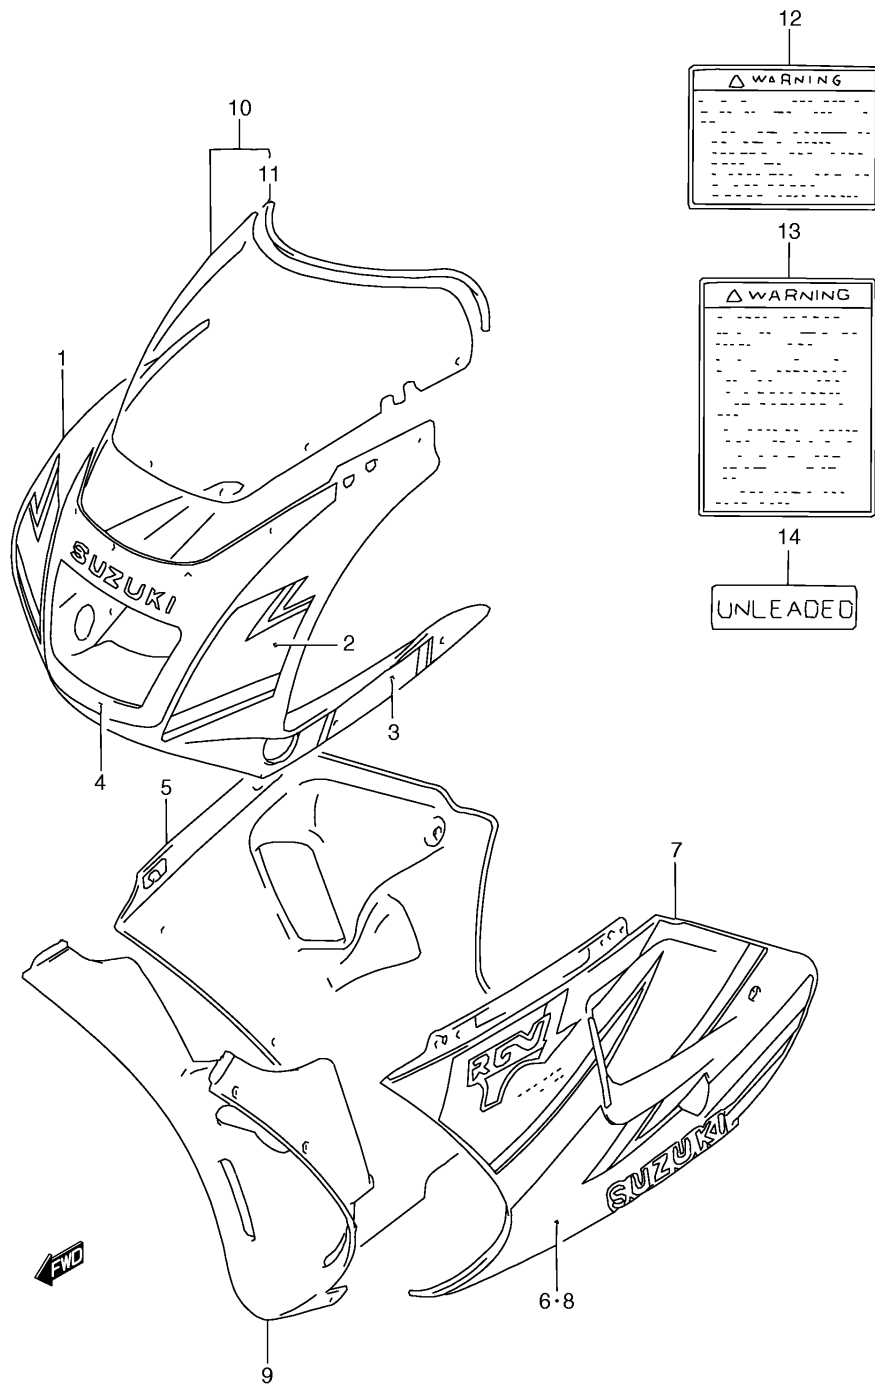


N° Réf.	N° Pièce	Désignation
1	94400-23D40-0JW	Cowling Assy, Body (white)
2	68270-22D30-M98	• . Tape Set, Front
3	68280-22D30-M97	• . Tape Set, Side
4	68275-22D40-M99	• . Tape, Zecken
5	94407-23D80-0JW	Cowling Assy, Under Rh (white)
5	94407-22E00-0JW	Cowling Assy, Under Rh (white)
6	68180-22D10-1NK	• . Tape Set, Under Rh
7	94408-23D80-0JW	Cowling Assy, Under Lh (white)
7	94408-22E00-0JW	Cowling Assy, Under Lh (white)
8	68190-22D10-1NK	• . Tape Set, Under Lh
9	94490-22D00-0MA	Cowling, Under Center (white)
9	94490-22D30-0MA	Cowling, Under Center (white)
10	94610-22D02	Screen Set, Wind
11	94631-10D01	• . Molding
12	68319-40C00	Label, Warning Safety
12	68319-40C20	Label, Warning Safety
12	68319-40C30	Label, Warning Safety
12	68319-40C40	Label, Warning Safety
13	68612-48B00	Label, Warning Screen
13	68612-48B10	Label, Warning Screen
13	68612-48B20	Label, Warning Screen
14	68623-17D00	Label, Caution Fuel
14	68623-22D00	Label, Caution Fuel
14	86932-73060	Label, Caution Fuel
15	68332-22D30	Label, Tire Air Pressure
15	68332-22D50	Label, Tire Air Pressure

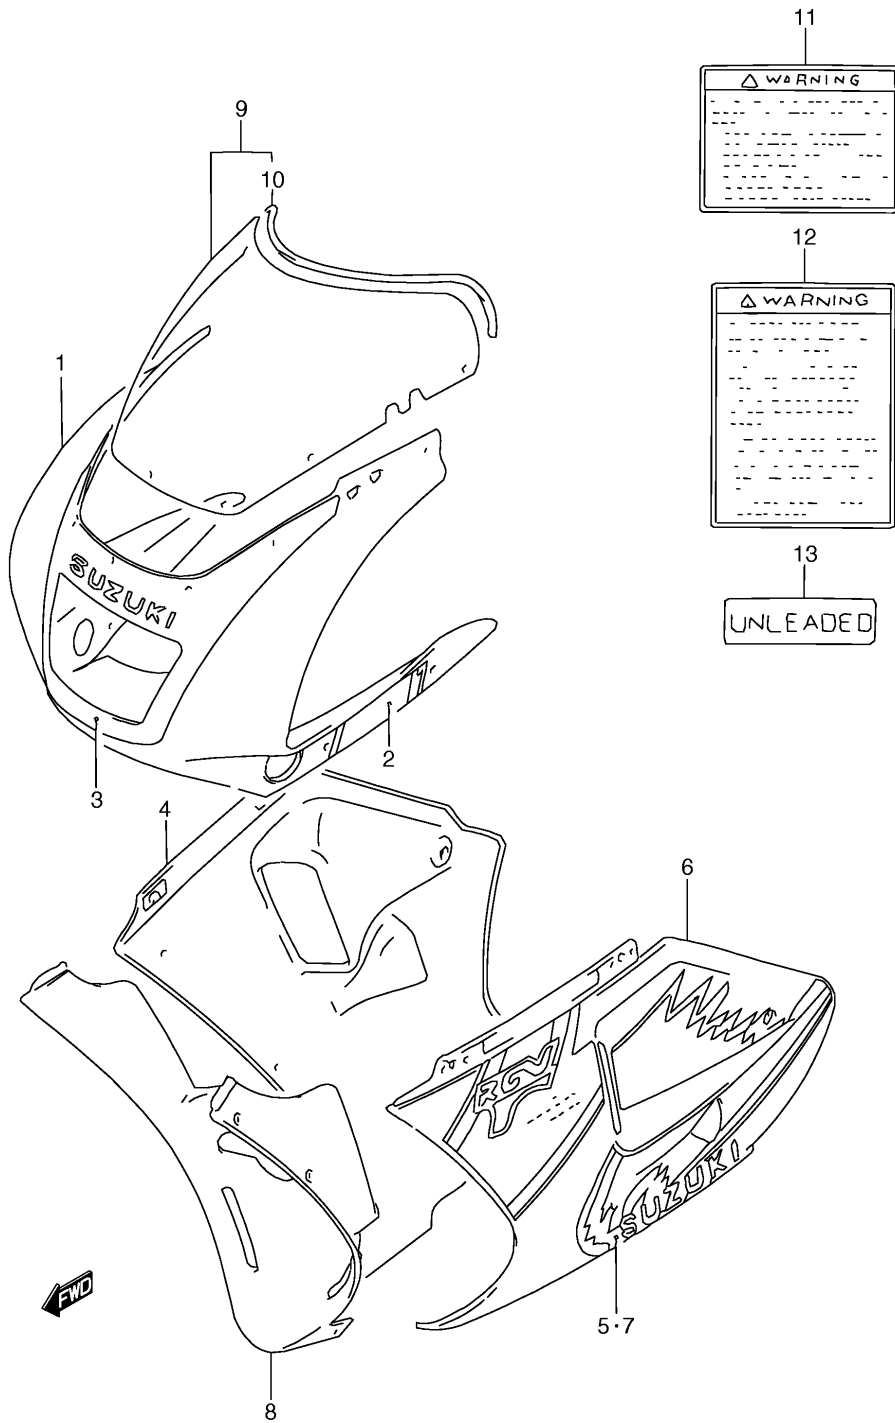

N° Réf.	N° Pièce	Désignation
1	94400-23D50-13Z	Cowling Assy, Body (black)
2	68280-22D40-N15	• . Tape Set, Side
3	68275-22D50-N16	• . Tape, Zecken
4	94407-23D90-13Z	Cowling Assy, Under Rh (black)
4	94407-22E10-13Z	Cowling Assy, Under Rh (black)
5	68180-22D20-1NT	• . Tape Set, Under Rh
6	94408-23D90-13Z	Cowling Assy, Under Lh (black)
6	94408-22E10-13Z	Cowling Assy, Under Lh (black)
7	68190-22D20-1NT	• . Tape Set, Under Lh
8	94490-22D00-019	Cowling, Under Center (black)
8	94490-22D30-019	Cowling, Under Center (black)
9	94610-22D02	Screen Set, Wind
10	94631-10D01	• . Molding
11	68319-40C00	Label, Warning Safety
11	68319-40C20	Label, Warning Safety
11	68319-40C30	Label, Warning Safety
11	68319-40C40	Label, Warning Safety
12	68612-48B00	Label, Warning Screen
12	68612-48B10	Label, Warning Screen
12	68612-48B20	Label, Warning Screen
13	68623-17D00	Label, Caution Fuel
13	68623-22D00	Label, Caution Fuel
13	86932-73060	Label, Caution Fuel
14	68332-22D30	Label, Tire Air Pressure
14	68332-22D50	Label, Tire Air Pressure

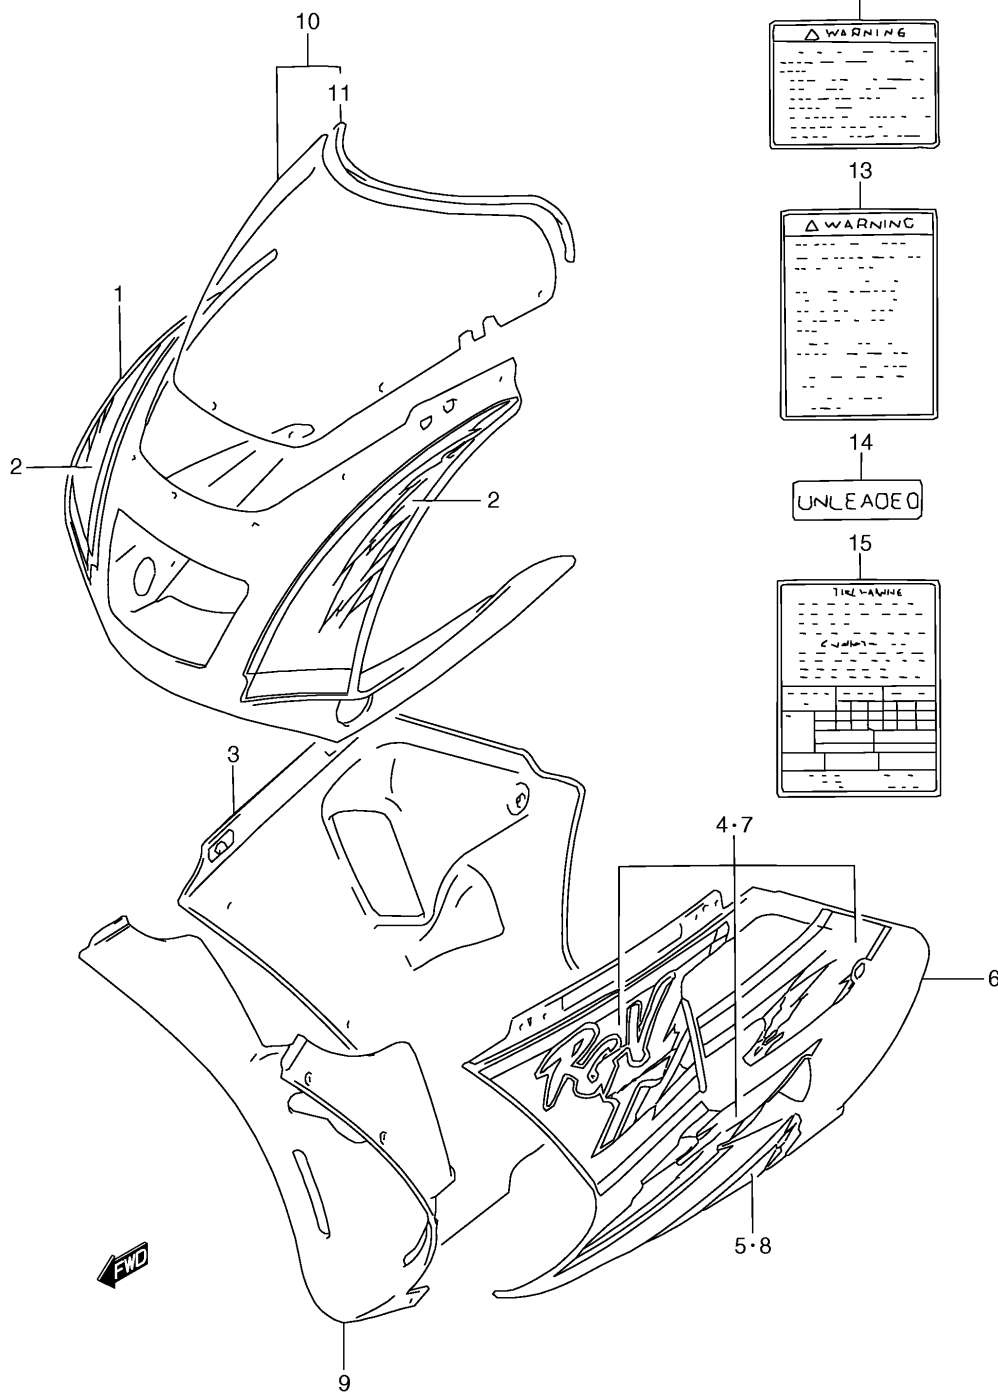




N° Réf.	N° Pièce	Désignation
1	94400-22E00-1LE	Cowling Assy, Body (blue)
2	68270-22D40-A5H	. . Tape Set, Cowling
3	94407-22E30-1LE	Cowling Assy, Under Rh (blue)
3	94407-22E50-1LE	Cowling Assy, Under Rh (blue)
4	68180-22D30-1UK	. . Tape Set, Under Rh
5	68185-19D10-A5H	. . Tape, Under Rh
6	94408-22E30-1LE	Cowling Assy, Under Lh (blue)
6	94408-22E50-1LE	Cowling Assy, Under Lh (blue)
7	68190-22D30-1UK	. . Tape Set, Under Lh
8	68195-19D10-A5H	. . Tape, Under Lh
9	94490-22D00-019	Cowling, Under Center (black)
9	94490-22D30-019	Cowling, Under Center (black)
10	94610-22D02	Ssreen Set, Wind
11	94631-10D01	. . Molding
12	68319-40C00	Label, Warning Safety (english)
12	68319-40C20	Label, Warning Safety (german)
12	68319-40C30	Label, Warning Safety (french)
12	68319-40C40	Label, Warning Safety (italian)
13	68612-48B00	Label, Warning Screen
13	68612-48B10	Label, Warning Screen
13	68612-48B20	Label, Warning Screen
14	68623-17D00	Label, Caution Fuel
14	68623-22D00	Label, Caution Fuel
14	86932-73060	Label, Caution Fuel
15	68332-22D30	Label, Tire Air Pressure
15	68332-22D50	Label, Tire Air Pressure

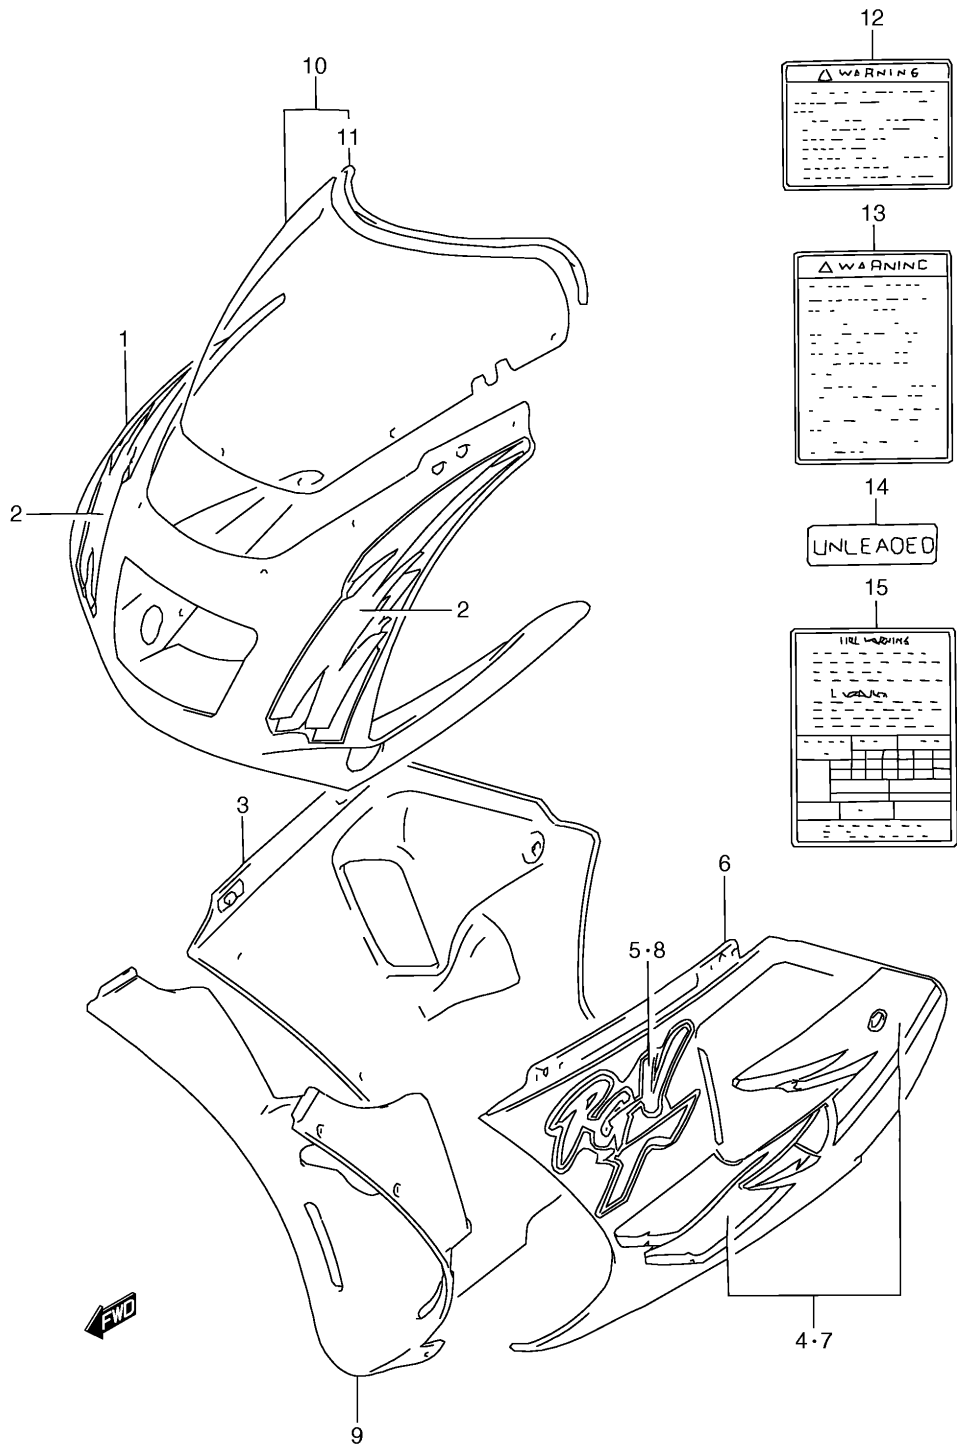


N° Réf.	N° Pièce	Désignation
1	94400-22E10-33J	Cowling Assy, Body (black)
2	68270-22D50-B6L	. . Tape Set, Cowling
3	94407-22E40-33J	Cowling Assy, Under Rh (black)
3	94407-22E60-33J	Cowling Assy, Undser Rh (black)
4	68180-22D40-B6L	. . Tape Set, Under Rh
5	68181-22D50-B6M	. . Tape Set, Under Rh
6	94408-22E40-33J	Cowling Assy, Under Lh (black)
6	94408-22E60-33J	Cowling Assy, Under Lh (black)
7	68190-22D40-B6L	. . Tape Set, Under Lh
8	68191-22D50-B6M	. . Emblem, Under Lh
9	94490-22D00-019	Cowling, Under Center (black)
9	94490-22D30-019	Cowling, Under Center (black)
10	94610-22D02	Screen Set, Wind
11	94631-10D01	. . Molding
12	68319-40C00	Label, Warning Safety (english)
12	68319-40C20	Label, Warning Safety (german)
12	68319-40C30	Label, Warning Safety (french)
12	68319-40C40	Label, Warning Safety (italian)
13	68612-48B00	Label, Warning Screen
13	68612-48B10	Label, Warning Screen
13	68612-48B20	Label, Warning Screen
14	68623-17D00	Label, Caution Fuel
14	68623-22D00	Label, Caution Fuel
14	86932-73060	Label, Caution Fuel
15	68332-22D30	Label, Tire Air Pressure
15	68332-22D50	Label, Tire Air Pressure




N° Réf.	N° Pièce	Désignation	
1	94400-22E30-0JW	Cowling Assy, Body (white)	
1	94400-22E30-17U	Cowling Assy, Body (gray)	
2	68270-22D60-C3T	. . Tape Set, Body	
2	68270-22D60-C8K	. . Tape Set, Body	
3	94407-22E80-1LE	Cowling Assy, Under Rh	(blue)
3	94407-22E80-33J	Cowling Assy, Under Rh	(black)
4	68180-22D50-1YY	. . Tape Set, Under Rh	
4	68180-22D50-1YZ	. . Tape Set, Under Rh	
5	94408-22E80-1LE	Cowling Assy, Under Lh	(blue)
5	94408-22E80-33J	Cowling Assy, Under Lh	(black)
6	68190-22D50-1YY	. . Tape Set, Under Lh	
6	68190-22D50-1YZ	. . Tape Set, Under Lh	
7	94490-22D00-019	Cowling, Under Center (black)	
8	94610-22D02	Screen Set, Wind	
9	94631-33C01	. . Molding	
10	68319-40C00	Label, Warning Safety	(english)
10	68319-40C30	Label, Warning Safety	(french)
10	68319-40C40	Label, Warning Safety	(italian)
11	68612-48B00	Label, Warning Screen	
11	68612-48B10	Label, Warning Screen	
12	68623-17D00	Label, Caution Fuel	
12	86932-73060	Label, Caution Fuel	
13	68332-22D30	Label, Tire Air Pressure	
13	68332-22D50	Label, Tire Air Pressure	

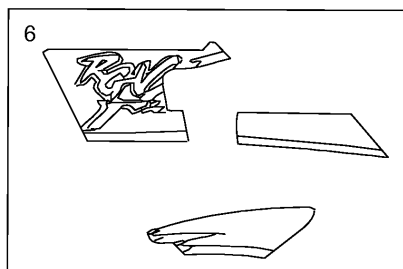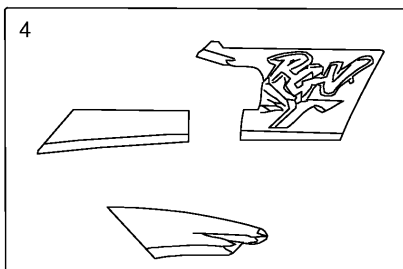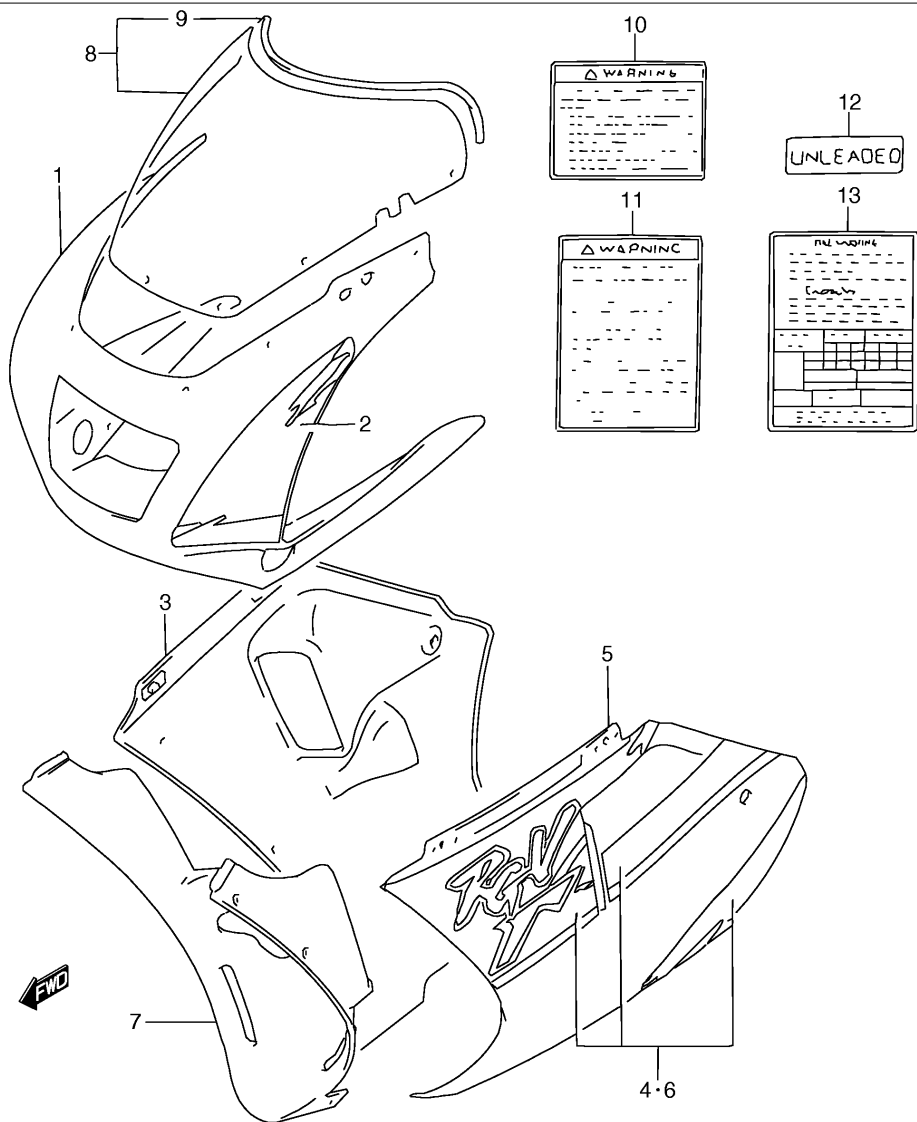


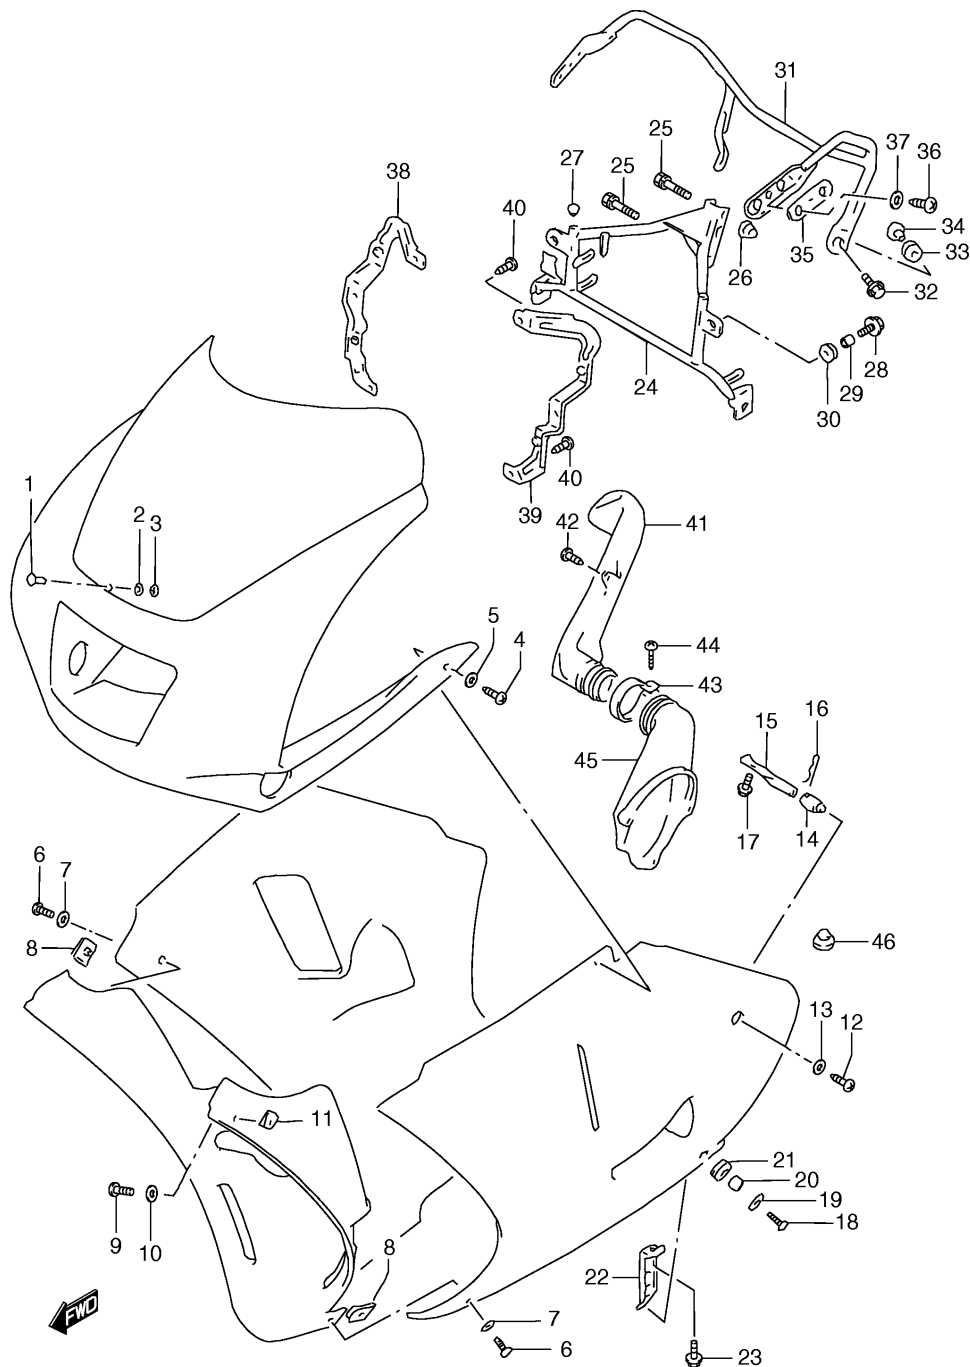


N° Réf.	N° Pièce	Désignation
1	94616-22D00	Pin, Window Screen (4x11)
2	09320-04007	Cushion (4x13x1.0)
3	09148-04032	Nut
4	09139-05044	Screw
5	09161-07009	Washer
6	09139-05043	Screw
7	09161-07009	Washer
8	94484-12C11	Nut
10	09161-05017	Washer
11	09148-05004	Nut
12	09139-06053	Screw
13	09160-06053	Washer
14	94520-12C00	Plug, Cowling Center
15	94522-12C00	Pipe, Cowling Center
16	94523-12C00	Pin, Cowling Fitting Pipe
18	09139-06053	Screw
19	09160-06056	Washer (6.5x18x1)
20	09180-06114	Spacer
21	09320-09016	Cushion
22	94740-22D01	Bracket, Under Cowling Lower
22	94740-22D01	Bracket, Under Lh
22	94740-22D10	Bracket, Under Rh
23	09116-06024	Bolt (6x16)
24	94510-22D01	Brace, Cowling
27	09250-08013	Cap
28	09116-06143	Bolt (6x20)
29	09180-06114	Spacer
30	09320-08047	Cushion
31	94520-22D01	Brace, Rear View Mirror
32	09116-06143	Bolt (6x20)
33	09320-09009	Cushion
34	09169-06062	Washer (6.3x17x1.6)
35	94576-22D00	Cushion, Rear View Mirror
36	09136-06004	Screw (6x12)
37	09161-06023	Washer
38	94418-22D00	Bracket, Headlamp Rh
39	94419-22D00	Bracket, Headlamp Lh
41	94454-12C01	Body, Air Duct
43	09402-36403	Clamp
45	94455-22D00	Body, Air Duct
46	09321-10018	Cushion

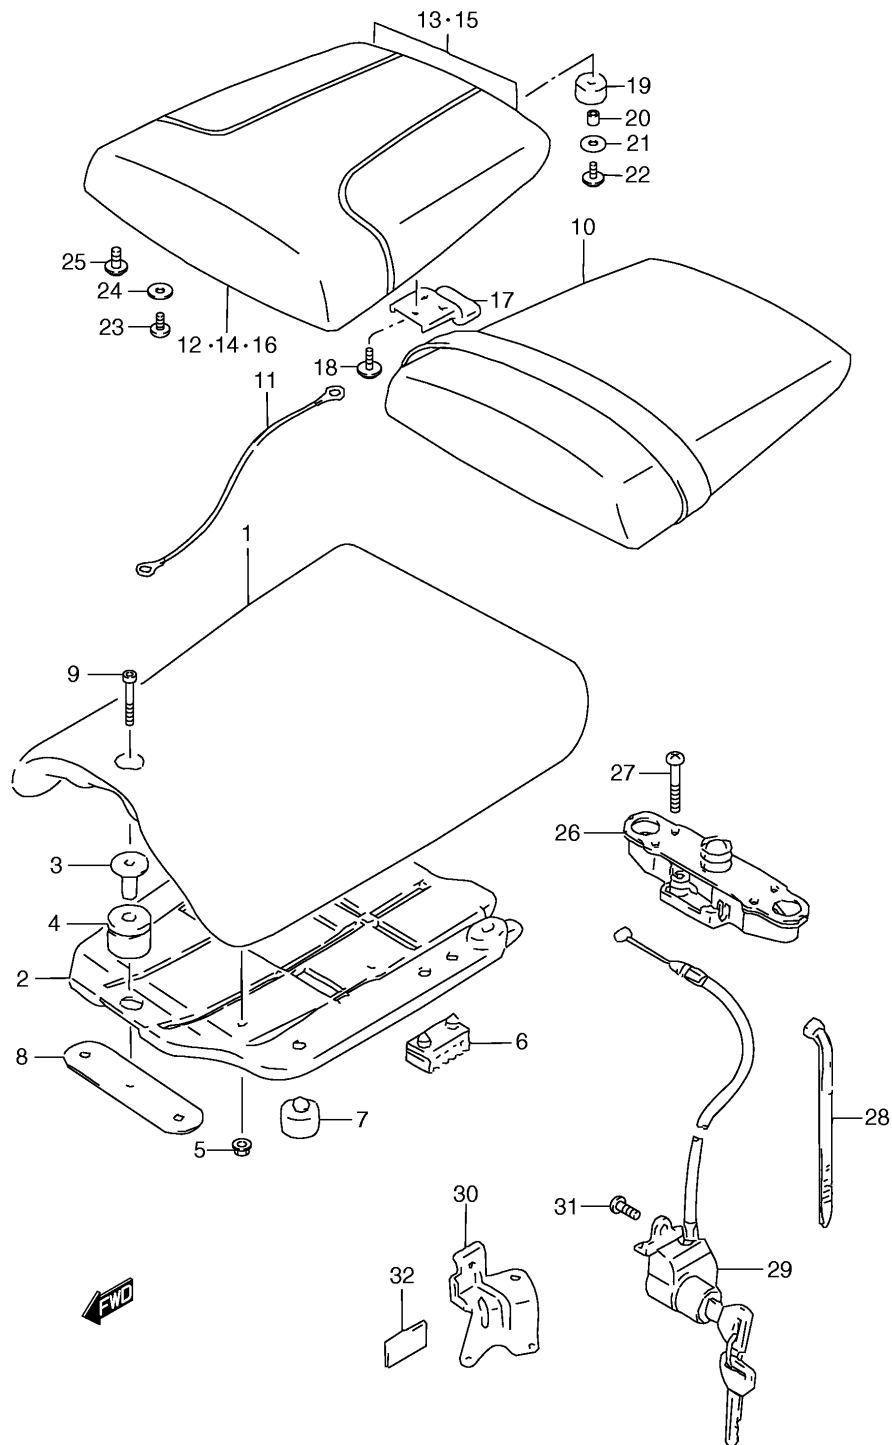


N° Réf.	N° Pièce	Désignation
1	45100-22D01-58R	Seat Assy (black)
2	45111-22D00	• . Frame, Seat Bottom
3	45219-22D00	• . Collar, Front
4	45149-22D00	• . Cushion, Seat
5	08316-26046	• . Nut
6	45149-31300	• . Cushion
7	09321-10011	• . Cushion
8	45119-22D00	Plate, Seat Front
9	09106-06065	Bolt
10	45300-22D00-58R	Seat Assy, Pillion (black)
11	45280-12C10	• . Cable, Pillion Seat
12	45500-22D30-0JW	Box, Seat Tail (white)
13	68160-22D40-0NE	• . Tape Set
14	45500-22D00-33J	Box, Seat Tail (black)
15	68160-22D30-M26	• . Tape Set
23	03541-05126	• . Screw, Center
26	45220-13601	Lock Assy, Seat Striker
27	02112-06356	Screw
28	09407-18403	Clamp
29	95700-06840	Lock Set, Seat
30	45285-22D10	Bracket, Seat Lock
31	09139-06048	Screw
32	63411-35B00	Cushion, Seat Lock

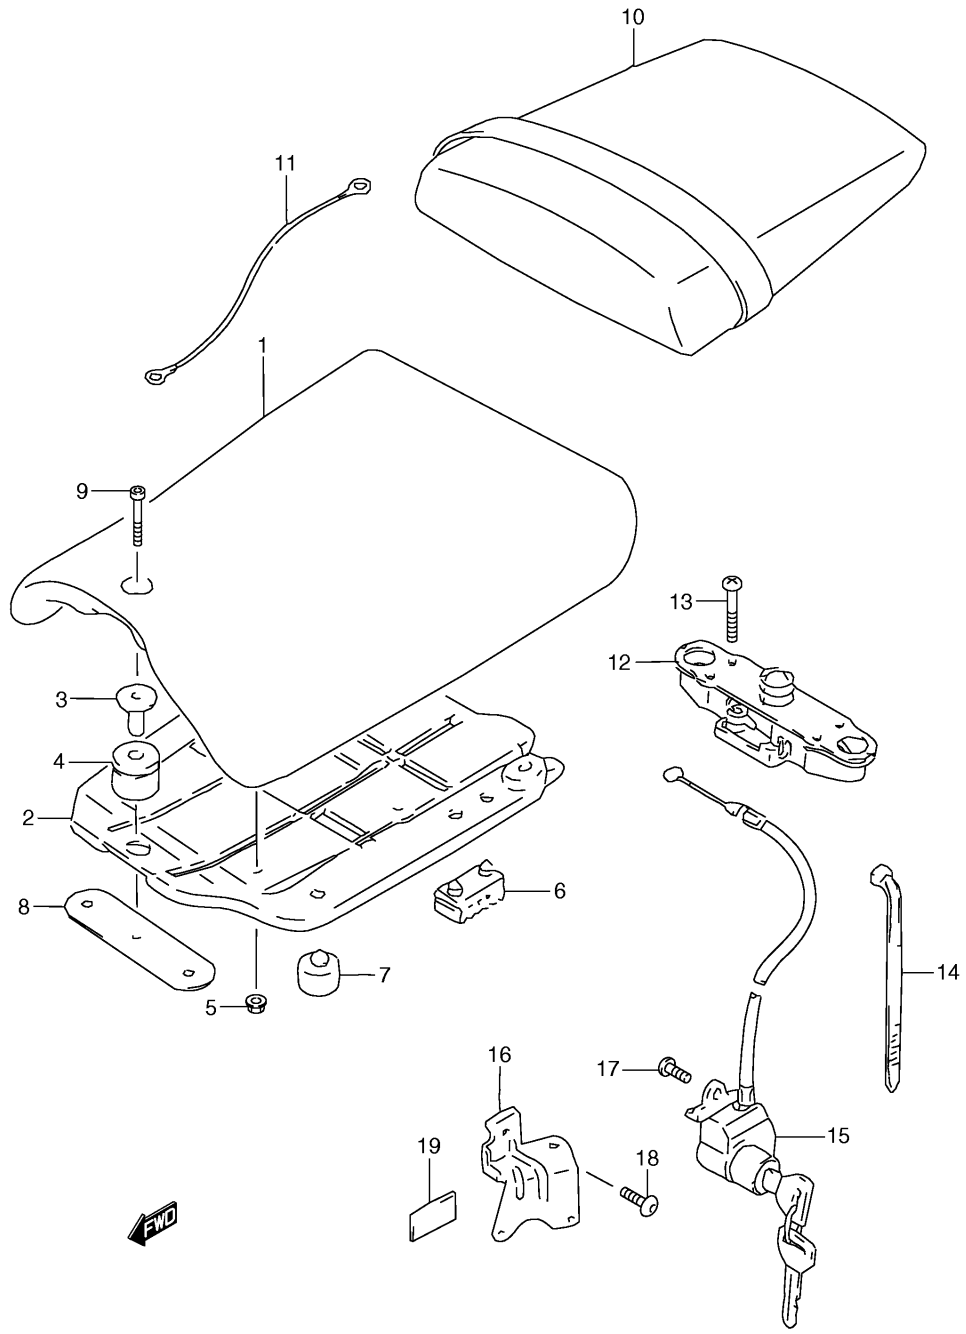


N° Réf.	N° Pièce	Désignation
1	45100-22D01-58R	Seat Assy (black)
2	45111-22D00	• . Frame, Seat Bottom
3	45219-22D00	• . Collar, Front
4	45149-22D00	• . Cushion, Seat
5	08316-20043	• . Nut
6	45149-31300	• . Cushion
7	09321-10011	• . Cushion
8	45119-22D00	Plate, Seat Front
9	07130-06355	Bolt
10	45300-33C10-5FM	Seat Assy, Pillion (blue)
10	45300-33C10-6BY	Seat Assy, Pillion (black)
12	45220-13601	Lock Assy, Seat Striker
13	02112-06353	Screw
14	09407-18403	Clamp
15	95700-12852	Lock Set, Seat
16	45285-22D10	Bracket, Seat Lock
17	09139-06075	Screw, Seat Lock
18	09139-06064	Screw, Bracket

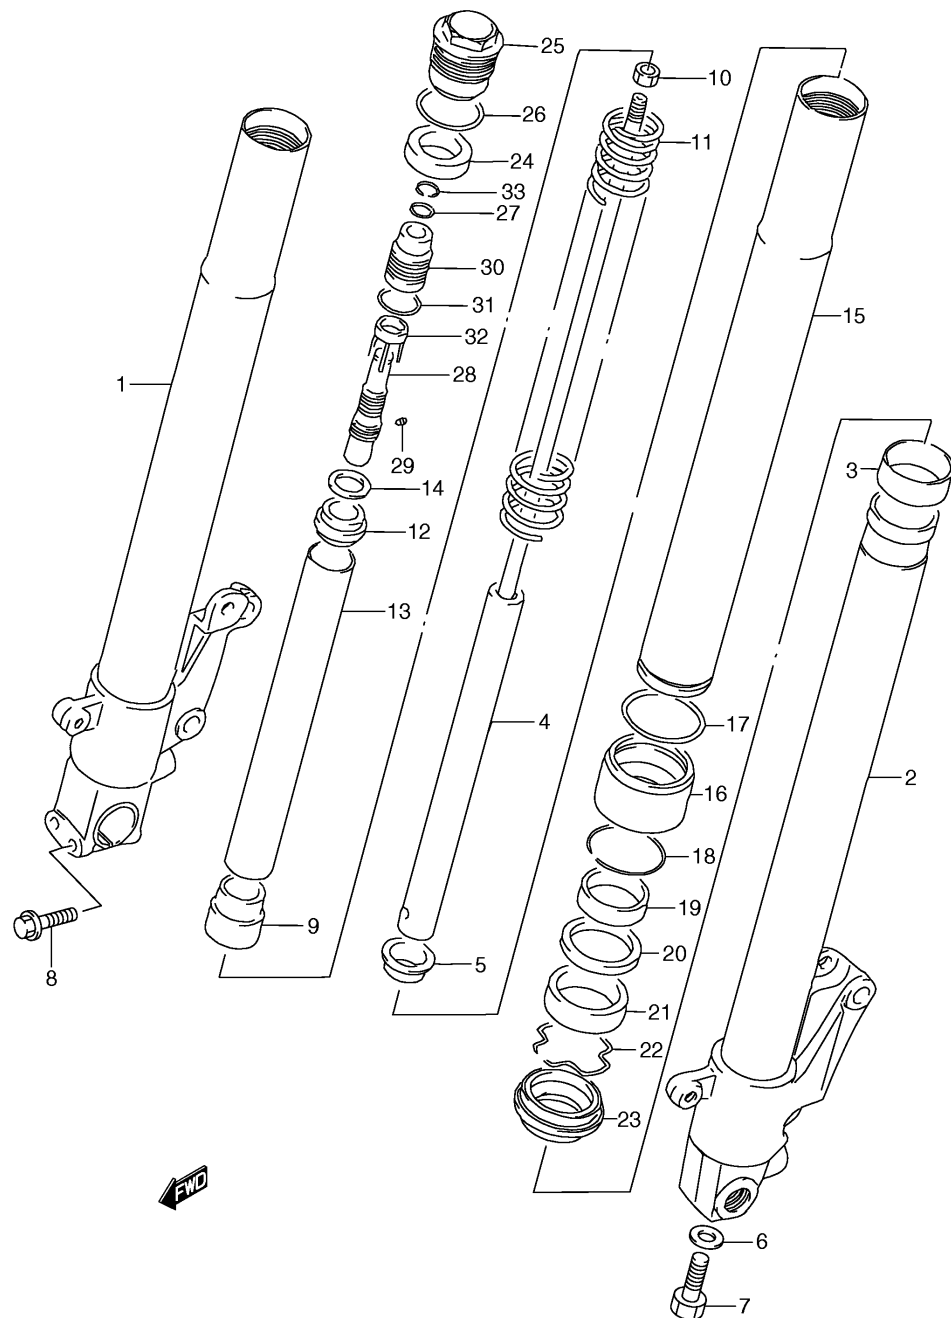


N° Réf.	N° Pièce	Désignation
	51103-22D00	Damper Assy, Rh
	51103-22D20	Damper Assy, Rh
	51104-22D00	Damper Assy, Lh
	51104-22D20	Damper Assy, Lh
1	51110-22D00	. . Tube, Inner Rh
2	51120-22D00	. . Tube, Inner Lh
3	51121-48B31	. . Bush, Slide
4	52110-22D00	. . Damper, Front
4	52110-22D20	. . Damper, Front
5	51815-22D00	. . Plate, Centering
6	51148-36011	. . Gasket
7	51138-08D00	. . Bolt
8	01517-08508	. . Bolt
9	51172-22D00	. . Joint, Spring Lower
9	51172-22D20	. . Joint, Spring Lower
10	51827-32C00	. . Nut, Rod
11	51171-22D00	. . Spring, Main
11	51171-22D20	. . Spring, Main
12	51175-22D00	. . Guide, Spring Upper
13	51176-22D10	. . Spacer, Spring
13	51176-22D00	. . Spacer, Spring
14	51172-34370	. . Guide, Spring
15	51131-22D00	. . Tube, Outer
16	51135-17D00	. . Case, Oil Seal
17	51117-08D00	. . O Ring
18	51156-08D00	. . Ring, Snap
19	51152-48B31	. . Bush, Guide
20	51168-38B00	. . Spacer, Seal
21	51153-08D00	. . Seal, Oil
22	51556-38B00	. . Ring, Stopper
23	51173-08D00	. . Seal, Dust
24	51193-17D00	. . Rubber, Seat
25	51189-17D00	. . Bolt, Fork
26	51187-08D00	. . O Ring, Fork Bolt
27	51834-17C00	. . O Ring
28	51829-22D00	. . Case, Adjuster
29	51833-17D00	. . Screw
30	51828-17D00	. . Adjuster, Spring
31	51199-17D00	. . O Ring
32	51823-17D00	. . Plate, Spring Adjuster
33	51837-17D00	. . Ring, Stopper

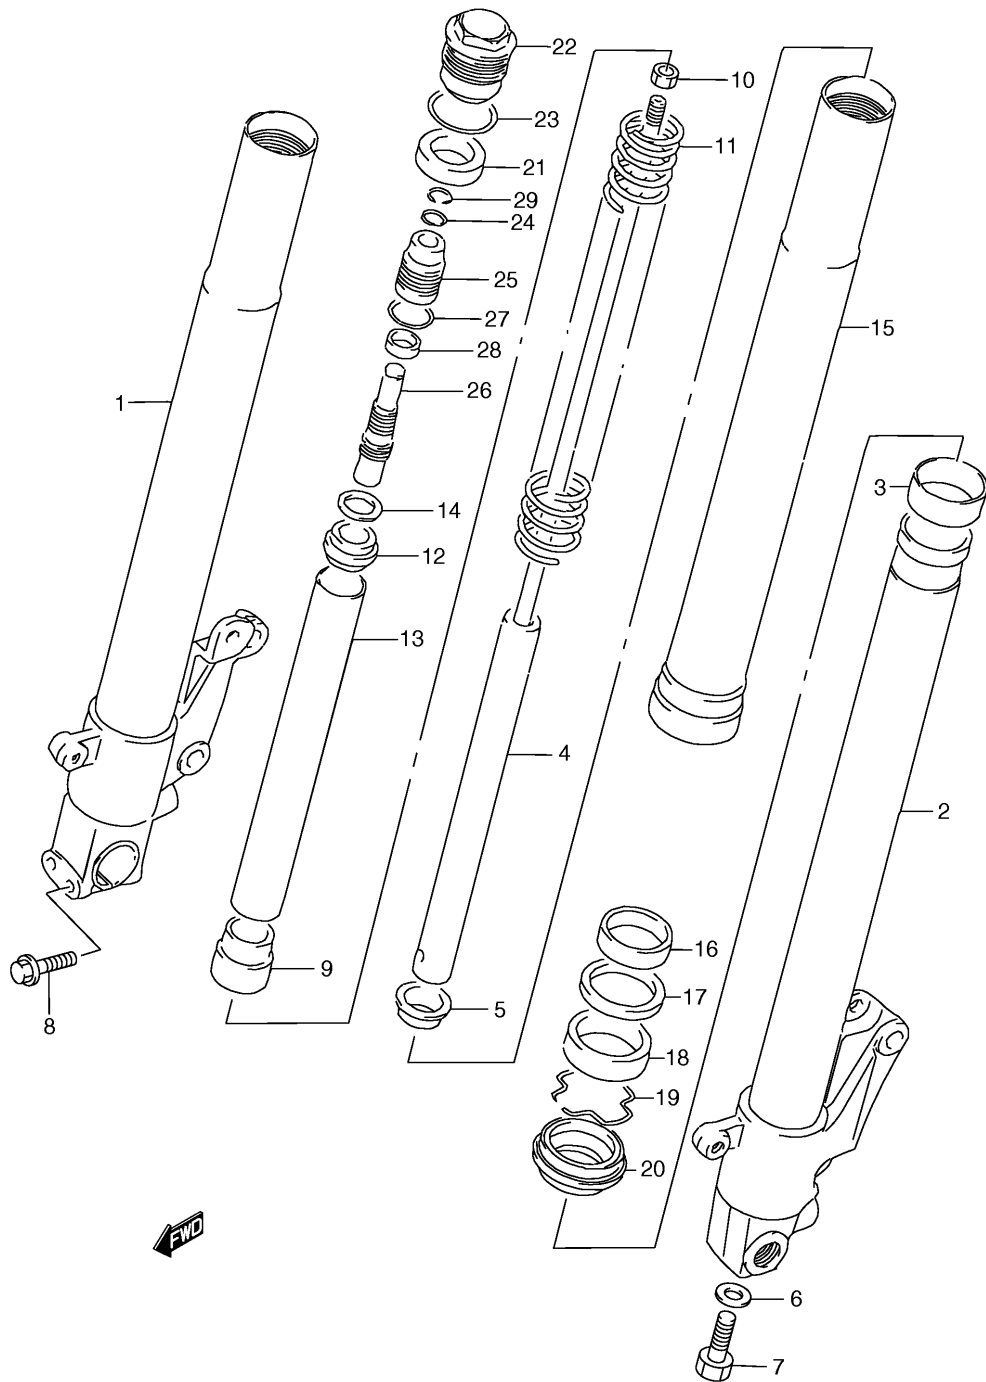

N° Réf.	N° Pièce	Désignation
	51103-22D50	Damper Assy, Rh
	51104-22D50	Damper Assy, Lh
1	51110-22D30	. . Tube, Inner Rh
2	51120-22D30	. . Tube, Inner Lh
3	51121-48B31	. . Bush, Slide
4	52110-22D00	. . Damper, Front
5	51815-17D00	. . Plate, Centering
6	51148-36011	. . Gasket
7	51138-08D00	. . Bolt
8	01550-08507	. . Bolt
9	51172-22D20	. . Joint, Spring Lower
10	09140-10027	. . Nut, Rod
11	51171-22D50	. . Spring, Main
12	51175-22D00	. . Guide, Spring Upper
13	51176-22D00	. . Spacer, Spring
14	51172-34370	. . Guide, Spring
15	51131-22D80	. . Tube, Outer
16	51152-08D00	. . Bush, Guide
17	51168-38B00	. . Spacer, Seal
18	51153-08D00	. . Seal, Oil
19	51556-38B00	. . Ring, Stopper
21	51193-17D00	. . Rubber, Seat
22	51189-18D00	. . Bolt, Fork
23	51187-08D00	. . O Ring, Fork Bolt
24	09280-14003	. . O Ring
25	51829-22D00	. . Case, Adjuster
26	51828-17D00	. . Adjuster, Spring
27	51199-17D00	. . O Ring
28	51823-22D30	. . Plate, Spring Adjuster
29	51837-17D00	. . Ring, Stopper

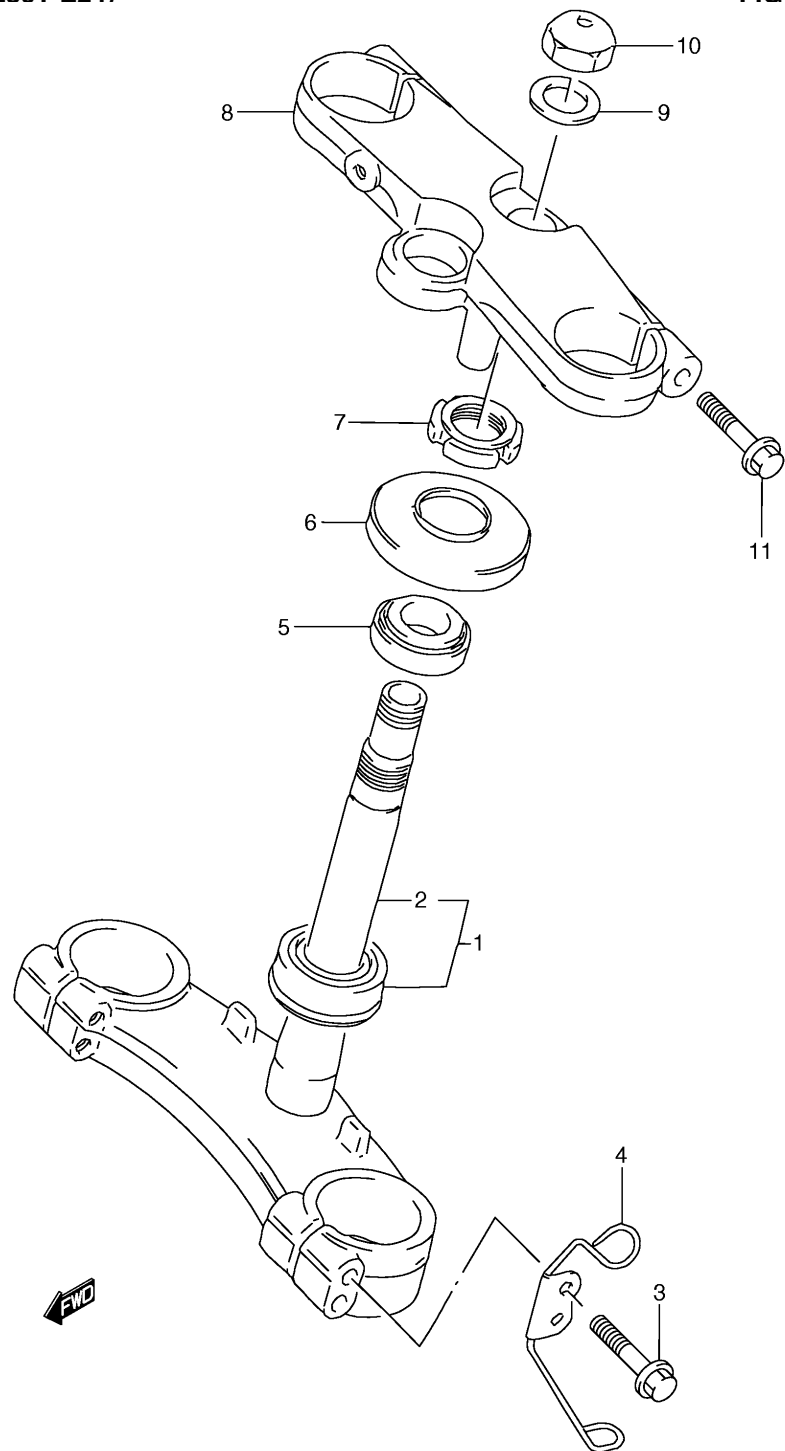


N° Réf.	N° Pièce	Désignation
1	51410-22D00	Stem, Steering
2	09265-30009	• . Bearing (30x55x17)
3	01550-08403	Bolt
4	34938-22D30	Clamp, Meter Cable
5	09265-25008	Bearing (25x47x15)
6	09285-34009	Oil Seal
7	51631-28000	Nut, Steering Stem
8	51311-22D00	Head, Steering Stem
9	51356-24B01	Washer
10	51353-22D00	Nut
11	01550-08403	Bolt

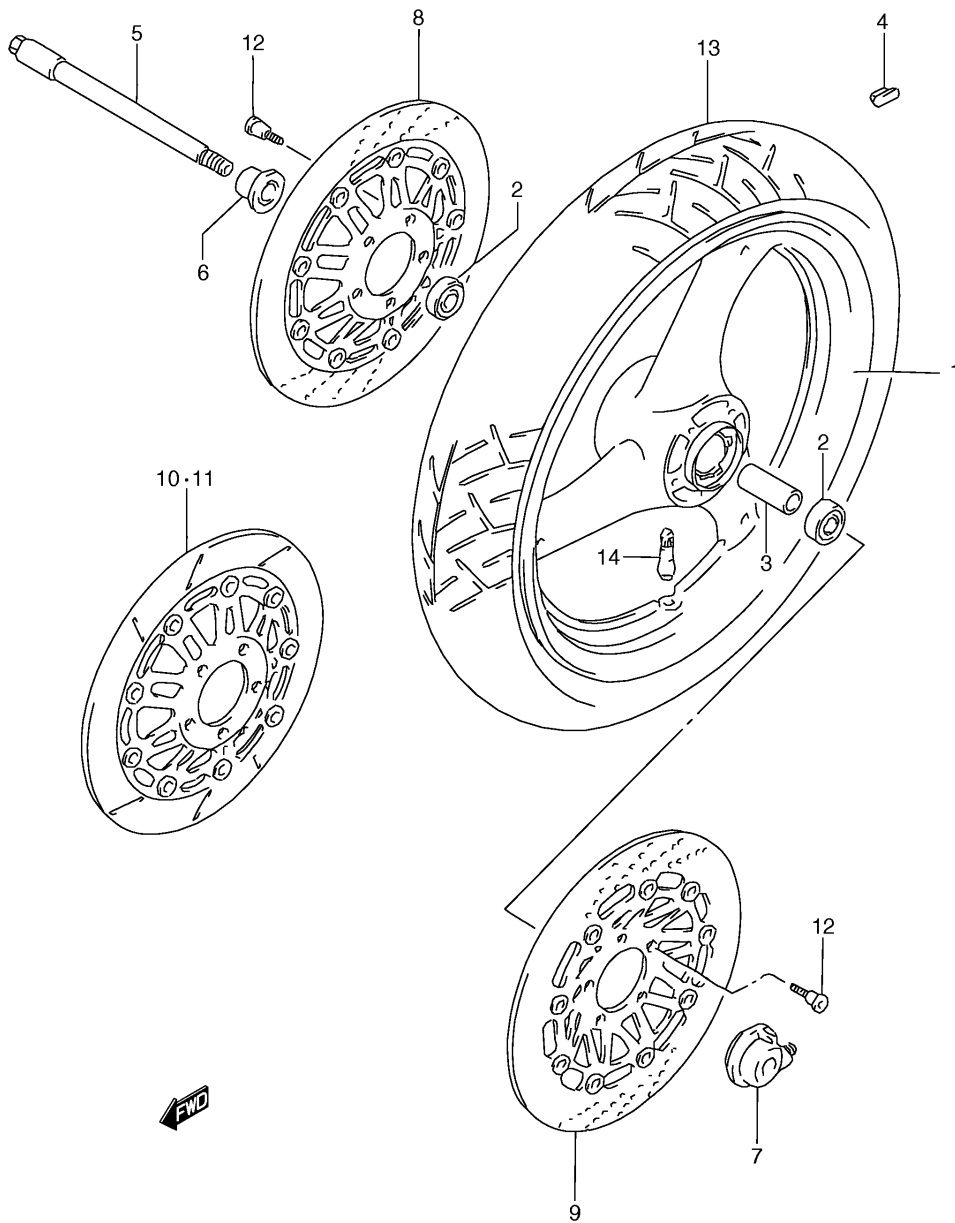


N° Réf.	N° Pièce	Désignation	
1	54111-32C00-28W	Wheel, Front (mt3.00x17)	(white)
1	54111-32C00-019	Wheel, Front (mt3.00x17)	(black)
1	54111-32C00-12R	Wheel, Front (mt3.00x17)	(silver)
1	54111-32C00-1TU	Wheel, Front (mt3.00x17)	(purple)
2	08143-62037	Bearing	
3	09180-17094	Spacer (17.5x22.5x73)	
4	55411-00A00	Balancer, Wheel (10g)	
4	55412-00A01	Balancer, Wheel (20g)	
4	55413-00A01	Balancer, Wheel (30g)	
5	54711-22D00	Axle, Front	
6	54740-22D00	Spacer, Front Axle Rh	
7	54600-32C02	Box Assy, Speedometer Gear	
8	59210-22D00	Disc, Front Brake Rh	(silver/black)
9	59220-22D00	Disc, Front Brake Lh	(silver/black)
10	59210-22D10	Disc, Front Brake Rh	(silver/black)
11	59220-22D10	Disc, Front Brake Lh	(silver/black)
12	09106-08082	Bolt (8x33)	
13	55110-22D10	Tire, Front (110/70 R17 54h)	(bridgestone)
14	43130-24A00	Valve Assy, Wheel Rim	
14	43130-24A11	Valve Assy, Wheel Rim	




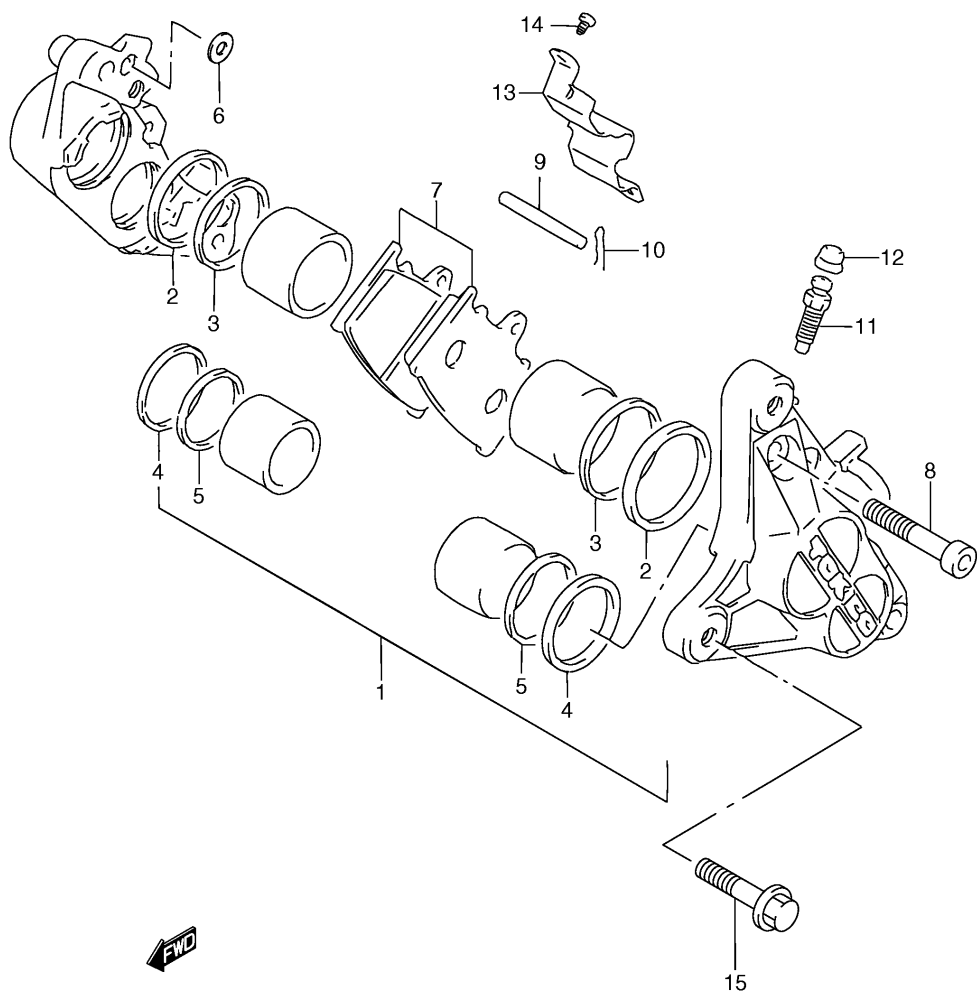


N° Réf.	N° Pièce	Désignation
	59100-06C70	Caliper Assy, Rh
	59300-06C70	Caliper Assy, Lh
1	59100-32811	• . Piston Set
2	59107-39100	•• .. Seal
3	59108-36A00	•• .. Boot
4	59107-03A00	•• .. Seal
5	59108-32C00	•• .. Seal
6	69107-34200	•• .. Seal
7	59100-22810	• . Pad Set
8	59145-00A00	• . Bolt
9	69141-45000	• . Pin
10	69142-45000	• . Clip
11	59121-18410	• . Bleeder
12	55156-66310	• . Cap
13	59152-22D00	• . Cover, Rh
13	59151-22D01	• . Cover, Lh
14	59153-22D00	• . Screw
15	01517-10308	Bolt

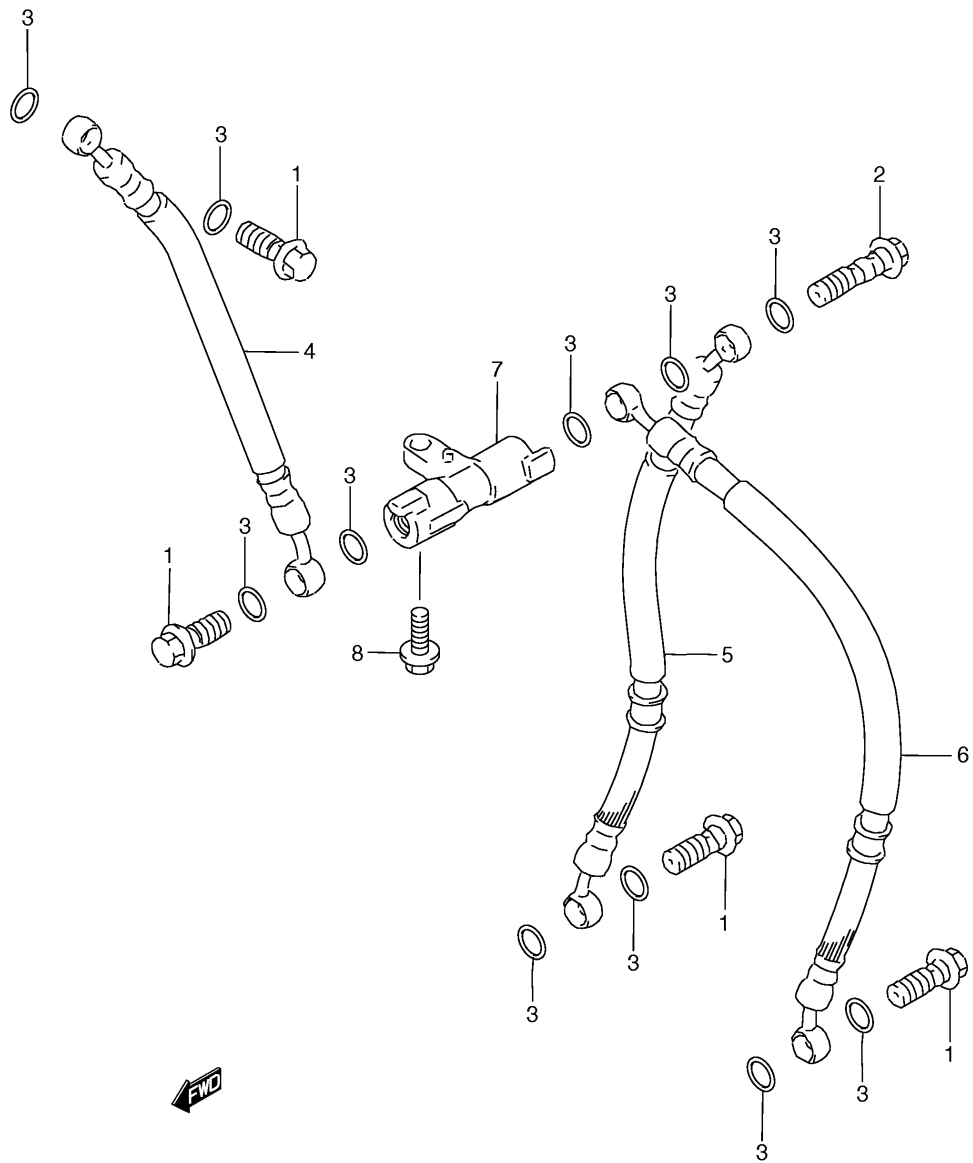


N° Réf.	N° Pièce	Désignation
1	09360-10017	Union Bolt (10x1.00x24)
2	09360-10018	Union Bolt (10x1.00x36)
3	09161-10009	Washer (10x15x1.5)
4	59480-22D10	Hose, Front Brake No.1
5	59240-22D00	Hose, Front Brake No.2 Rh
6	59440-22D00	Hose, Front Brake No.2 Lh
7	59491-12C00	Joint, Brake Hose
8	01517-06167	Bolt

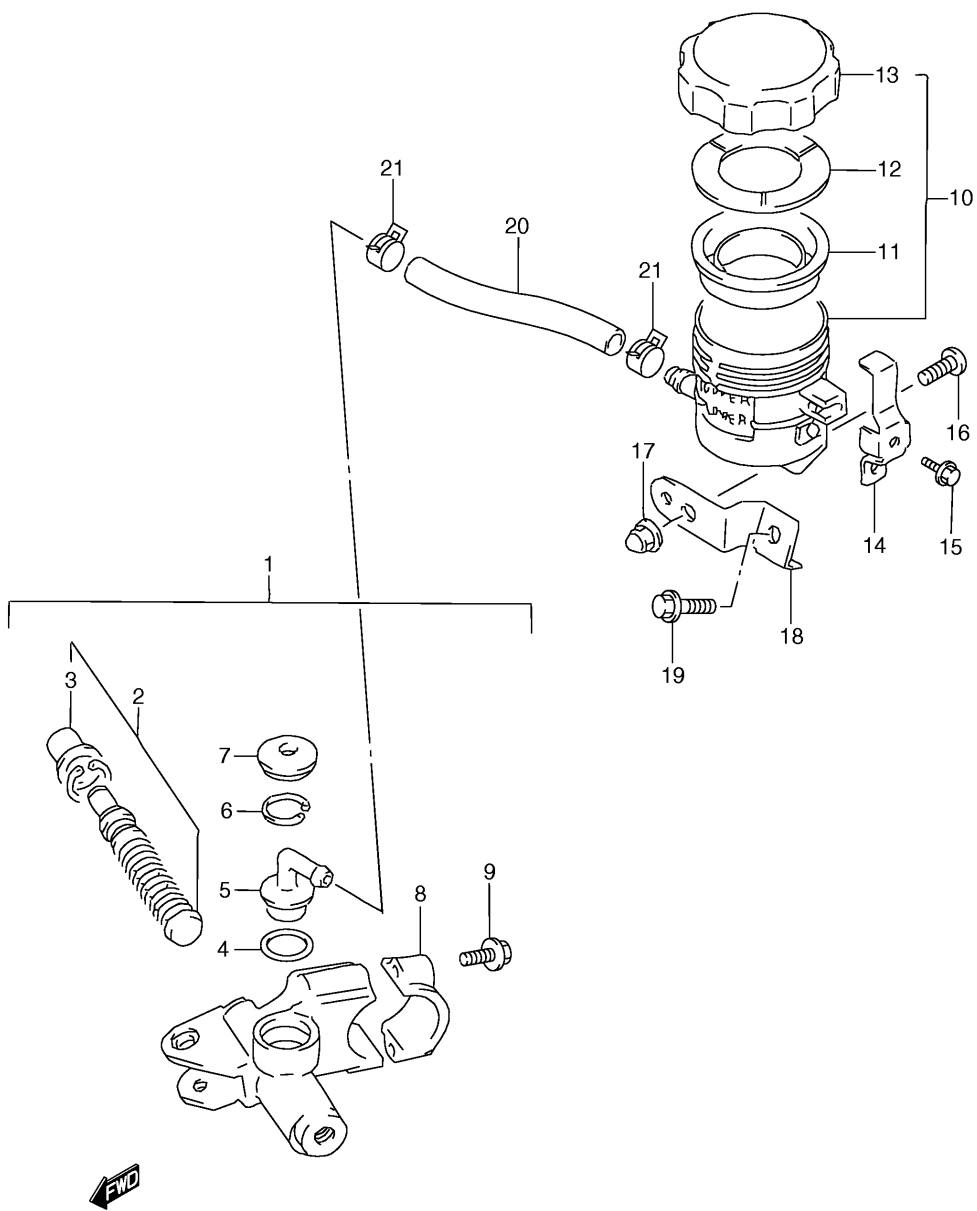

N° Réf.	N° Pièce	Désignation
1	59600-32C00	Cylinder Assy, Front Master
2	59600-45860	. Piston/cup Set
3	59666-44300	.. Boot
4	69686-34200	. O Ring
5	59672-17C00	. Connector
6	69674-00B20	. Circlip
7	59673-17C00	. Cover, Dust
8	59671-36500	. Holder
9	59675-17C00	. Bolt
10	59740-07D00	Tank Assy, Reservoir
11	59667-18441	. Diaphragm
12	59668-18441	. Plate, Diaphragm
13	59669-07D00	. Cap
14	59743-17C00	Plate, Reservoir Tan Cap
15	02112-74128	Screw
16	02142-06164	Screw
17	08313-21064	Nut
18	59751-22D00	Bracket, Front Reservoir Tank
19	01517-06125	Bolt
20	59731-32C00	Hose, Front Reservoir Tank
21	59735-17C00	Clamp, Reservoir Tank Front

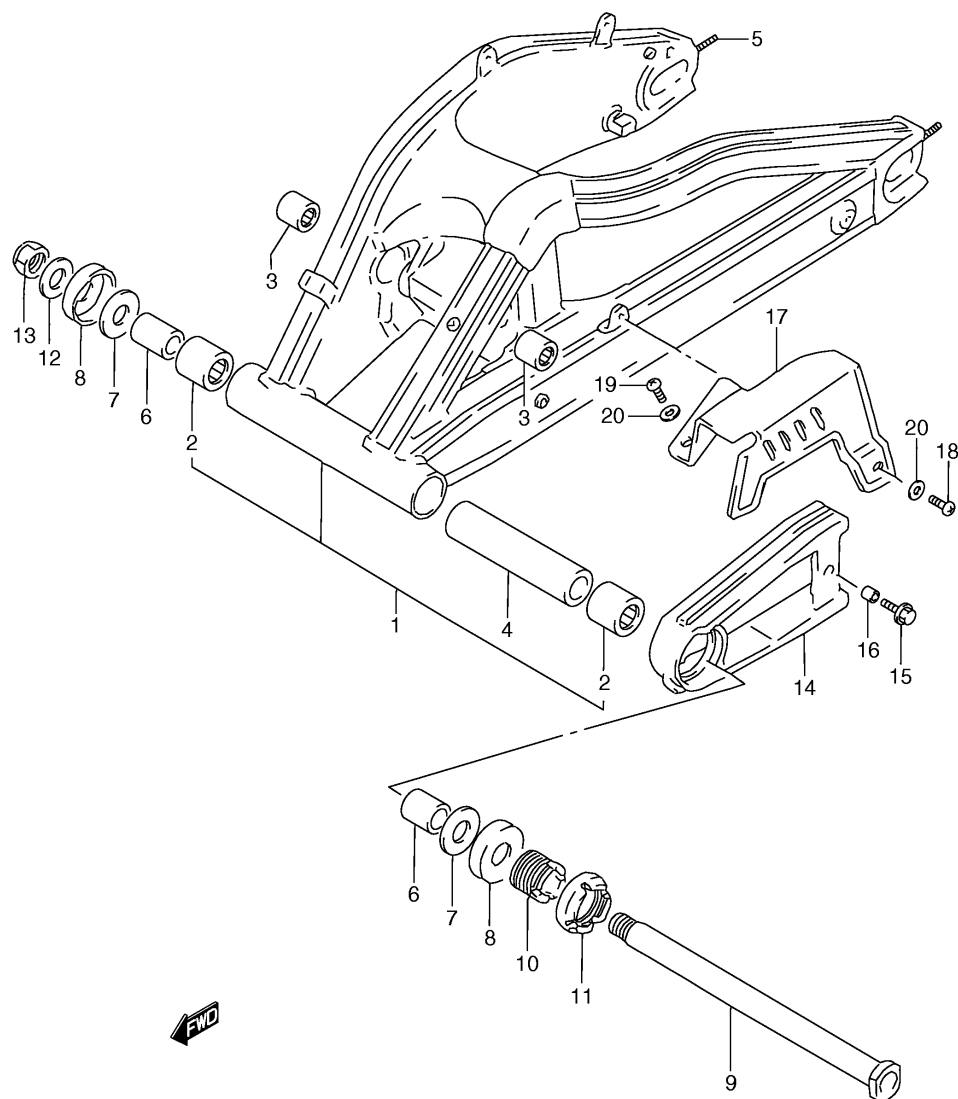


N° Réf.	N° Pièce	Désignation
1	61000-22D00	Swinging Arm Assy, Rear
2	09263-25024	. . Bearing (25x33x30)
3	09263-17039	. . Bearing (17x24x20)
4	61282-12C00	. . Spacer
5	61431-40C00	. . Stud, Chain Adjuster
6	61251-17C00	Spacer, Pivot Bearing
7	08211-20381	Thrust Washer (t:1)
8	61262-17C00	Dust Seal, Pivot
9	61211-22D00	Shaft, Pivot
10	61213-22D00	Bolt, Pivot
11	61214-40C30	Nut, Pivot Bolt
12	08322-11188	Washer
13	09159-18007	Nut
14	61273-22D00	Buffer, Chain Tuch Difence
15	09116-06111	Bolt (6x20)
16	09180-06142	Spacer
17	61311-22D00	Case, Chain
18	02142-06104	Screw
19	02142-06205	Screw
20	09169-06037	Washer

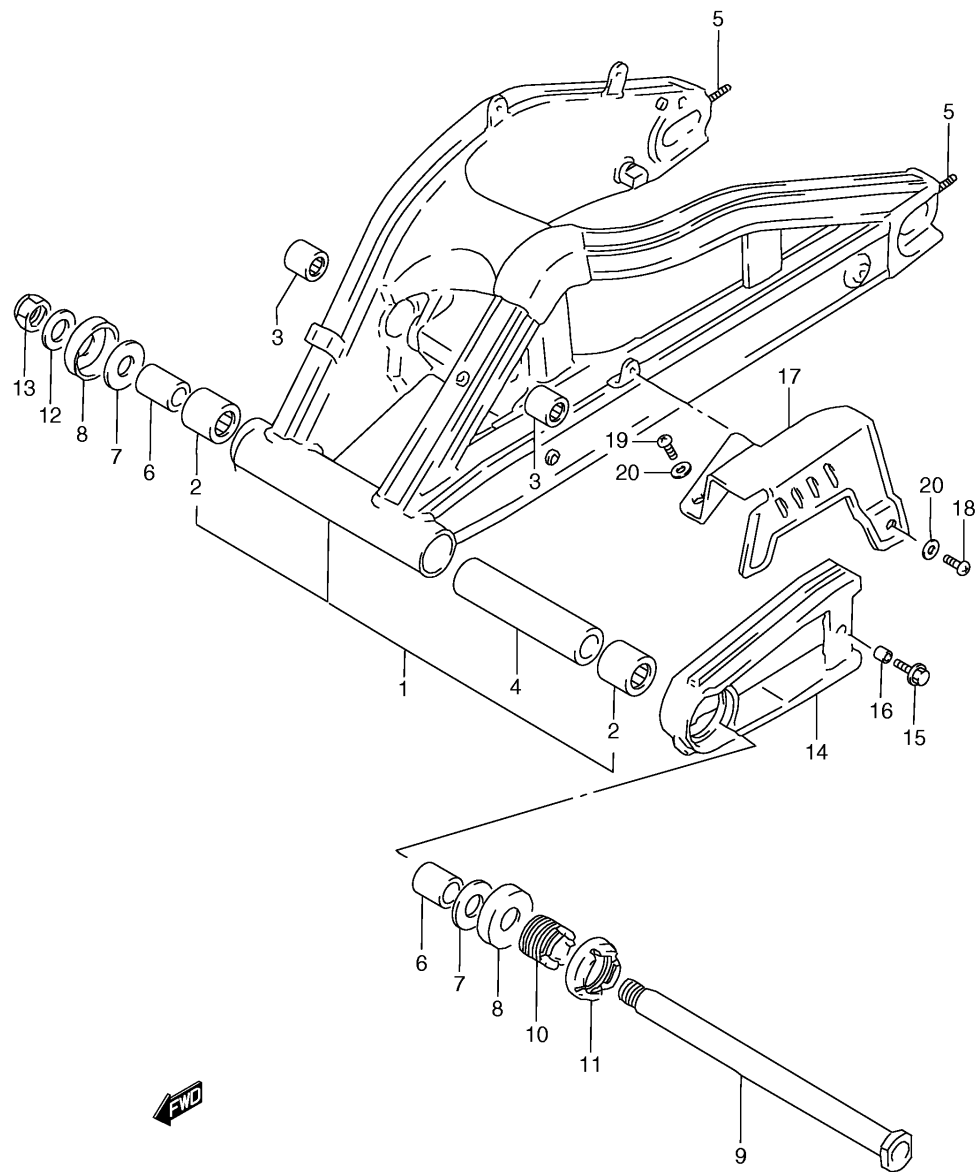


N° Réf.	N° Pièce	Désignation
1	61000-22D10	Swinging Arm Assy, Rear
2	09263-25024	. . Bearing (25x33x30)
3	09263-17039	. . Bearing (17x24x20)
4	61282-12C00	. . Spacer, Pivot Center
5	61431-40C00	. . Stud, Chain Adjuster
6	61251-17C00	Spacer, Pivot Bearing
7	08211-20381	Thrust Washer (t:1)
8	61262-17C00	Dust Seal, Pivot
9	61211-22D00	Shaft, Pivot
10	61213-22D00	Bolt, Pivot
11	61214-40C30	Nut, Pivot Bolt
12	08322-11188	Washer
13	09159-18007	Nut
14	61273-22D00	Buffer, Chain Tuch Difence
15	09116-06111	Bolt (6x20)
16	09180-06142	Spacer
17	61311-22D00	Case, Chain
18	02142-06104	Screw
19	02142-06205	Screw, Front
20	09169-06037	Washer


N° Réf. N° Pièce Désignation

1	61000-22D50	Swinging Arm Assy, Rear
2	09263-25024	. . Bearing (25x33x30)
3	61282-12C00	. . Spacer, Pivot Center
4	61431-40C00	. . Stud, Chain Adjuster
5	61251-17C00	Spacer, Pivot Bearing
6	08211-20381	Thrust Washer (t:1)
7	61262-17C00	Dust Seal, Pivot
8	61211-22D00	Shaft, Pivot
9	61213-22D00	Bolt, Pivot
10	61214-40C30	Nut, Pivot Bolt
12	09159-18007	Nut
13	61273-22D00	Buffer, Chain Tuch Difense
14	09116-06111	Bolt (6x20)
15	09180-06142	Spacer
16	61311-22D00	Case, Chain
19	09169-06037	Washer

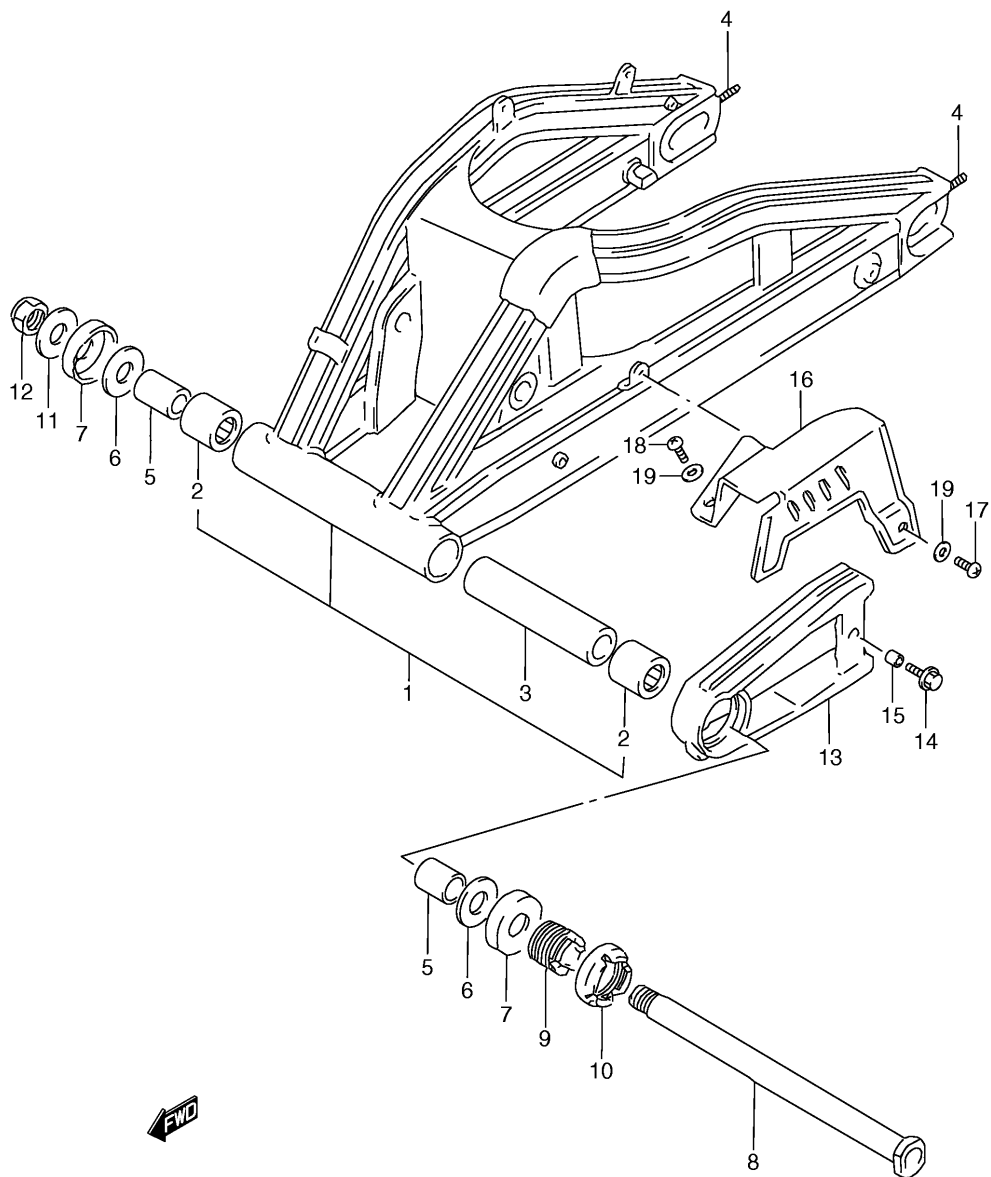

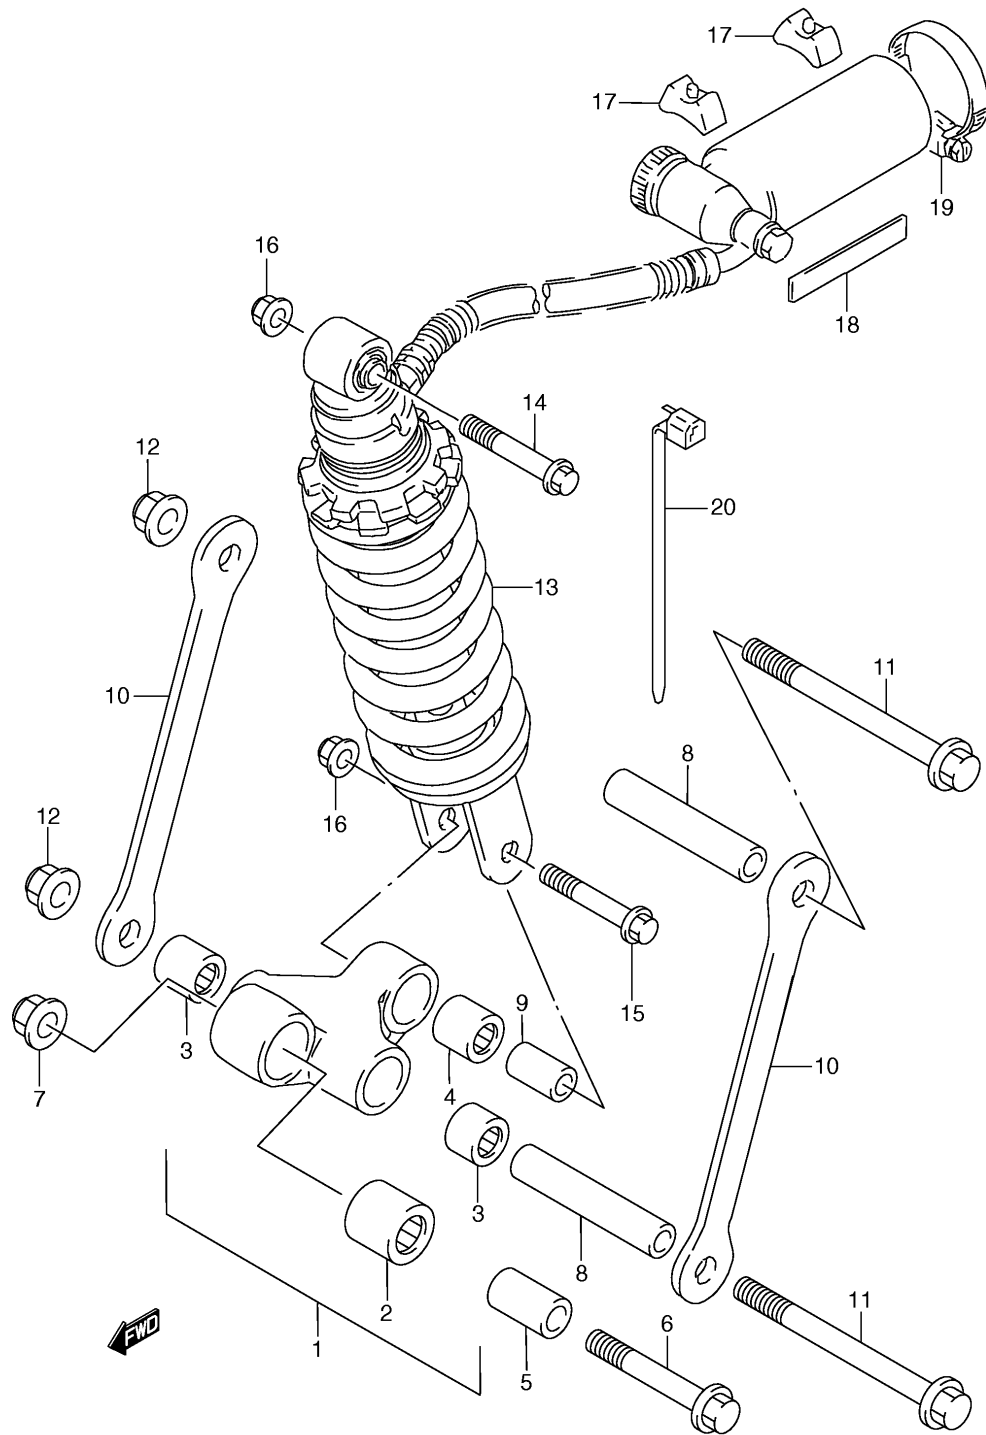


N° Réf.	N° Pièce	Désignation
1	62600-22810	Lever Set, Rear Cushion
2	09263-20070	. . Bearing (20x27x30)
3	09263-17039	. . Bearing (17x24x20)
4	09263-17034	. . Bearing
5	62684-12C00	Spacer, Front
6	62668-27A00	Bolt, Front
7	08319-31128	Nut
8	09180-12122	Spacer (12x17x85)
9	62684-40A10	Spacer, Rear
10	62641-22D00	Rod, Rear Cushion Lever
10	62641-22D10	Rod, Rear Cushion Lever
11	09103-12037	Bolt (12x115)
12	08319-31128	Nut
13	62100-22D20	Absorber Assy, Rear Shock
13	62100-22D30	Absorber Assy, Rear Shock
14	09103-10032	Bolt, Upper
15	09103-10101	Bolt, Lower
16	08319-31107	Nut
17	62331-12C01	Cushion, Reservoir Tank
19	09402-70501	Clamp, Tank
20	09407-14403	Clamp (l:125)
20	09407-18402	Clamp (l:165)

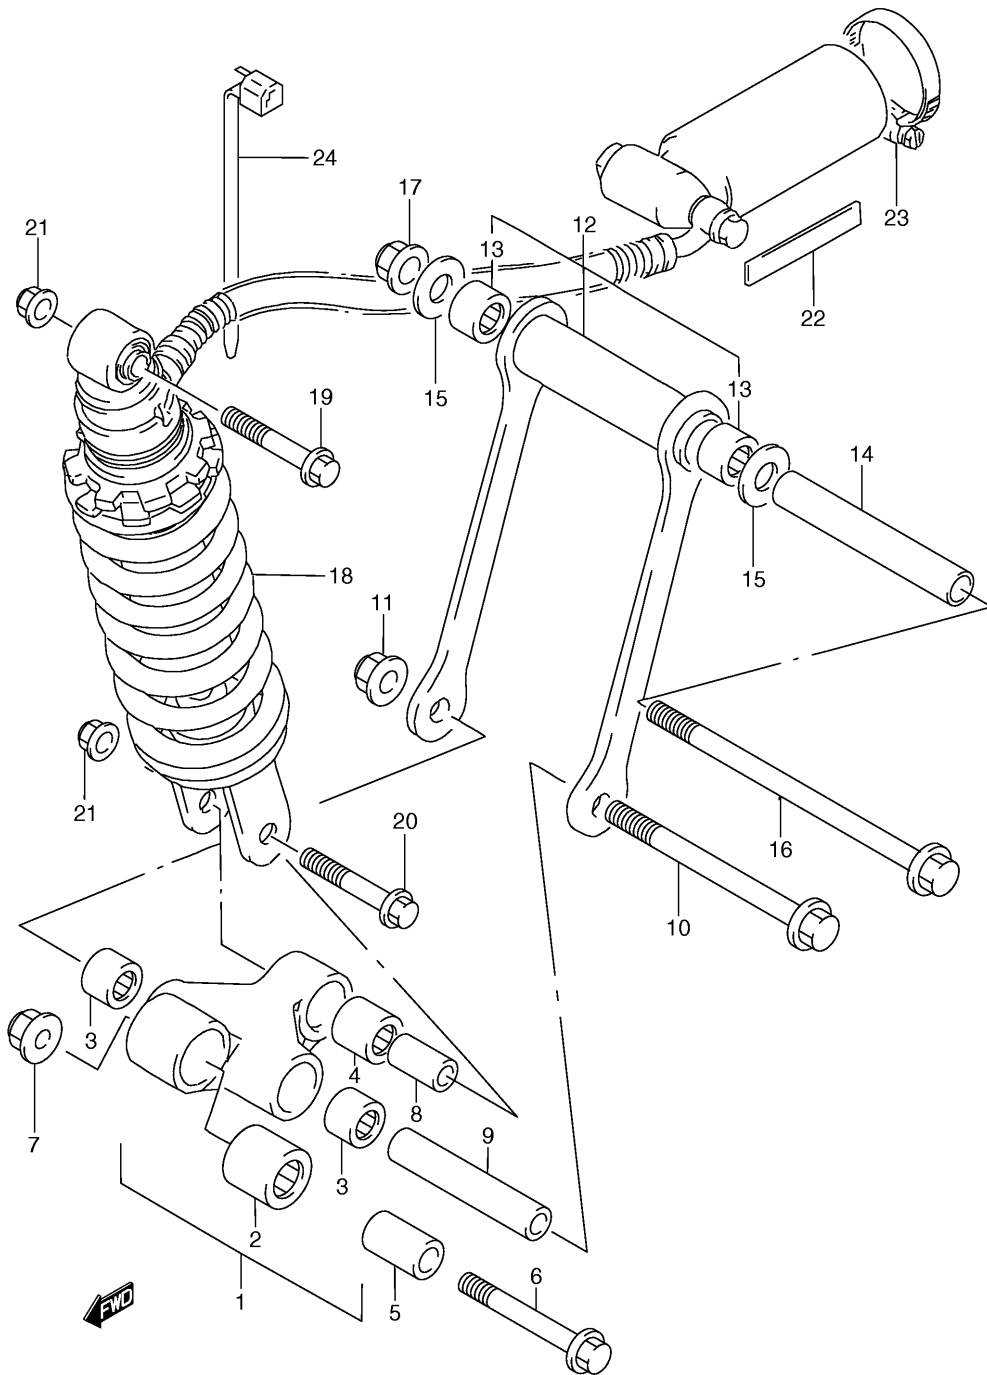


N° Réf.	N° Pièce	Désignation
1	62600-22810	Lever Set, Rear Cushion
2	09263-20070	• . Bearing (20x27x30)
3	09263-17039	• . Bearing (17x24x20)
4	09263-17034	• . Bearing
5	62684-12C00	Spacer, Front
6	62668-27A00	Bolt, Front
7	08319-31128	Nut
8	62684-40A10	Spacer, Rear
9	09180-12122	Spacer, Center
10	09103-12037	Bolt, Center
11	08319-31128	Nut
12	62600-22820	Rod Set, Rear Cushion Lever
13	09263-17039	• . Bearing
14	09180-12134	Spacer, Rod
15	08211-12301	Washer
16	09103-12031	Bolt, Rod
17	08319-31128	Nut
18	62100-22D90	Absorber Assy, Rear Shock
19	09103-10032	Bolt, Upper
20	09103-10101	Bolt, Lower
21	08319-31107	Nut
22	62331-07D00	Cushion, Reservoir Tank
23	09407-14403	Clamp (l:125)
24	09407-18402	Clamp (l:165)

(18x88)



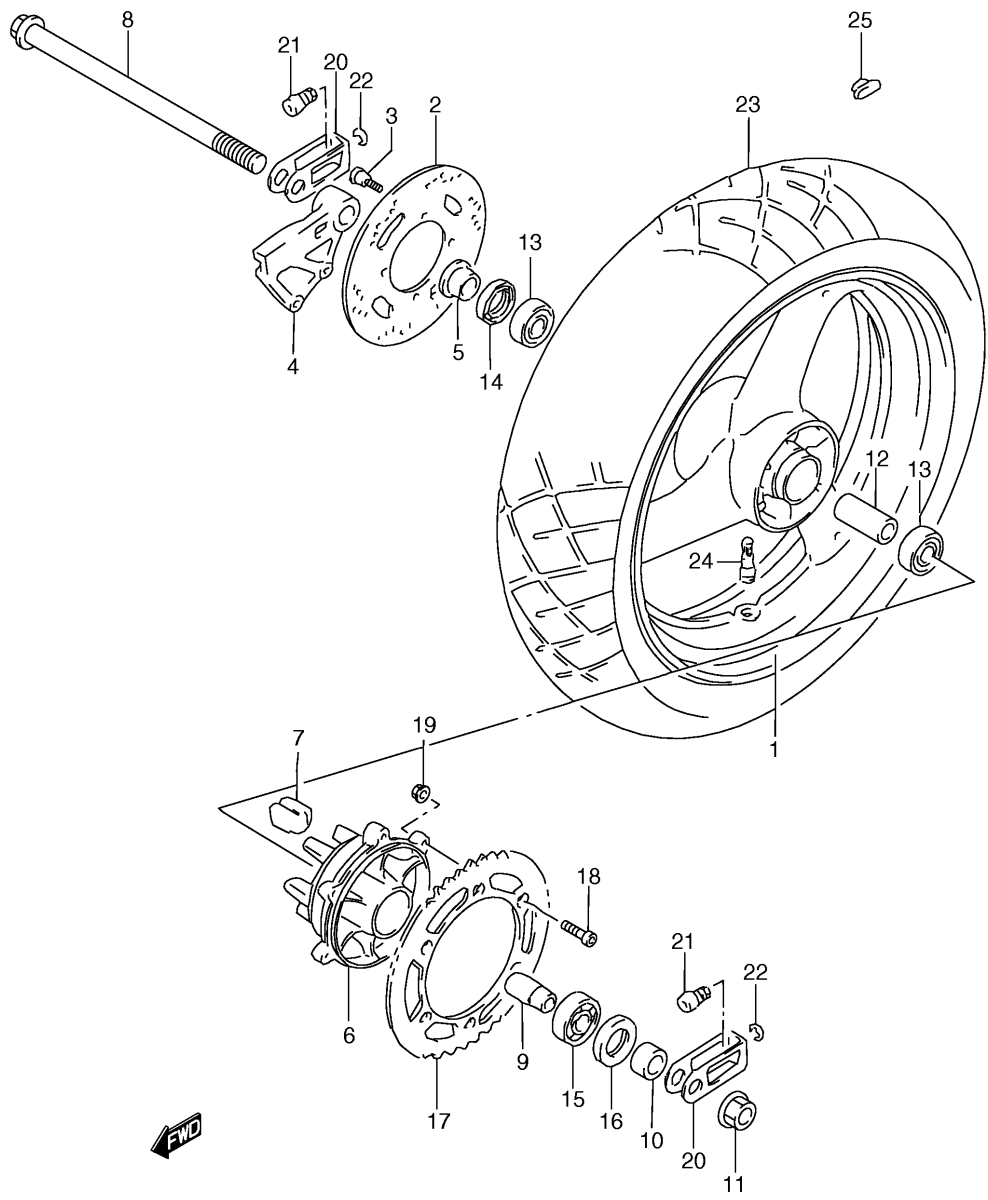


N° Réf.	N° Pièce	Désignation
1	64150-22D01-28W	Wheel, Rear (17xmt4.50) White
1	64150-22D00-019	Wheel, Rear (17xmt4.50) Black
1	64150-22D01-12R	Wheel, Rear (17xmt4.50) Silver
1	64150-22D00-1TU	Wheel, Rear (17xmt4.50) Purple
2	69211-22D00	Disc, Rear Brake
3	09106-08082	Bolt (8x33)
4	69700-22810	Bracket, Rear Caliper
5	64741-22D00	Spacer, Rh
6	64611-12C04	Drum, Rear Sprocket
7	64651-22D00	Absorber, Rear Hub Shock
8	64711-22D00	Axle, Rear
9	64733-12C00	Retainer, Drum
10	64751-22D00	Spacer, Lh
11	09159-20005	Nut
12	64731-12C00	Spacer, Bearing
13	09262-20042	Bearing
14	09285-28001	Oil Seal
15	08113-62057	Bearing
16	09285-34004	Oil Seal
17	64511-22D11	Sprocket, Rear (nt:43)
18	09120-08010	Bolt (8x14)
19	08319-31087	Nut
20	61411-22D01	Adjuster, Chain
21	61415-22D00	Nut, Chain Adjuster
22	08331-31136	Circlip
23	65110-22D01	Tire, Rear (150/60 R17 66h) (bridgestone)
24	43130-24A00	Valve Assy, Wheel Rim
24	43130-24A11	Valve Assy, Wheel Rim
25	55411-00A00	Balancer, Wheel (10g)
25	55412-00A01	Balancer, Wheel (20g)
25	55413-00A01	Balancer, Wheel (30g)





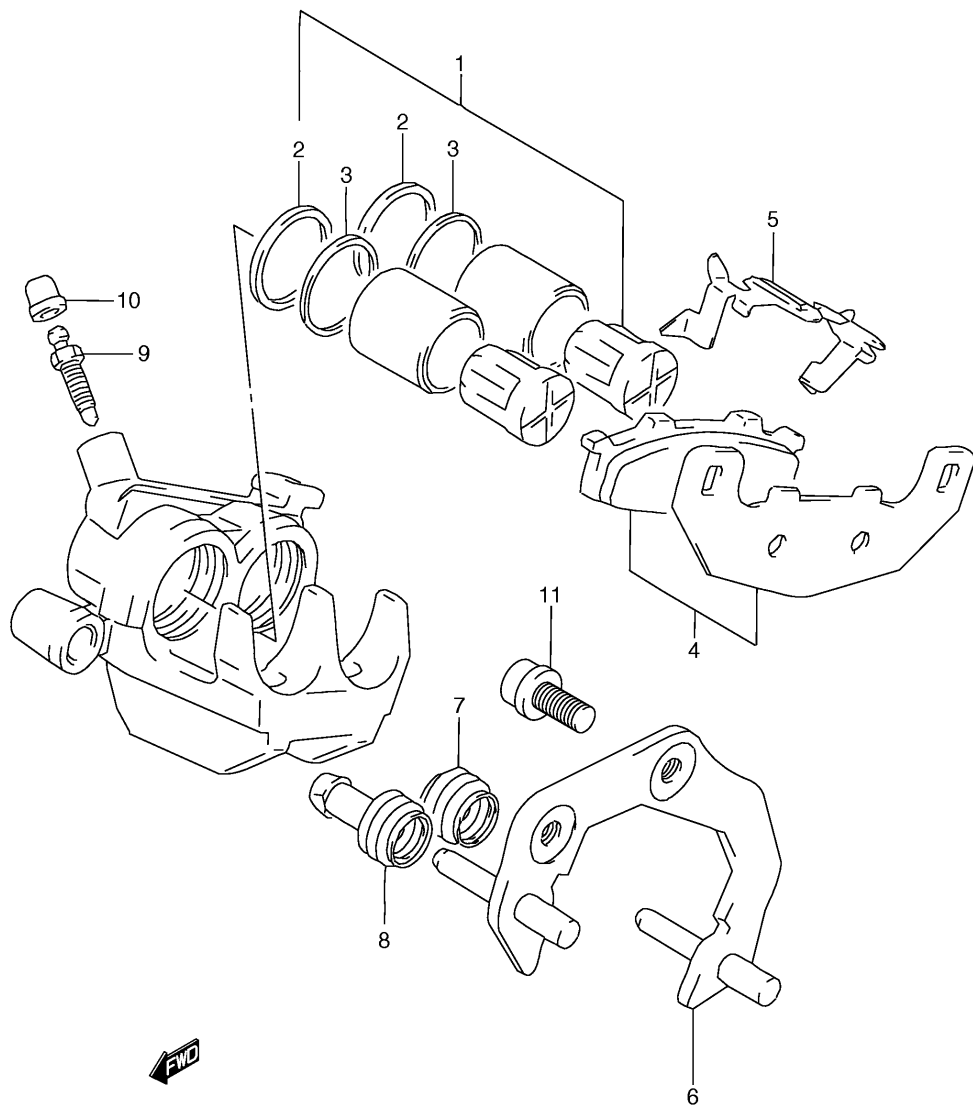


N° Réf.	N° Pièce	Désignation
	69100-22D00	Caliper Assy, Rear
	69100-22D01	Caliper Assy, Rear
1	69100-22810	. . Piston Set
2	69107-22D00	.. .. Seal, Piston
3	69108-22D00	.. .. Seal, Wiper
4	69100-22820	. . Pad Set
5	69115-22D00	. . Spring, Pad
6	69150-22D00	. . Caliper
7	59312-36500	. . Boot
8	59313-36500	. . Insulator
9	59121-18410	. . Bleeder
10	55156-66310	. . Cap
11	07120-08208	Bolt

N° Réf.	N° Pièce	Désignation
---------	----------	-------------

1	69600-22D00	Cylinder Assy, Rear Master
2	69600-04820	. Piston/cup Set
3	69691-00A00	.. Boot
4	69692-27A30	. Yoke
5	69670-22D00	. Rod, Push
6	69693-05A00	. Nut
7	69672-00B20	. Connector
8	69686-34200	. O Ring
9	69674-00B20	. Circlip
10	59673-17C00	. Cover, Dust
11	09139-06065	Bolt (6x30)
12	69641-22D01	Cover, Rear Master Cylinder
13	69740-24A00	Tank Assy, Rear Reservoir
14	69669-24A01	. Cap
15	69689-04A00	. Screw
16	59667-04700	. Diaphragm
17	01517-06128	Bolt
18	69731-22D00	Hose, Reservoir Tank
19	09400-16302	Clamp
20	09400-14301	Clamp
21	69480-22D01	Hose, Rear Brake
22	09360-10033	Union Bolt (10x1.25x24)
23	09161-10009	Washer (10x15x1.5)
24	69243-22D10	Guide, Brake Hose No.2
25	01174-06165	Bolt
26	69243-22D21	Guide, Brake Hose No.1
27	09200-06037	Pin
28	08322-21067	Washer
29	04111-20158	Cotter Pin

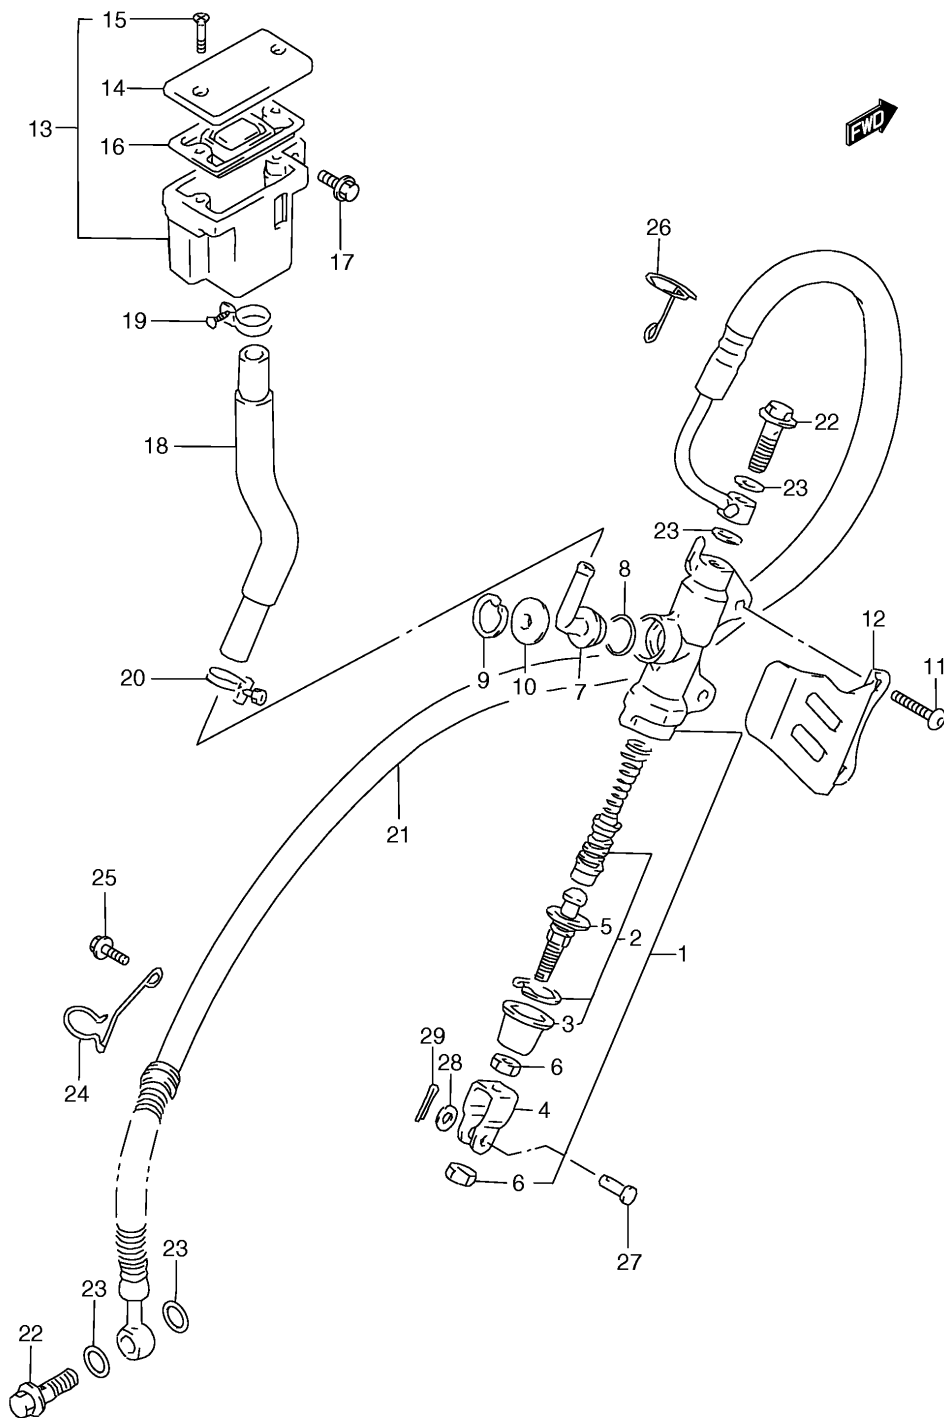

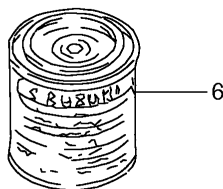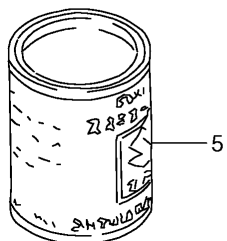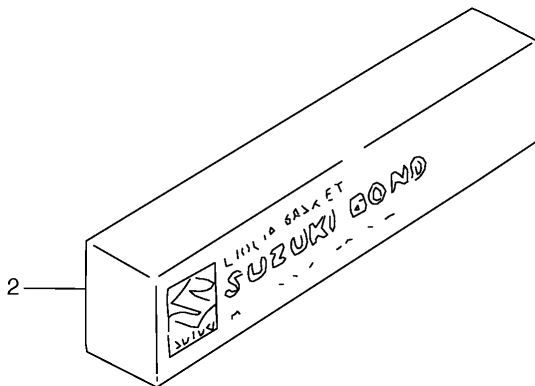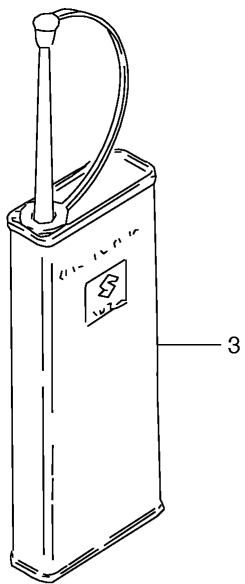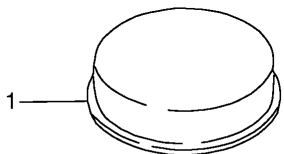

N° Réf.	N° Pièce	Désignation
1	99000-25110	Grease, Brake Pad (pbc)
2	99000-31030	Suzuki Bond, No.4
3	99000-32040	Cement, Thread Lock
4	99000-32030	Thread Lock, Super (1303b)
4	99000-32020	Thread Lock, Super (1333b)
4	99000-32050	Thread Lock, Super (1342)
4	99000-32110	Thread Lock, Super (1322)
4	99000-32120	Thread Lock, Super (1324)
5	99000-25030	Grease, Super
6	99000-10209-0JW	Paint (pearl Still White)
6	99000-10209-0NE	Paint (parsec Blue)
6	99000-10209-33J	Paint (candy Novelty Black)
6	99000-10109-019	Paint (black)
6	99000-10109-30H	Paint (special White)
6	99000-10109-0MA	Paint (still White)
6	99000-10209-1LF	Paint (pearl Suzuki Deep Blue)
6	99000-10209-13Z	Paint (space Black)
6	99000-10209-1LE	Paint (pearl Suzuki Medium Blue)
6	99000-10209-17U	Paint (urban Gray Metallic)
6	99000-10209-13L	Paint (bright Silver Metallic)